


4G DIGITAL GSM

4000 Series Vandal Resistant Digital GSM Audio Intercom
with Proximity

4812/4G and 4812R/4G

VR4812/4G and VR4812R/4G

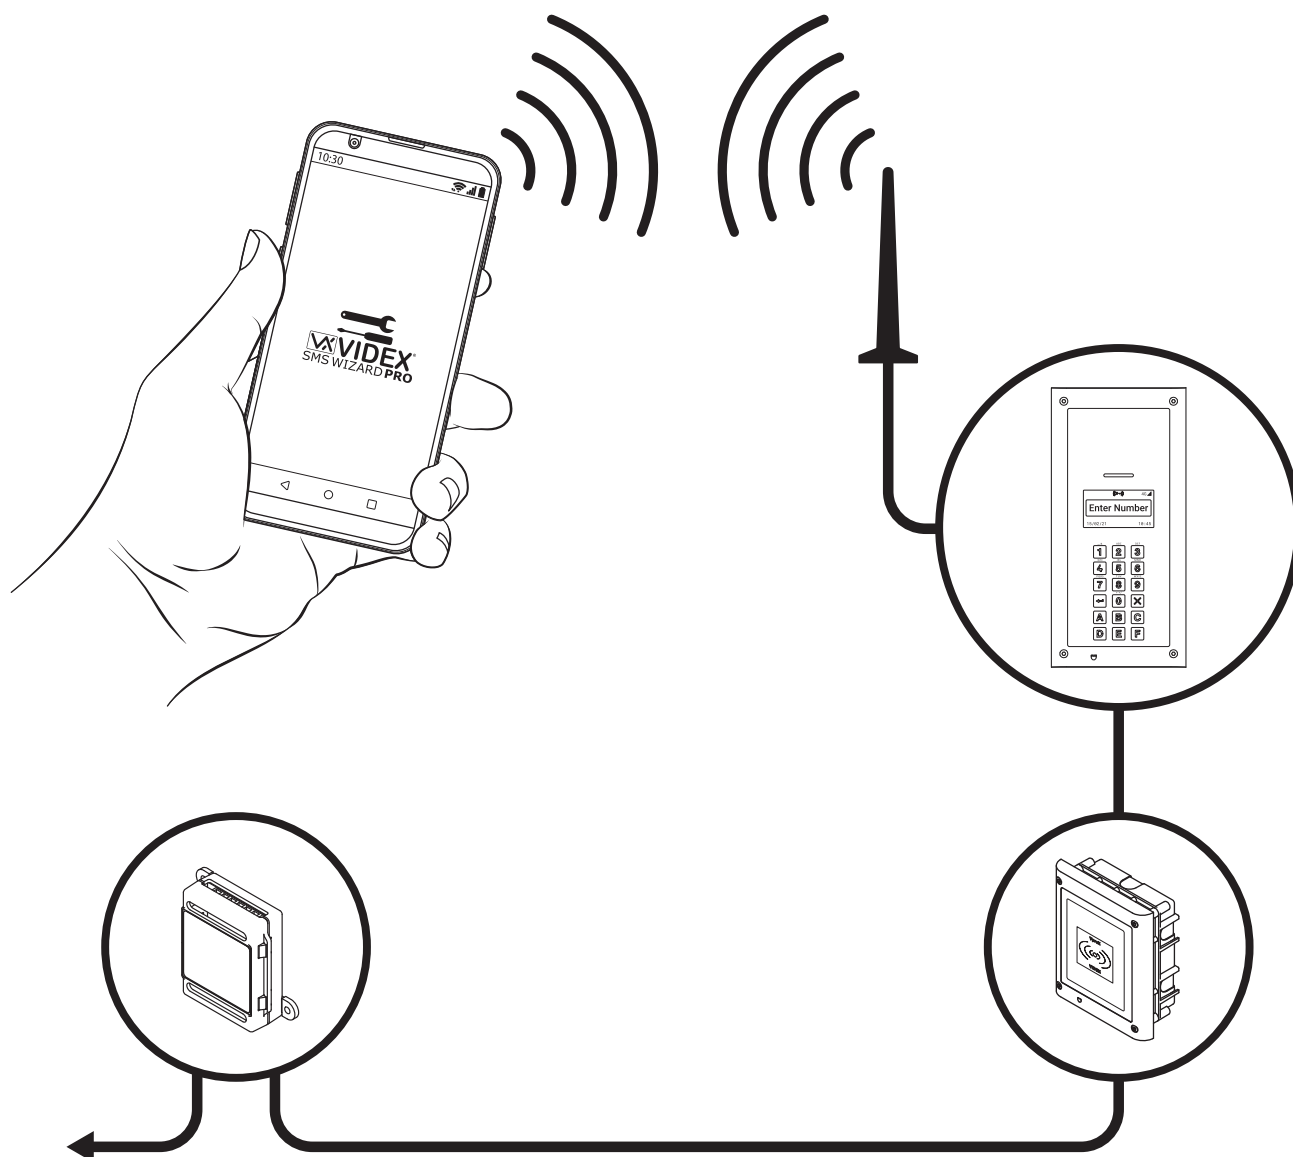

Technical Manual



Declaration of Conformity

EU RoHS DECLARATION OF CONFORMITY

4G version

SIMCom certifies that the LTE/HSPA/GSM/GNSS module (model no. SIM7600G-H, SIM7600G-H miniPCIE) is in conformity with the essential requirements of **RE Directive 2014/53/EU** of the European Parliament and the Council of 16th April 2014 on the harmonization of the laws of the Member States relating to the making available on the market of radio equipment and repealing **Directive 1999/5/EC**.

RE Directive 2014/53/EU :

Applied / Complied Harmonized Standards		Complied
Article 3(1)(a) ■ Safety	EN 62368-1:2014 + A11:2017	Y
Article 3(1)(a) ■ Health	EN 62311:2008	Y
Article 3(1)(b) ■ EMC	EN 301 489-1 V2.2.3 EN 301 489-19 V2.1.1, EN 301 489-52 V1.1.0 EN 55032:2015, EN55035:2017	Y
Article 3(2) ■ Radio	EN 301 511 V12.5.1, EN 303 413 V1.1.1 EN 301 908-1 V11.1.1, EN 301 908-2 V11.1.2 EN 301 908-1 V11.1.2*, EN 301 908-13 V11.1.2	Y
*Note: This is a non-harmonized radio standard accepted by the RED (Radio Equipment Directive)		



WARNING!

To comply with FCC RF exposure requirements, a separation distance of 20cm (7.87") or more must be maintained between the antenna of this product and all persons.

Separate FCC approval for this product is not required as it will be classed as a fixed installation.

THIS PRODUCT IS NOT DESIGNED TO BE USED AS AN EMERGENCY CALL POINT.

DECLARATION OF RESPONSIBILITY

This technical manual has been written and revised carefully. The guidance and the descriptions which are included in it are in reference to VIDEX parts and are correct at the time of print. However, subsequent VIDEX parts and technical manuals, can be subject to changes without prior notice. **VIDEX Electronics S.P.A.** and **VIDEX Security Ltd (UK)**. cannot be held responsible for damages caused directly or indirectly by errors, omissions or discrepancies between the VIDEX parts and the technical manual.

MANUFACTURER



made in
ITALY

VIDEX ELECTRONICS S.P.A.

Via del Lavoro, 1 - 63846 Monte Gilberto (FM) Italy

Tel: (+39) 0734-631699 - Fax: (+39) 0734-632475

www.videx.it - info@videx.it

CUSTOMER SUPPORT

All Countries:

VIDEX ELECTRONICS S.P.A.

www.videx.it - technical@videx.it

Tel: +39 0734-631699 - Fax: +39 0734-632475

UK Customers:

VIDEX SECURITY LTD.

www.videxuk.com - tech@videxuk.com

Tech Line: 0191 224 3174 - Fax: 0191 224 1559



The product is CE marked demonstrating its conformity and is for distribution within all member states of the EU with no restrictions. This product follows the provisions of the European Directives 2014/30/EU (EMC); 2014/53/EU (LVD); 2011/65/EU (RoHS): CE marking 93/68/EEC.



The product is UKCA marked demonstrating its conformity and is for distribution within the UK. This product follows the provisions of the following UK legislation: Electromagnetic Compatibility Regulations 2016; Electrical Equipment (Safety) Regulations 2016; Radio Equipment Regulations 2017 and The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 (RoHS).

Contents

Introduction	4
System Components and Available Versions	6
Digital 4G GSM Technical Information	10
Wiring Diagrams	12
Auxiliary Input & Output	14
USB & RS485 Connection to a PC	16
Connection to a Reader, Keypad or Relay	17
General Directions for Installation	19
Fitting the SIM & Connecting Power	22
Reset Procedure	23
4000 Series Back Box Installation	24
Programming via Alpha-Numeric Keypad	28
Programming Flowcharts	29
Programming Screens	38
Programming via Text Message	47
The GSM Mobile Apps	68
System Operation	69
User Commands	72
Additional User Information	73
User Management	75
Troubleshooting	76
General Information	78

Introduction

MANUAL INTRODUCTION

The information in this manual is intended as an installation and commissioning guide for the 4G digital GSM audio intercom system. **This manual should be read carefully before the installation commences.** Any damage caused to the equipment due to faulty installation where the information in this manual has not been followed is not the responsibility of **VIDEX Electronics S.P.A.** and **VIDEX Security Ltd (UK).**

It is recommended that the digital GSM intercom is installed by a competent electrician, security or communications engineer.

For UK customers Videx run free training courses for engineers who are unfamiliar or who have not installed this system before. Technical help is also available for UK customers on tel: 0191 224 3174 during office hours (8:30am - 5:00pm MON to FRI) or via e-mail: tech@videxuk.com and for all overseas customers on tel: +39 0734 631669 or via e-mail: technical@videx.it.

A copy of this Technical Manual can also be downloaded from the Videx websites: For UK customers www.videxuk.com and for overseas customers www.videx.it.

SYSTEM INTRODUCTION

The 4G digital GSM intercom (**Art.4812/4G** or **Art.4812R/4G**) is designed to work on the same technology as mobile phones, specifically a 4G network, however it is compatible with both 2G and 3G networks. As the 4G digital GSM is a global module it can be used around the world. It enables a call to be made from an entry point (door, gate etc), to any telephone number (mobile or land line). Up to 750 users can be programmed into the door panel, each able to call up to four telephone numbers (if the first is busy or not answered, the call can be diverted to up to three different numbers). 1000 user option also available, see below*. Features of the system include:

- Vandal resistant brushed stainless steel (2.5mm thick) front panel.
- Blue back-lit alpha-numeric keypad (for system operation and programming).
- Blue back-lit 128x64 pixel graphical LCD display and speech annunciation.
- A dry contact relay (CO, NO and NC), a switched 0V auxiliary input (AI), an open collector auxiliary output (AO) and a switched 0V push to exit input (push-to-make) and trade input.
- Proximity fobs/cards for up to 2000 users.
- Dial to Open (DTO) facility, this feature enables the stored DTO numbers and 32 temporary DTO numbers to dial the GSM intercom, the intercom will not answer these calls, but will activate the door/gate relay without being charged for the call. 3000 DTO numbers for the 750 user or 2000 DTO numbers for the 1000 user.
- 750 users (each with 4 numbers, 1 primary and 3 diverts) or *1000 users (each with 2 numbers, 1 primary and 1 divert).
- 750 programmable door codes (for 750 user) or 1000 programmable door codes (for 1000 user) - 1 code per user.
- 10 timebands (9 of which are programmable) and also up to 10 programmable free access timebands.
- Automatic time correction features and daylight saving time adjustment.
- Micro USB connection for ease of programming using the **GSMSK** PC software (version 4.1.0.36 or later).
- RS485 bus for connecting additional **Art.4903** keypads and/or **Art.4850R** proximity readers (up to a maximum of 8 devices), also for connecting **Art.2813** RS485 remote relays (up to a maximum of 64 remote relay units). The RS485 bus can also be used for ease of programming using the **GSMSK** PC software.
- Includes a facility to remotely program the digital GSM 'over the air' using the **GSMSK** PC software without the need to actually connect a PC or laptop directly to the intercom via the USB or RS485 connections.
- Event logging system that can record up to 8000 events which can be downloaded via the **GSMSK** PC software.
- Remote event logging (unlimited events) which can be monitored in real time (also see **user management** on page 75).
- Integrated bootloader function for updating digital GSM panel's firmware via the **GSMSK** PC software.

Programming of the telephone numbers (primary, diverts and DTO numbers) and other features including proximity fobs/cards, access codes and timebands etc. can be carried out via the alpha-numeric keypad (refer to notes **programming via alpha-numeric keypad, programming flowcharts and programming screens**) or by text messages (refer to notes **programming via text message**).

The digital GSM can also be programmed using the **GSMSK** PC software (refer to the manual **GSMSK_66251720-EN_V2-2** or later) by direct USB or RS485 connection to a PC or remotely via the 'over the air' feature (the PC software can still be used to program the digital GSM, but is not directly connected to it via the USB or RS485 connection, further details can be found on pages 63 - 65).

 
Alternatively a limited number of programming features can be carried out using the **Videx SMS Wizard** (for administrators) or for more in depth programming using the **Videx SMS Wizard PRO** (for installers), refer to notes **the GSM mobile Apps** on page 68.

SIM CARD SELECTION



IMPORTANT: A SIM IS REQUIRED FOR THIS PRODUCT BUT NOT SUPPLIED BY VIDEX.

THE 4G GSM INTERCOM CAN ONLY ACCEPT A NANO SIZE SIM CARD, BOTH A STANDARD SIZE SIM AND MICRO SIM ARE NOT SUITABLE.



Introduction

It is recommended to choose the SIM card which has the best coverage for the area in which the intercom panel will be installed. Both contract and 'Pay as you go' SIM cards can be used, however if using a 'Pay as you go' we would recommend setting up an automatic top up to avoid running short on credit and losing the use of the intercom panel. Alternatively if you already have a contract mobile phone it should be possible to get a second SIM card and telephone number on the existing account. For more information regarding this contact the SIM card provider or visit their website, **as this is a service is not provided by Videx.**

NETWORK PROVIDER SELECTION

It is imperative that for the reliable operation of the system that the best network provider for the area is selected. Problems such as network disconnection can occur if the provider has signal or interference problems for that area. We would recommend using a GSM signal strength meter to survey the intended antenna location. Contact Videx for more information on where to purchase a tester.


For UK customers, as an initial check we also recommend visiting the ofcom website www.ofcom.org.uk and follow the onsite links to their online mobile coverage tool (*ofcom mobile and broadband checker app*). This tool will advise on the best coverage for the main network providers and other general queries that you may have about the service provider. For all overseas customers we suggest consulting the website of the network provider that will be used to check the coverage in your area.

The antenna should always be mounted vertically at the highest point possible. Metal structures and sources of interference such as power cables, control panels etc. can affect signals and so the antenna should be mounted away from these.

When registering a new SIM you may be asked for the IMEI number. This is the unique 15 digit serial number of the 4G digital GSM. This number is located internally on the main hardware chip inside the GSM module. To obtain the IMEI number from the GSM module refer to the programming notes **obtain the GSM's IMEI number** on page 63.

PRECAUTIONARY ADVICE

- When mounting the GSM antenna, choose a location which is away from human interaction and away from the intercom panel. Route the GSM antenna cable from the intercom panel so that it is separate from the power supply cables and microphone wire.
- Always ensure the power is switched **OFF** to the intercom panel before inserting or removing the SIM card.
- New SIM cards will need registering with the network service provider before they can be used. Full details of how this is done can normally be found in the SIM card pack. It will normally require that the SIM card is inserted into a mobile phone, a number dialled and instructions followed. While the SIM is in the mobile phone it would be a good time to disable any PIN codes, call divers, ring back and disable features such as voicemail and text alerts. Details of how to do this can be found on the SIM card provider's website or by calling their customer services. Recommended SIM card providers are: **Vodafone, Three, O₂ or EE.**
- To be able to receive text messages from the intercom panel, the SIM card will require an SMS service centre number. This is normally pre-installed on new SIM cards but if you are having trouble receiving SMS messages you will need to confirm this by inserting the SIM card into a mobile phone and using the phones menu options to check it. If a number is not programmed then it should be programmed while in the phone (the number can be obtained from the network service provider).
- Voicemail and text alerts must be switched **OFF** on the SIM card when using the dial in to release the door/gate feature. For **Vodafone** and **O₂** this can be done while the SIM card is in the intercom panel. For other network providers the SIM card must be removed from the intercom panel, inserted into a mobile phone and the mobile phone menu instructions followed. This procedure may vary between network providers of different countries, therefore we suggest contacting your provider for more information regarding this.
- When storing the GSM intercom panel's telephone number in your own mobile phone avoid using an obvious name such as 'Front Door', or 'My Gate' as this would make it easy to decipher if your phone was lost or stolen.
- The PIN request feature must be disabled on the SIM card before using it in the GSM intercom panel. It is likely on a new SIM card that it will not be enabled but if it is, it will prevent the system from working at all.
- This product may not be suitable for installation in hospitals, health care facilities or in the presence of flammable gases or liquids. Seek advice and authorisation before installing this product in these locations. **This product is not designed to be used as an emergency call point.**

 **IMPORTANT: ALL NETWORK PROVIDER AND SERVICES CONFIGURATION CODES MENTIONED IN THIS MANUAL ARE SPECIFIC FOR THE UK ONLY. FOR OVERSEAS CUSTOMERS PLEASE CONTACT THE NETWORK PROVIDER OF YOUR COUNTRY FOR THE CORRESPONDING CODES, HOWEVER VIDEX OFFERS NO GUARANTEE THAT ANY ADDITIONAL CODES WILL WORK.**

IMPORTANT NOTE ABOUT THE SIM

When selecting the SIM with the chosen network provider it is recommended that it is setup with a suitable call allowance and text messages (most UK network providers offer unlimited calls and texts) and also a sufficient data plan. You will need to contact the network provider directly or visit their website to set this up.

 **IMPORTANT NOTE: THE SERVICES MENTIONED ABOVE ARE NOT PROVIDED BY VIDEX ELECTRONICS S.P.A. OR VIDEX SECURITY LTD.**

System Components and Available Versions

DESCRIPTION


The 4000 series vandal resistant (front plate in brushed stainless steel with 2.5mm thickness) 4G digital GSM is designed to work on the same technology as mobile phones. The panel is compatible with the vandal resistant 4000 series modular range and is the size of two 4000 series modules. It enables a call to be made from an entry point (door, gate etc), to any telephone number (mobile or land line). Up to 750 users can be programmed into the door panel, each able to call up to four telephone numbers (if the primary number is busy or not answered, the call can be diverted through to up to three different divert numbers).


 

 
Additionally, each user can have a unique access code up to 6 digits, an apartment number up to 6 digits, their numbers added to the 'DTO' dial to open list (to allow them to dial into the panel and release the door/gate), a timeband facility to restrict when an apartment can receive calls (up to 10 timebands are available 9 of which can be programmed). On the scroll panel version a user name option is available with up to 16 characters.

Also, integrated into the panel is a proximity reader enabling up to 2000 user fobs/cards to be stored and used individually or in combination with the access code. In addition the panel includes a 128x64 pixel graphical LCD display with blue back light that provides both text and graphical messages guiding a user through the panel programming and operation. The LCD graphical display can also be used to display a company logo or name which can switch between the panel's standard (or customised) welcome message and the logo.

AVAILABLE VERSIONS

Two panels are available in the vandal resistant 4000 series range, the **Art.4812/4G (Fig.1)** and the **Art.4812R/4G (Fig.2)**, and two panels are available in the vandal resistant digital series range, the **Art.VR4812/4G (Fig.3)** and the **Art.VR4812R/4G (Fig.4)**, each with an integrated programmable keypad.

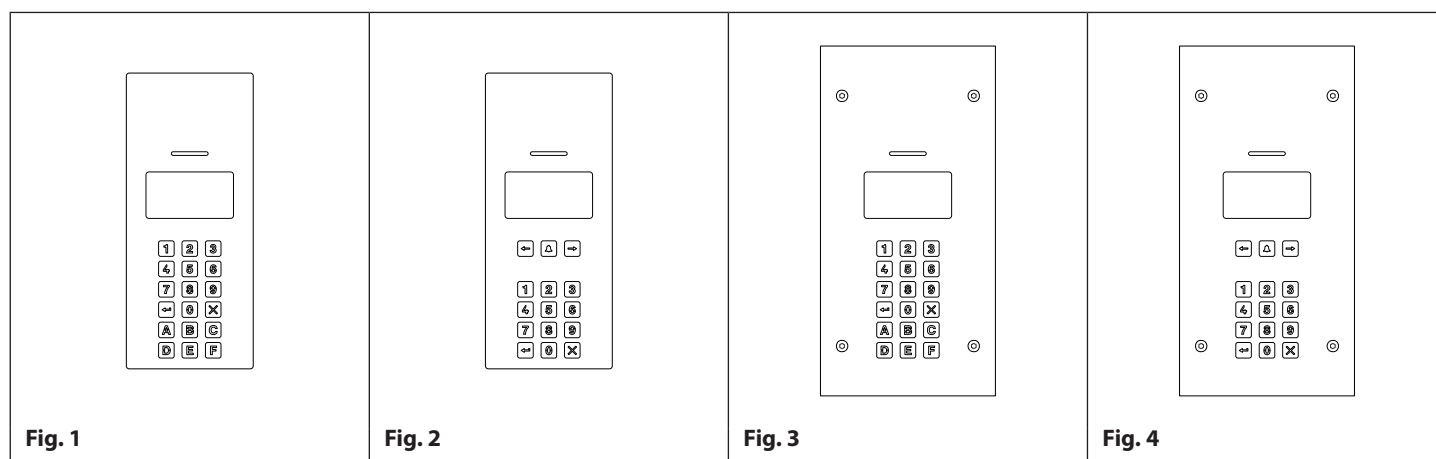

The **Art.4812/4G** and **Art.VR4812/4G** has 18 back lit buttons, 6 of which are alpha buttons (A - F), 10 of which are numeric buttons (0 - 9), plus an "ENTER"  and a "CLEAR"  button. The **Art.4812R/4G** and **Art.VR4812R/4G** has 15 back lit buttons, 10 of which are numeric buttons (0 - 9), plus an "ENTER" and "CLEAR" button with a "CALL"  and two "SEARCH" buttons .

To compliment the visual messages provided by the display, the panel has a voice annunciation facility to supply audio messages concerning the system operation.

The onboard programming menu and setup menu are protected by two access codes with different login levels:

The master code: this code grants full access to all the programming functions (default '1111'):

1. **Apartment menu** - allows the programming of the apartment details, e.g. apartment name/number, telephone no's etc.
2. **Proximity menu** - allows the programming of proximity fobs/cards.
3. **General settings menu** - allows the general setup of the 4G digital GSM, e.g. panel's volume controls, enable proximity etc.
4. **Code settings menu** - allows the programming of the master code, admin code and trade code.
5. **Time settings menu** - allows the setup and programming of the 4G digital GSM's time settings, e.g. call time, divert time, relay time and timebands etc.

The admin code: this code is limited to only specific programming functions (default '0000'):

1. **Apartment menu** - allows the programming of the apartment details, e.g. apartment name/numbers, telephone no's etc.
2. **Proximity menu** - allows the programming of proximity fobs/cards.

The panel's programming can be carried out via the alpha-numeric keypad (refer to notes **programming via alpha-numeric keypad**, **programming flowcharts** and **programming screens** on the following pages) or by text messages (refer to notes **programming via text message** on the following pages).

System Components and Available Versions

The panel can also be programmed using the **GSMSK** PC software (refer to the manual **GSMSK_66251720-EN_V2-2** or later) by direct USB or RS485 connection to a PC or remotely via the 'over the air' feature (the PC software can still be used to program the digital GSM, but is not directly connected to it via the USB or RS485 connection, further details can be found on pages 63 - 65).


Alternatively a limited number of programming features can be carried out using the **Videx SMS Wizard** (for administrators) or for more in depth programming using the **Videx SMS Wizard PRO** (for installers), refer to notes **the GSM mobile Apps** on page 68.

Apart from the requirement of a nano SIM card additional parts will be required for the successful installation of the 4G digital GSM. The following components will also be required:

4000 SERIES BACK BOXES AND MOUNTING FRAMES

The **Art.4812/4G** and **Art.4812R/4G** panel versions are designed to fit into a 2 module 4000 series front frame with surface or flush back box. The front support frame is available in a gun metal grey finish.

The 4000 series mounting frames and back boxes are shown in **Fig.5** (surface) and **Fig.6** (flush) and their dimensions shown in the following table including the part numbers and dimensions for optional surface and flush 4000 series rainshields.

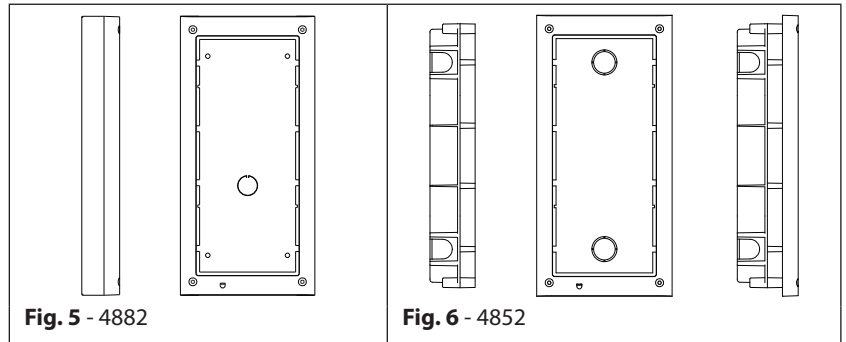

Surface Back Box Dimensions (inc. optional surface rainshield)			Flush Back Box Dimensions (inc. optional flush rainshield)		
Part No.	Module Size	(W x H x D) mm	Part No.	Module Size	(W x H x D) mm
Art.4882	2	back box: 135 x 280.2 x 43	Art.4852	2	front frame: 135 x 280.2 x 15.7 back box: 120 x 263.2 x 46
Art.4892		rainshield: 140 x 283 x 62	Art.4872		rainshield: 140 x 283 x 35


IMPORTANT NOTE: Both the **Art.VR4812/4G** and **Art.VR4812R/4G** panel versions are supplied with a **VRDBB140x280** flush bezel back box, dimensions (mm): bezel = 179 [W] x 319 [H], flush box = 143 [W] x 283 [H] x 80 [D].

12VDC 2A POWER SUPPLY (HDR-15-12)

The 4G digital GSM is designed to work with power supplies in the range of 12Vdc and should be capable of supplying a constant current of no less than 1A.

The **Art.HDR15-12**, **Fig.7**, is a DIN rail mount slim line power supply that has a mains voltage input of 230-240Vac, 50/60Hz and an adjustable 12Vdc output.

TERMINALS & ADJUSTMENT POTS	
L	Mains input 230-240Vac, 50/60Hz (live)
N	Mains input 230-240Vac, 50/60Hz (neutral)
+V	+12Vdc output
-V	0V (ground) output
Vo Adj.	Voltage adjustment POT (10.8V - 13.8Vdc range)

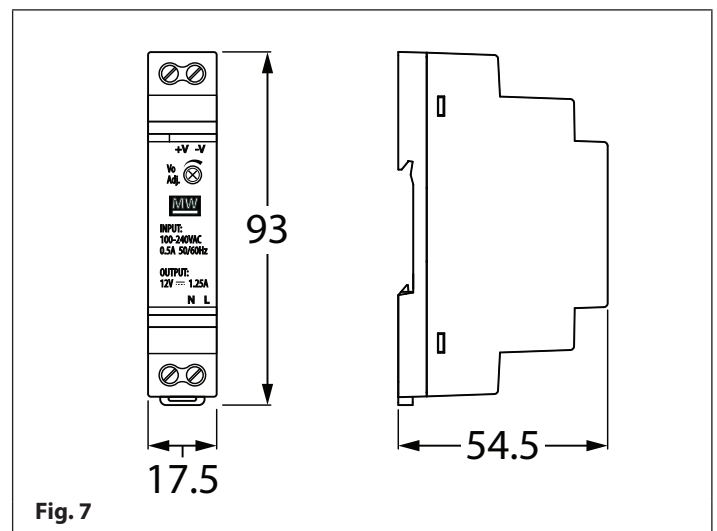

SPECIFICATION

Housing:	1.5 modules A Type DIN box
Mounting:	DIN rail only
Dimensions (mm):	17.5 (W) x 93 (L) x 54.5 (H)
Working temperature:	-10° to +50°C

ELECTRICAL DATA


Mains voltage:	230-240Vac, 50/60Hz
Output voltage:	12Vdc
Adjustable voltage range:	10.8Vdc - 13.8Vdc (max.)
Current rating:	1.25A
Power rating:	15W

System Components and Available Versions

ART. 434 GSM ANTENNA & ART. 434 BLOCK ANTENNA


The **Art.434 GSM antenna**, **Fig.8**, connects to the SMA female bulkhead connection on the rear of the 4G digital GSM panel. A GSM antenna with an SMA male connector should be used (see **Fig.8** inset). Also available to use is the **Art.434 block antenna**, **Fig.8** inset.

Art.434 antenna

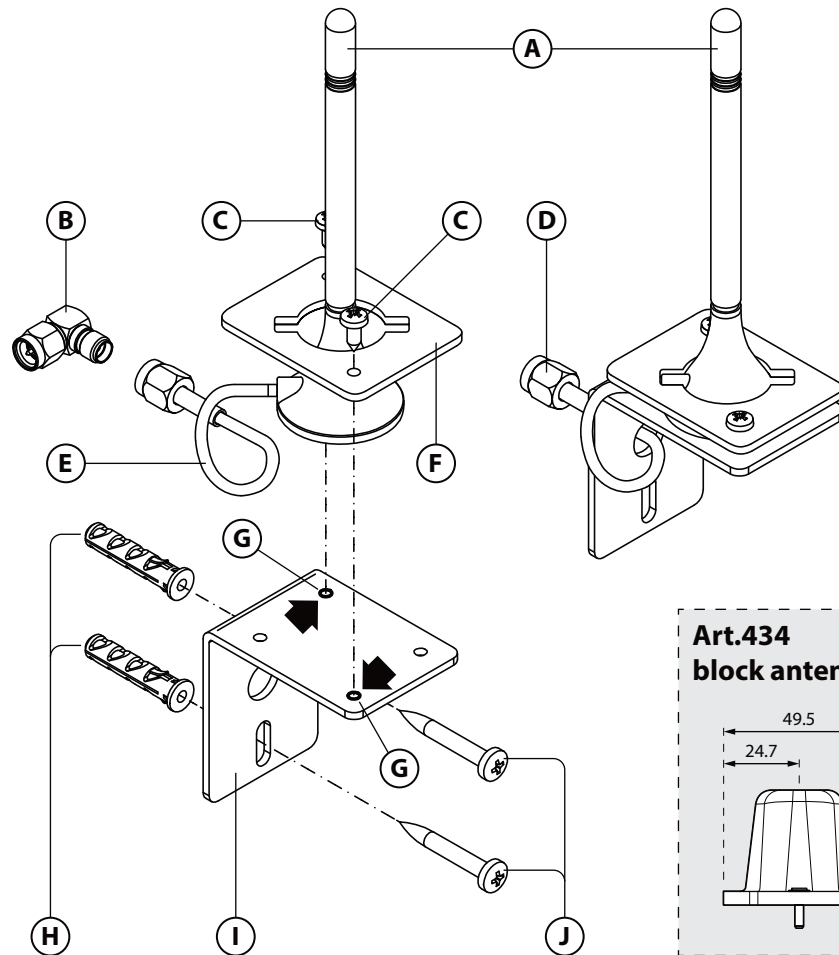

Use the SMA female bulkhead antenna connection on the rear of the 4G digital GSM module

 Antenna →



Art.434 block antenna

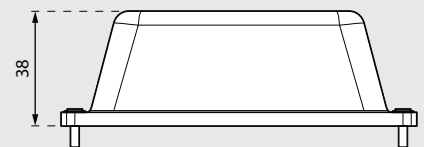
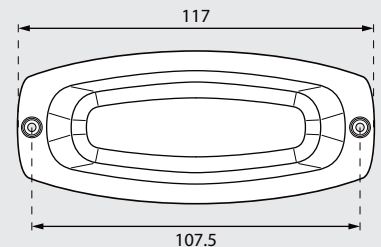
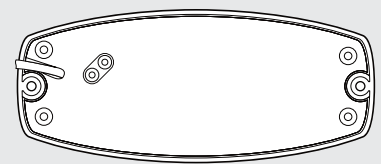
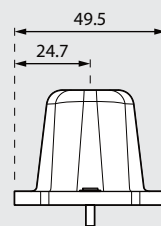


Fig. 8

ANTENNA PARTS

- | | |
|---|--|
| Ⓐ "B" type GSM antenna. | Ⓕ Antenna mounting clamp for L bracket. |
| Ⓑ Right angled SMA adapter. | Ⓖ Fixing support holes for "B" type antenna. |
| Ⓒ Self-threading screw (Ø2.9x6.5mm) for "B" type antenna. | Ⓗ Expansion type wall plugs (Ø6mm). |
| Ⓓ SMA male antenna connector. | Ⓘ Aluminium L bracket for wall mounting. |
| Ⓔ 3m antenna cable. | ⓵ Self-threading screw (Ø4x30mm). |

⚠ IMPORTANT NOTE: AN ANTENNA MUST ALWAYS BE FITTED FOR THE GSM MODULE TO WORK. ALWAYS ROUTE THE GSM ANTENNA CABLE AWAY FROM THE MICROPHONE WIRES AND THE POWER SUPPLY WIRES TO AVOID INTERFERENCE ON THE SPEECH CHANNELS.

IN INSTANCES WHERE THERE IS A TIGHT FITTING SPACE FOR THE SMA MALE CONNECTOR ON THE ANTENNA CABLE, THE RIGHT ANGLED SMA ADAPTER, **FIG.8 Ⓑ**, CAN BE USED TO HELP REROUTE THE CABLE DOWN THE BACK SIDE OF THE GSM MODULE.

System Components and Available Versions

ANTENNA CHARACTERISTICS		Art. 434 GSM ANTENNA	Art. 434 BLOCK ANTENNA
RF & ELECTRICAL SPECIFICATION	Network coverage:	2G, 3G and 4G networks	
	Working frequency:	GSM (900MHz), DCS (1800MHz)	AMPS (824-894MHz), GSM (900MHz), DCS (1800MHz), PCS(1900MHz), 3G (2100MHz), WiFi (2400MHz), 4G/LTE (791-862/2500-2690MHz)
	Gain:	3 ± 0.5dBi (avg.)	2 dBi (max.)
	Voltage Standing Wave Ratio (V.S.W.R.)	< 2.0	< 2.5:1
	Polarization:	Linear	
	Impedance:	50 Ohms	
DATA, MATERIALS & DIMENSIONS	Cable:	RG174 coax cable	
	Cable length:	3m	
	Connector:	SMA male	
	Materials:	Antenna hat: ABS Antenna body: ABS and PVC	Antenna Lid: ABS Antenna Base: metal
	Colour:	Black	
	Mounting:	external use, surface mount	internal or external use, surface mount
	Dimensions (mm):	120 (H) x 30 (base diameter)	38 (H) x 117 (L) x 49.5 (W)



IMPORTANT NOTE: ALTHOUGH ALL THE FEATURES AND GENERAL INSTALLATION INSTRUCTIONS MENTIONED IN THIS TECHNICAL MANUAL MAKE REFERENCE TO THE ART.4812/4G AND ART.4812R/4G DIGITAL GSM INTERCOMS THE SAME FEATURES AND INSTRUCTIONS CAN ALSO BE APPLIED WHEN INSTALLING THE VR4812/4G AND VR4812R/4G DIGITAL GSM INTERCOMS RESPECTIVELY.

Digital 4G GSM Technical Information

ART. 4812/4G & 4812R/4G DIGITAL GSM PANEL

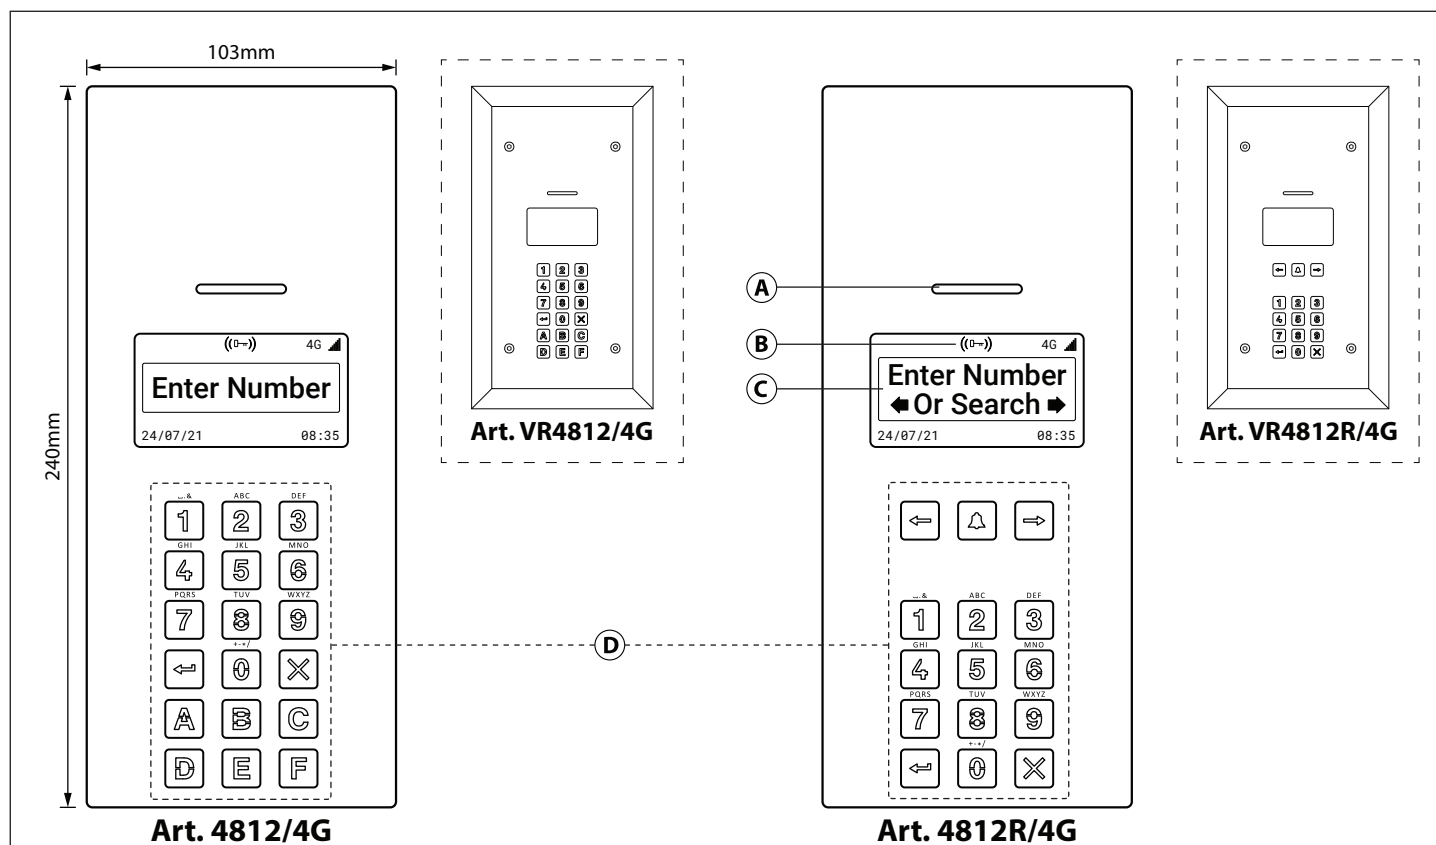


Fig. 9 - Front View

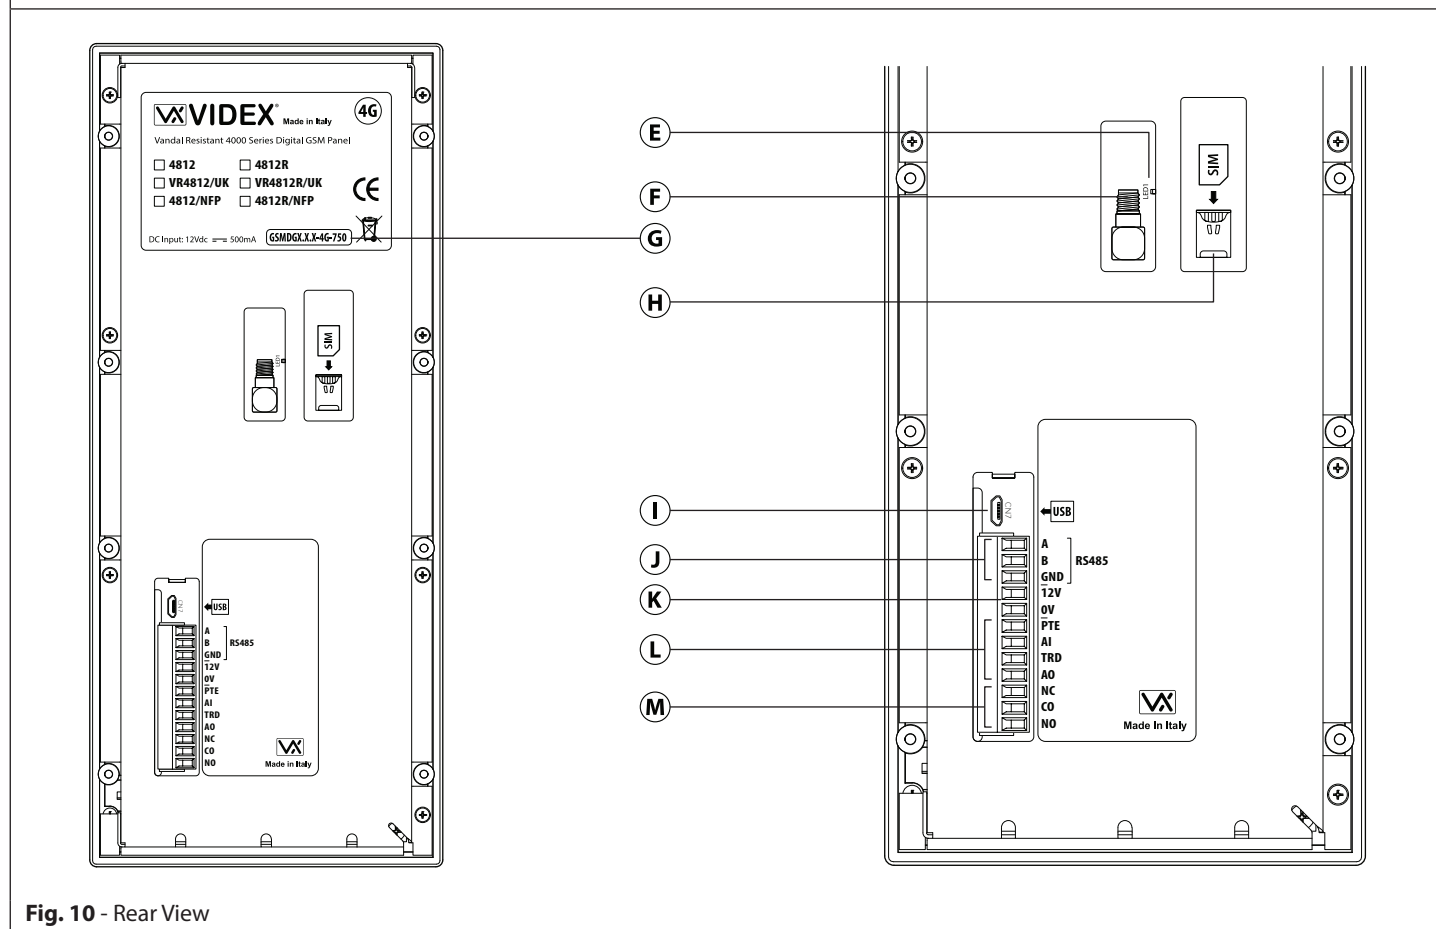


Fig. 10 - Rear View

Digital 4G GSM Technical Information

DESCRIPTION

There are two vandal resistant 4000 series digital 4G GSM panels available, see **Fig.9 - Art.4812/4G** with standard input keypad (1-9, ENTER, 0 and CLEAR) and alpha-numeric (A-F) buttons and also the **Art.4812R/4G** with standard input keypad (1-9, ENTER, 0 and CLEAR) and name search and scroll facility buttons. Also available are the vandal resistant versions with flush bezel back box - **Art. VR4812/4G** and **Art.VR4812R/4G**, see **Fig.9** inset. The rear of the digital 4G GSM panels, **Fig.10**, includes the antenna, 12Vdc power input, micro USB, RS485 bus and terminal connections (also refer to table below).

LEGEND

- | | |
|--|---|
| (A) Intercom speaker | (H) Nano SIM card holder |
| (B) Built-in proximity access reader | (I) Micro USB connection |
| (C) 128x64 pixel graphical display | (J) RS485 bus terminals |
| (D) Input keypad | (K) 12Vdc power input |
| (E) Power & network (2G, 3G or 4G) status indication LED | (L) Push to exit, auxiliary (AI and AO) and trade input terminals |
| (F) Main SMA antenna connection | (M) NC, CO and NO relay contacts |
| (G) Current firmware version (GSMDG X.X.X-4G-750) | |

TERMINAL CONNECTIONS

Terminal	Description	
A	RS485 A connection.	
B	RS485 B connection.	
GND	RS485 ground connection.	
12V	+12Vdc power (500mA max.).	
0V	0V ground power.	
PTE	Push to exit input (switched 0V).	
AI	Auxiliary input.	
TRD	Trade input.	
AO	Auxiliary output.	
NC	Normally closed relay connection.	Relay contacts: 3A@24Vdc 3A@120Vac
CO	Common relay connection.	
NO	Normally open relay connection.	

TECHNICAL SPECIFICATION

Working Voltage:	12Vdc (+/- 10%)
Current Consumption:	60mA (standby), 500mA (max.)
Number of Users:	750 user <u>or</u> 1000 user
Telephone Numbers (per apartment):	4 tel no. (1 primary, 3 diverts for 750 user) <u>or</u> 2 tel no. (1 primary, 1 divert for 1000 user)
Dial to Open Numbers (DTO):	3000 DTO (for 750 user) <u>or</u> 2000 DTO (for 1000 user) and up to 32 temporary DTO's
Proximity Access (fobs/cards):	up to 2000 (max.)
Door/Gate Access codes:	750 code (for 750 user) <u>or</u> 1000 codes (for 1000 user) - 1 code per user
Call Button (phone ID) Timebands:	10 (1 preset, 9 programmable)
Free access Timebands:	10 (programmable)
Programming Methods:	SMS messaging, GSMSK PC software including the 'over the air' feature or the GSM mobile apps - the Videx SMS Wizard (for administrators) or the Videx SMS Wizard PRO (for installers/engineers) or via onboard keypad
Push to Exit:	1 (switched 0V input, across terminals PTE/0V)
Auxiliary Input:	1 (switched 0V input, across terminals AI/0V)
Auxiliary Output:	1 (AO, open collector output, switched 0V, 150mA max.)
Trade Input:	1 (switched 0V input), for connecting Art.701T timeclock
Dry Contact Relay:	1 (CO, NO and NC, 3A @ 24Vdc, 3A @ 120Vac)
Event Log:	8000 stored events (unlimited via remote event logging facility)
USB Port:	micro USB
RS485 Bus Connection:	1 (A, B and GND), for connecting an Art.4850R expansion proximity reader, an Art.4903 keypad or Art.2813 remote relay modules
Panel Dimensions (mm):	103 (W) x 240 (L) x 32 (D)
Working Temperature:	-20 +60°C

Wiring Diagrams

LOCK RELEASE AND VOLT FREE CONNECTIONS

Fig.11 below shows connections for a fail secure and a fail safe lock release and also volt free contacts.

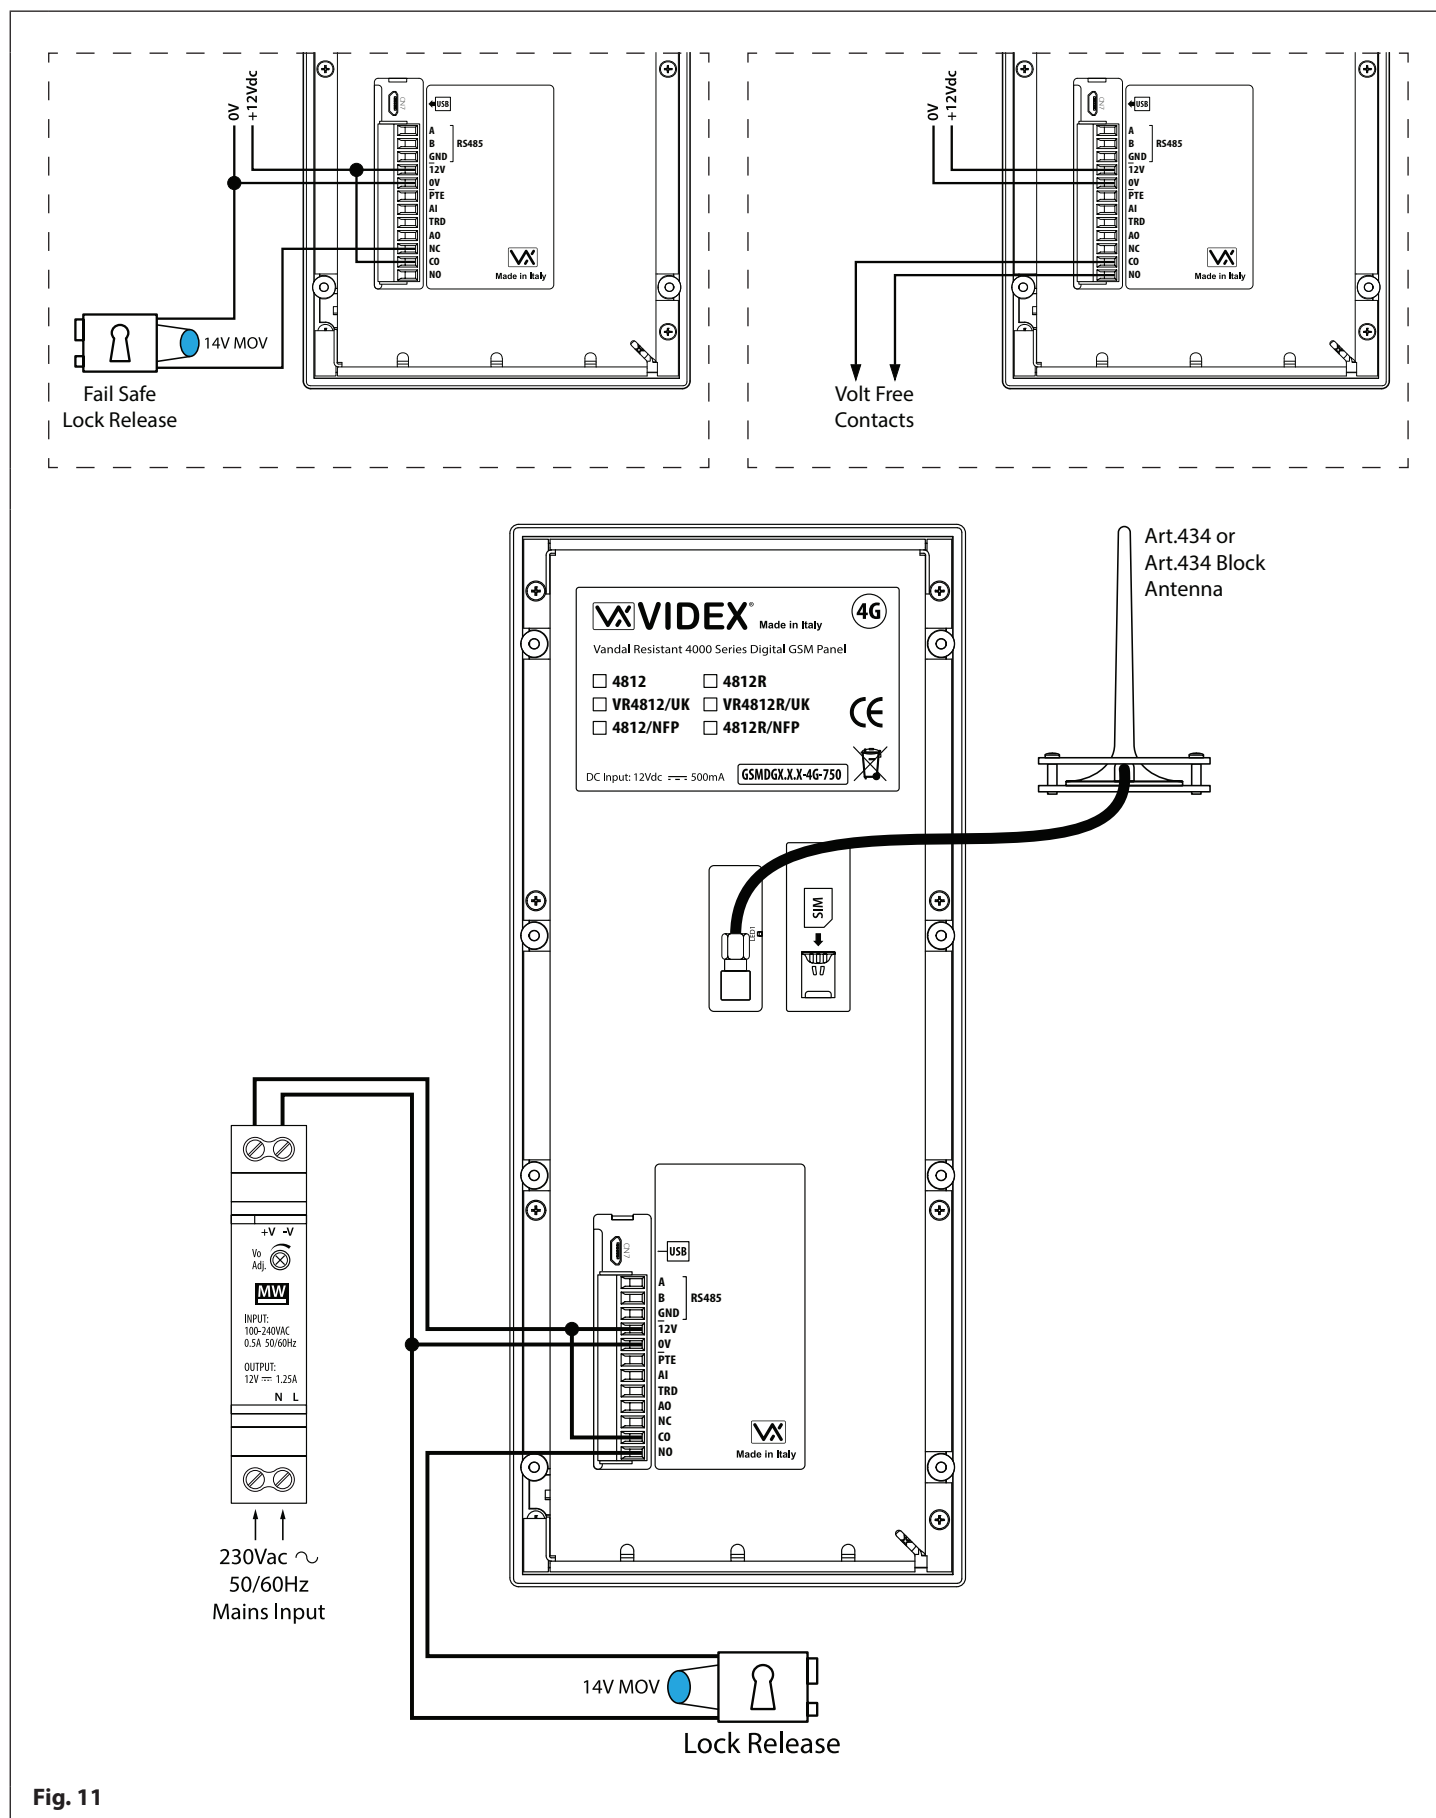


Fig. 11

Wiring Diagrams

TRADE INPUT AND PUSH TO EXIT INPUT CONNECTIONS

Fig.12 below shows connections for the trade input using an Art.701T timeclock (in timeclock mode) and Fig.13 shows connections for the push to exit input using a push-to-make (normally open going closed) switch/button.

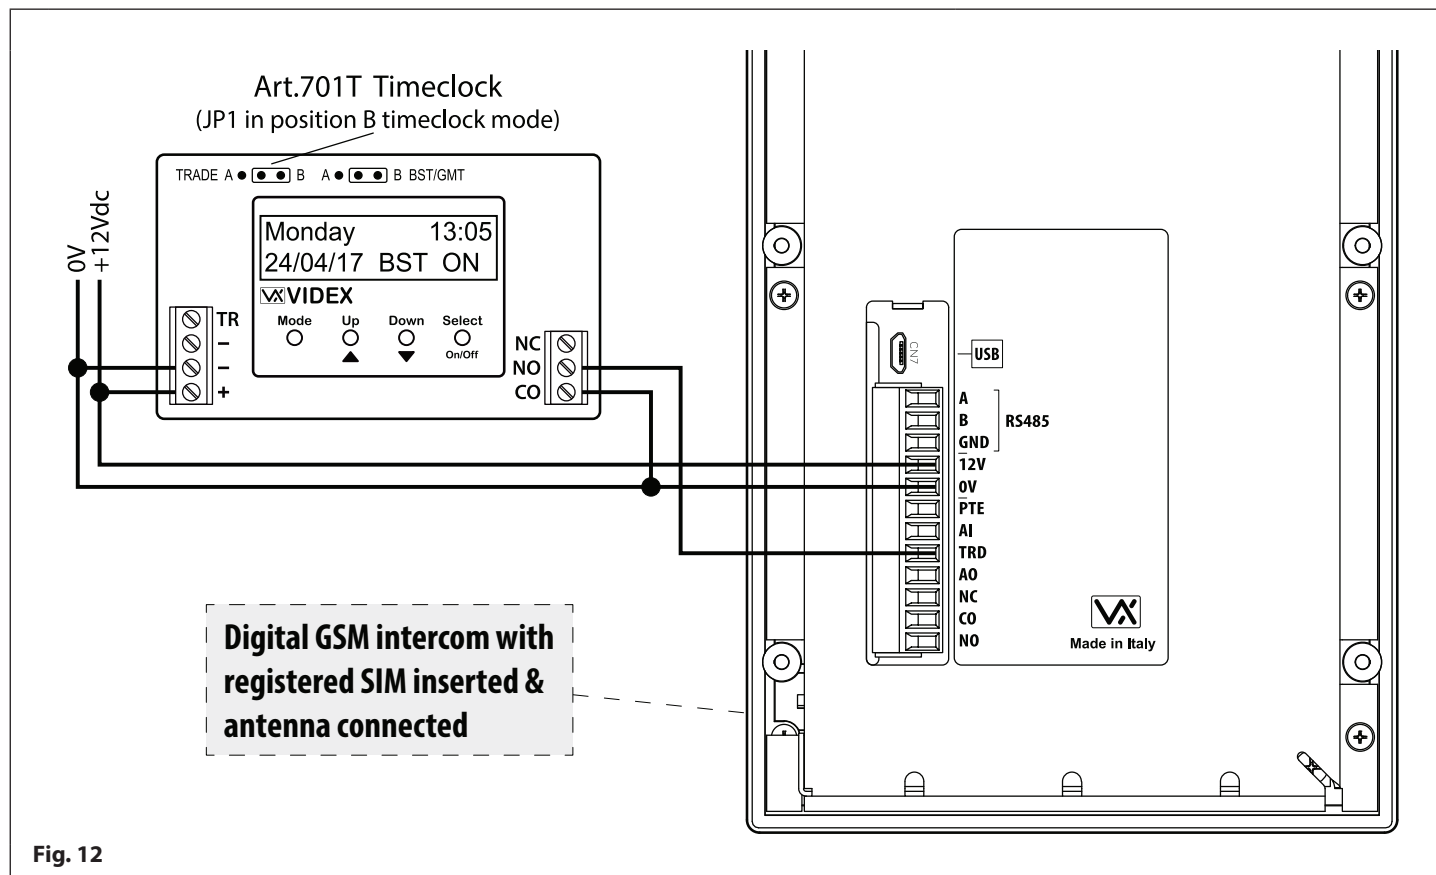


Fig. 12

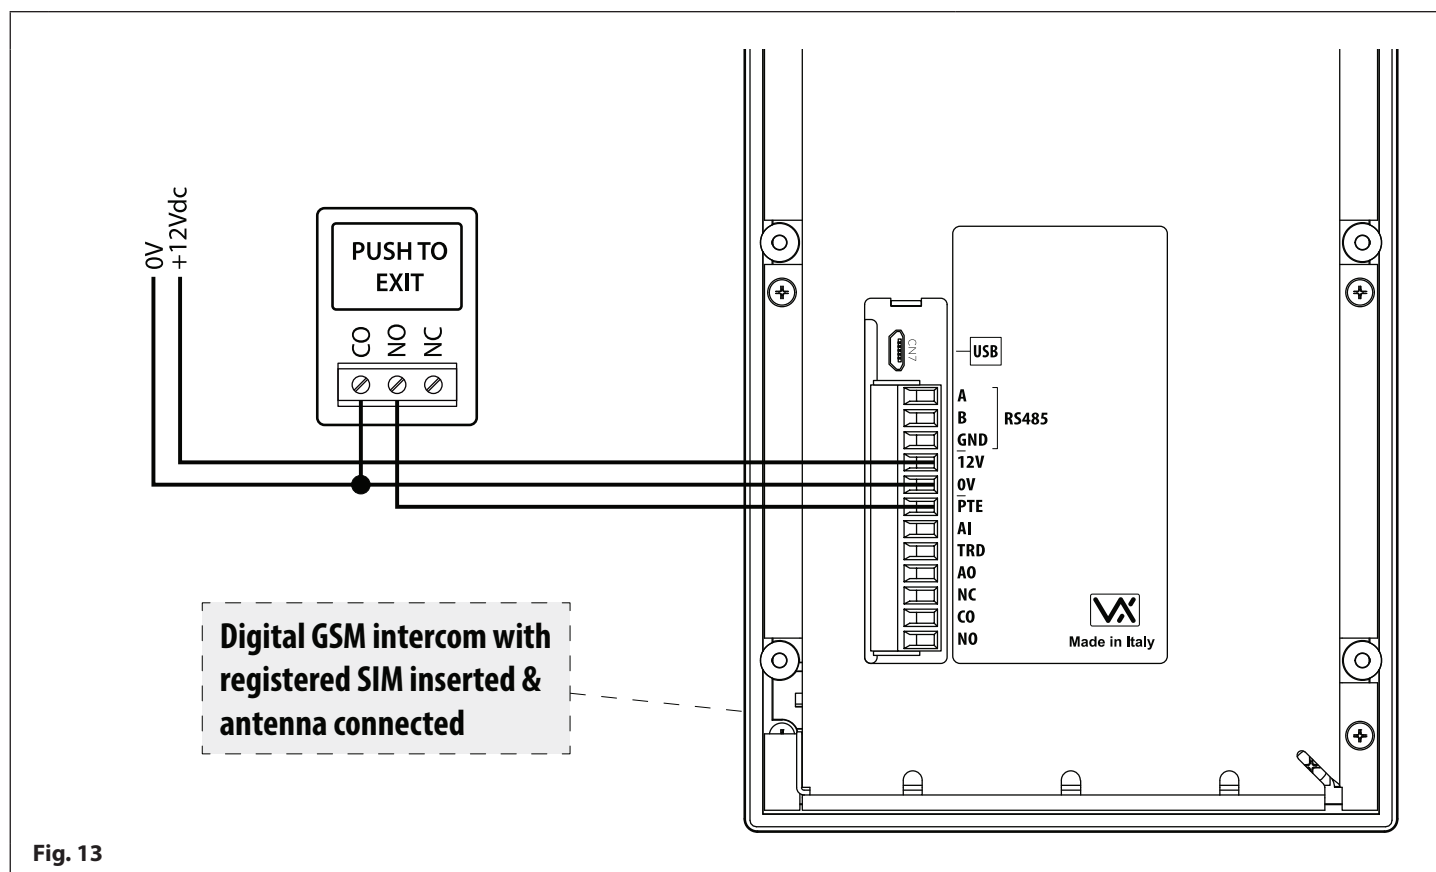


Fig. 13

Auxiliary Input & Output

AUXILIARY OUTPUT (AO) WHEN SET TO MODE 000 (ON DURING A CALL)

Fig.14 below shows the connection for auxiliary output AO when the AOM mode is set to 000. The auxiliary output AO will activate once a call to an apartment has been made and will stay activated for the duration of the call.

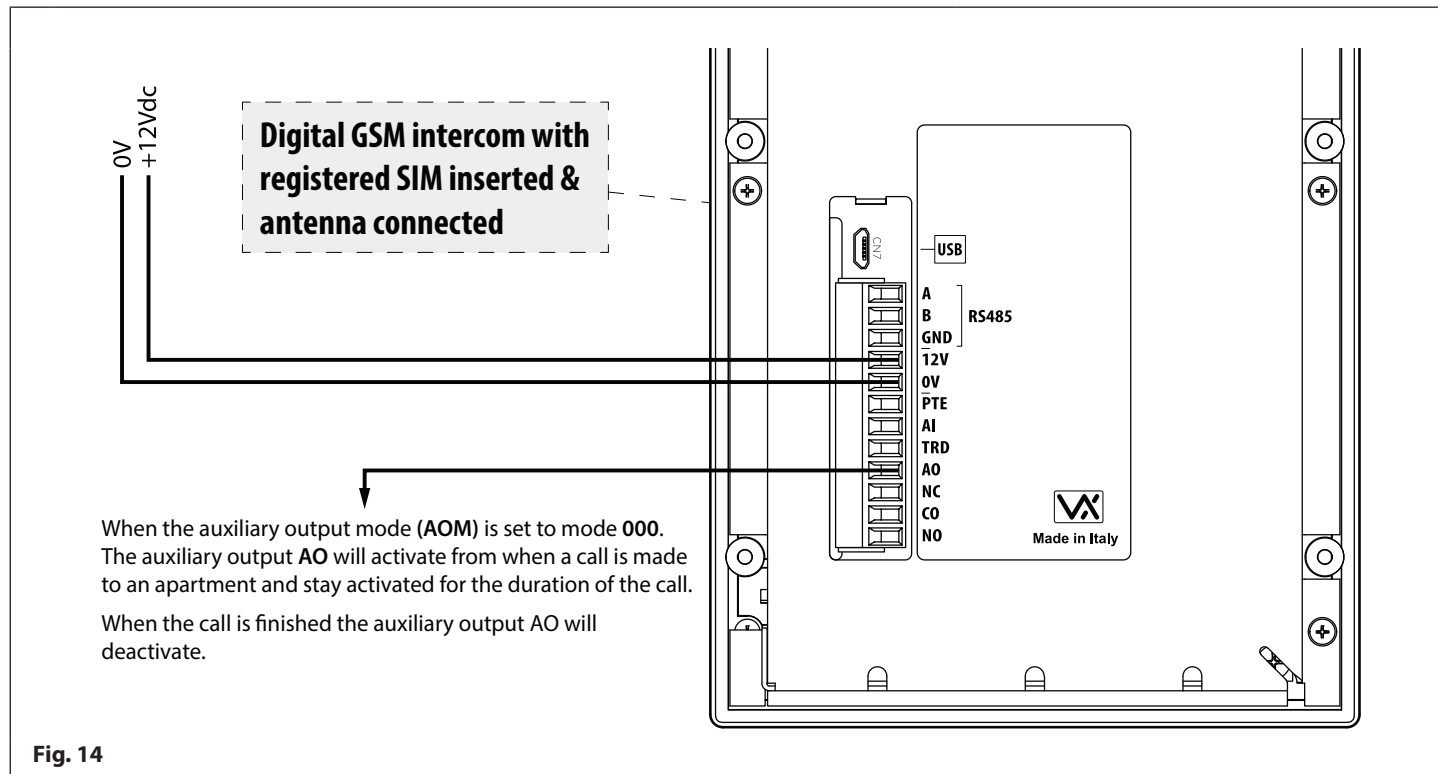


Fig. 14

AUXILIARY INPUT (AI) AND AUXILIARY OUTPUT (AO) WHEN SET TO MODE 001 (ON WHEN TRIGGERED)

Fig.15 below shows the connection for auxiliary output AO when the AOM mode is set to 001. The auxiliary output AO can be activated remotely by the user sending the text message 1111 A10 to the digital GSM intercom or by pressing 6 on the telephone during a call and will stay activated for the programmed auxiliary output time A1T. The auxiliary output can also be triggered by a normally open switch (switched 0V) connected into the auxiliary input AI.

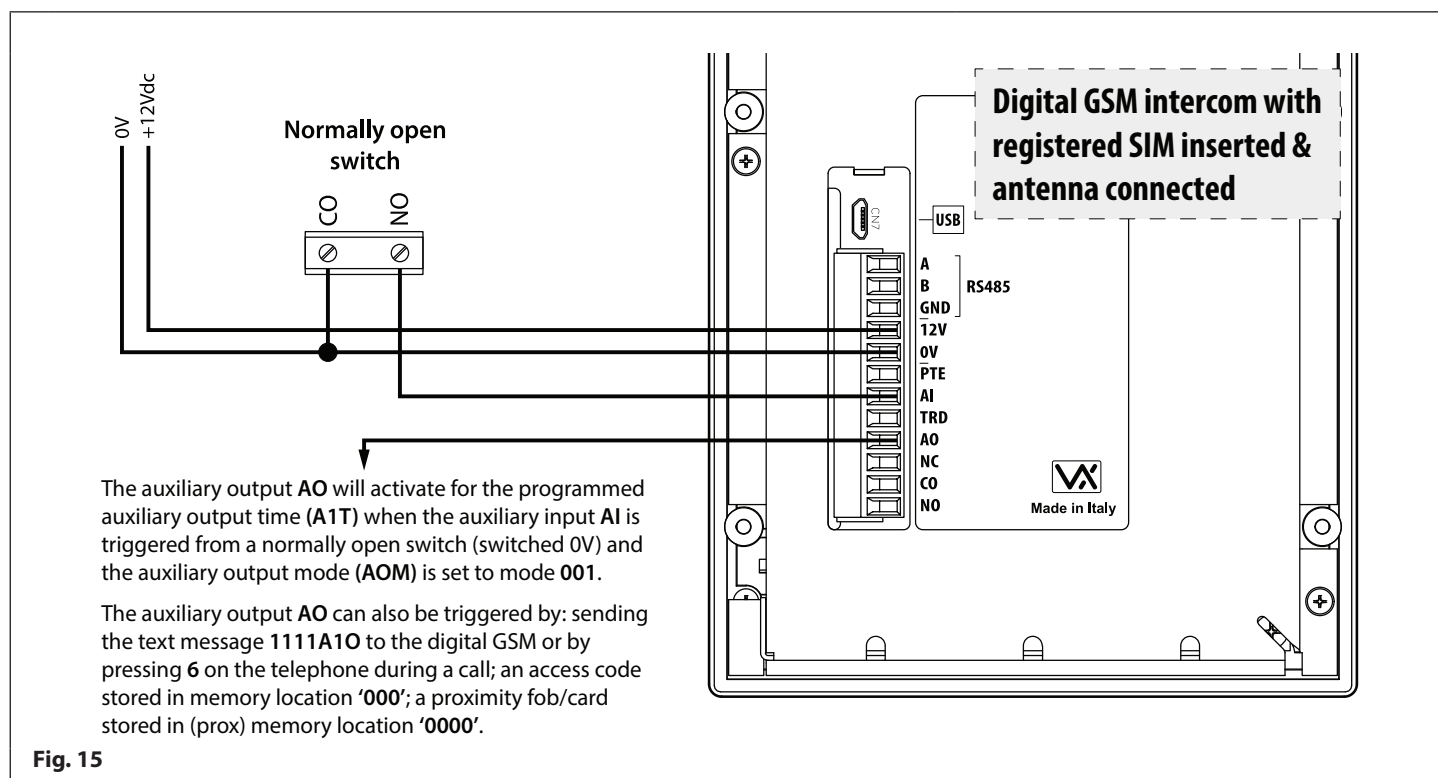


Fig. 15

The diagram shows the internal wiring of a digital GSM intercom. A terminal block is labeled with the following pins from top to bottom: A, B, GND, T2V, 0V, PTE, AI, TRD, AO, NC, CO, NO. A USB port is located above the terminal block. A callout box points to the terminal block with the text: "Digital GSM intercom with registered SIM inserted & antenna connected". Wires are shown connecting the 0V and +12Vdc power sources to the terminal block. A specific connection is highlighted with an arrow pointing to the AO pin, with the text: "When the auxiliary output mode (AOM) is set to mode 002. The auxiliary output AO will activate from when a call is made to an apartment and stay activated for the auxiliary output time (A1T)." The device is labeled "RS485" and "Made in Italy".

CONNECTING A SECONDARY DEVICE TO THE AUXILIARY OUTPUT (AO)

0V
+12Vdc

**Digital GSM intercom with
registered SIM inserted &
antenna connected**

Volt Free
Contacts

Art.506N

5 4 3 2 1

USB

RS485

A
B
GND
T2V
0V
PTE
AI
TRD
AO
NC
CO
NO

Made in Italy

Fig. 17

USB & RS485 Connection to a PC

CONNECTIONS TO A PC

The digital GSM intercom also includes two options for connecting to a PC: via a USB connection or via an RS485 connection. Both methods of connection are to allow for ease of programming and monitoring using the GSMSK PC software. All programming features described in this manual are also accessible using the software. Further information on using the GSMSK PC software can be found in the technical manual [GSMSK_66251720-EN_V2-2](#) (or later).

OPTION 1: USB CONNECTION

The digital GSM can be connected using a standard micro-USB to USB cable as shown in **Fig.18**. This method of connection is primarily used for programming and setup of the digital GSM panel.

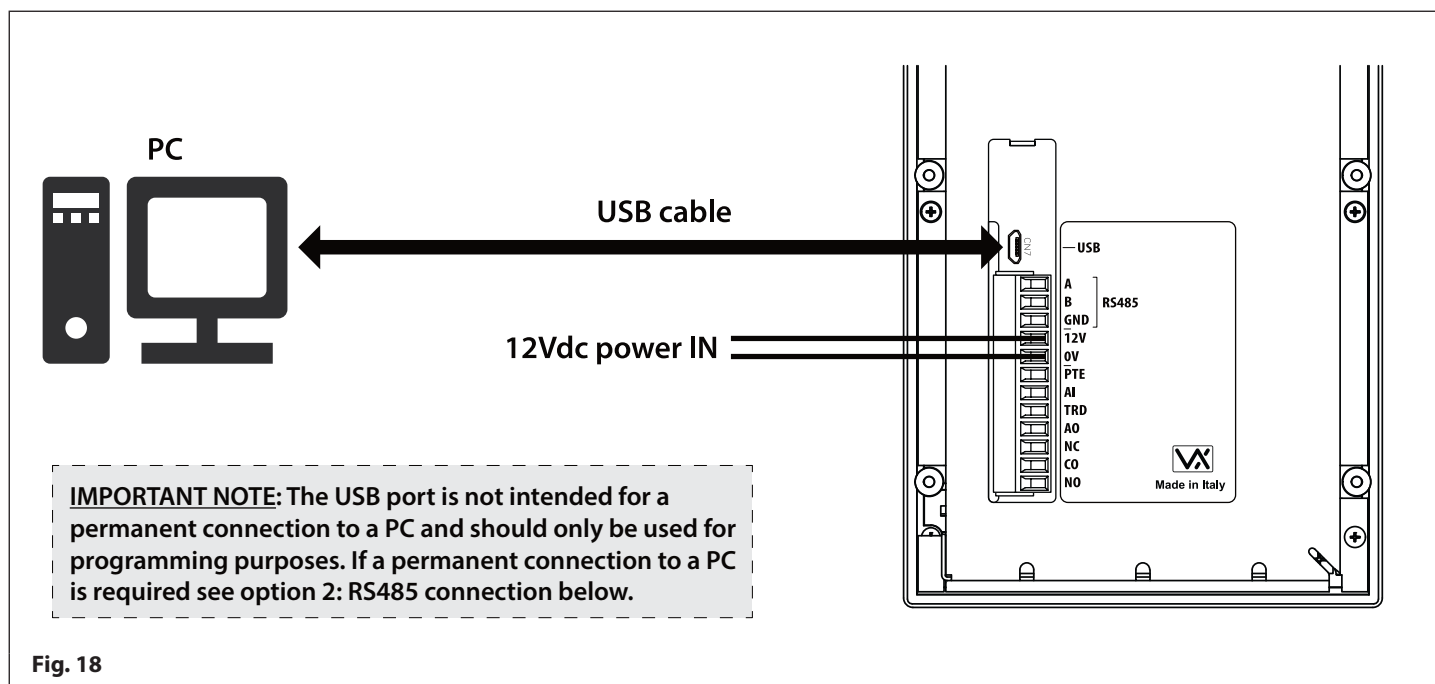


Fig. 18

OPTION 2: RS485 CONNECTION

The digital GSM intercom can also be connected using an RS485 bus connection via an RS485 to USB converter (Art.481) as shown in **Fig.19**. This method of connection, like option 1, can be used for programming and setup of the digital GSM, but can also be used in instances where a permanent connection to a PC is required for monitoring purposes and downloading event logs. When connected in this way the digital GSM can only be connected as a 'one-to-one' bus connection to the PC, another GSM module **cannot** be connected on the same RS485 bus to the PC.

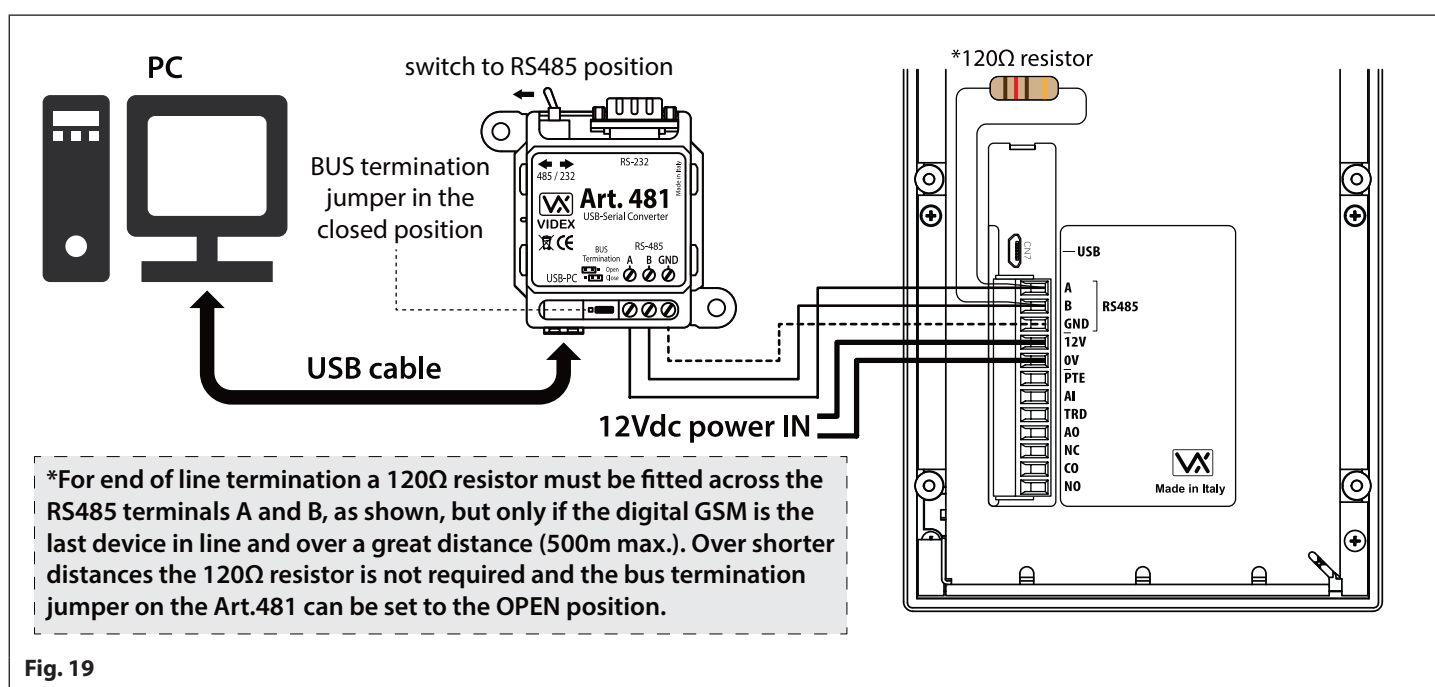


Fig. 19

General Directions for Installation

CABLE SIZE GUIDE

POWER SUPPLY AND LOCK RELEASE CONNECTIONS

Refer to the table below for the connections for the power supply output to the digital GSM and the lock release connections.

Distance	20m	50m	100m
Cross Sectional Area (CSA)	0.5mm ²	1.0mm ²	1.5mm ²

Ideally the power supply should be located as close to the intercom panel as possible for best performance. The maximum acceptable resistance for the above cables = 3Ω or less for best possible performance.

RS485 CONNECTIONS

A CAT-5 cable is acceptable where 1 pair is used for the 0V/GND connection and a second pair is split between the A and B connections (i.e. 1 core of the pair is used for the A terminal, 1 core of the pair is used for the B terminal, see Fig.23).

The total overall distance between the first RS485 device in line, the Art.481 or digital GSM, and the last RS485 device in line (Art.4850R, Art.4903 or Art.2813) **should be no more than 500m max.** for the best possible performance, see Fig.24 and Fig.25.

It is also important that the end of line RS485 bus termination of the respective device (Art.4850R, Art.4903 or Art.2813) is in the CLOSED/ON position, in the case of the digital 4G GSM or Art.2813 a 120Ω resistor should be fitted across the A and B bus terminal connections (unless it's connected with an Art.481, in which case the bus termination jumper on the Art.481 should be in the CLOSED position as this would be the last RS485 device in line).

If the overall RS485 bus distance is less than 100m or so then a 120Ω resistor is not required (also refer back to Fig.22).



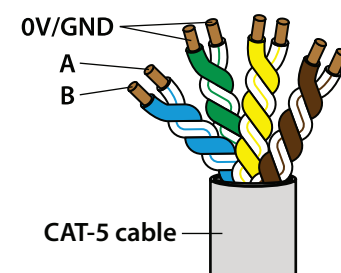


Fig. 23

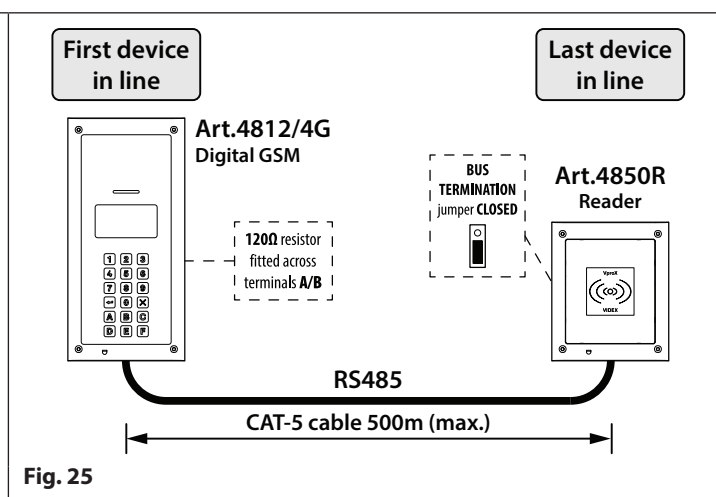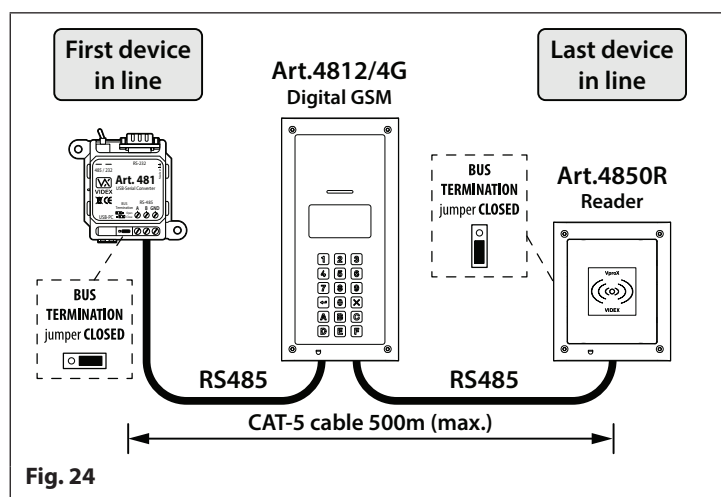

IMPORTANT NOTE: Only bare copper (BC) cable should be used (solid or stranded is acceptable). Please be aware that when selecting a cable the following **should NOT** be used: Copper Coated Steel (CCS) and Copper Clad Aluminium (CCA). While these types of cable may offer a low cost solution they will have a higher resistance than pure copper cable and can affect the overall performance of the system therefore Videx **DO NOT** recommend these types of cable.



GENERAL INSTALLATION NOTES

- Check that all components are free from damage before installing (**do not proceed with installation in the event of damage**).
- Keep all packaging away from children (**please dispose of any excess waste and packaging responsibly**).
- **Do not obstruct** the ventilation openings or slots on any of the devices.
- All connections to mains voltages must be made to the current national standards (I.E.T. **wiring regulations** for the UK or the appropriate standards of your country if installing overseas).
- Install an appropriate fused spur or isolation switch to isolate the mains.
- Isolate the mains before carrying out any maintenance work on the system.
- Avoid water ingress into the rear of the module, always seal the module frame after installation using a suitable silicon based sealant.
- All intercom and access control cables must be routed separately from the mains (ideally in a separate cable tray or duct).

General Directions for Installation

LOCK RELEASE WIRING AND BACK EMF PROTECTION

When fitting an electric lock release back EMF protection will be required. If fitting an AC lock release then a 100nF ceramic disc capacitor should be fitted across the terminals of the lock, shown in **Fig.26**. If fitting a DC lock release (fail secure or fail safe) then a 1N4002 diode should be fitted across the terminals on the lock, shown in **Fig.27**.

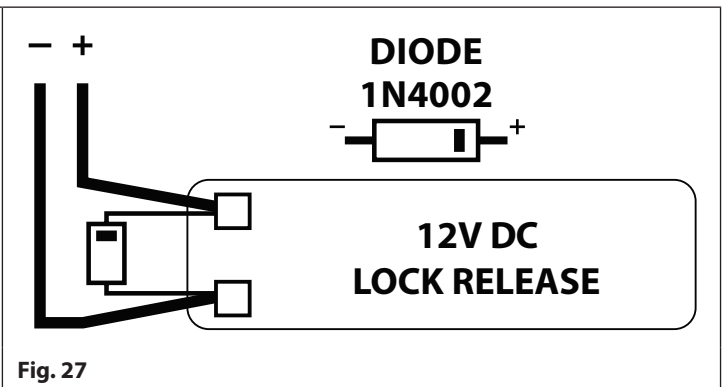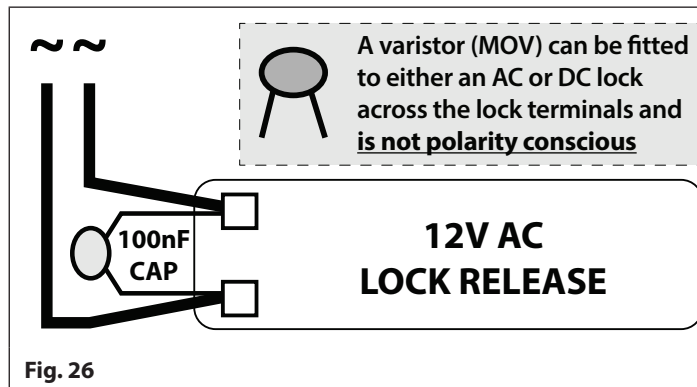

If a 100nF ceramic disc capacitor or a 1N4002 diode are not available then a 14 - 20V MOV (metal oxide varistor) can be fitted across the lock terminals instead (refer to **Fig.26** above) and can be fitted on both an AC and DC lock. Connection examples can also be seen on the various wiring diagrams on pages 12, 17 and 18.

CONNECTION TO MAINS, SAFETY AND GUIDANCE NOTES

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE COMMENCING WITH THE INSTALLATION.


IMPORTANT: IT IS RECOMMENDED THAT ANY CABLING AND VIDEX PRODUCTS BE INSTALLED BY A COMPETENT AND QUALIFIED ELECTRICIAN, SECURITY INSTALLATION SPECIALIST OR COMMUNICATIONS ENGINEER.

- **DO NOT** install any Videx product in areas where the following may be present or occur:
- Excessive oil or a grease laden atmosphere.
- Corrosive or flammable gases, liquids or vapours.
- Possible obstructions which would prevent or hinder the access and/or removal of the Videx product.

MAINS CONNECTION

The system **MUST** be installed in accordance with the current I.E.T. regulations (in particular **I.E.T. Wiring Regulations, Eighteenth Edition BS7671:2018** for the UK), or the appropriate standards of your country if installing overseas, in particular Videx recommends:

- Connecting the system to the mains through an all-pole circuit breaker (refer to **Fig.28**) which shall have contact separation of at least 3mm in each pole and shall disconnect all poles simultaneously.
- That the all-pole circuit breaker shall be placed in such a way to allow for easy access and the switch shall remain readily operable.
- Ensuring that the mains supply (Voltage, Frequency and Phase) complies with the product rating label (this is usually located on the topside of the power supply).
- Isolating the mains before carrying out any maintenance work on the system.

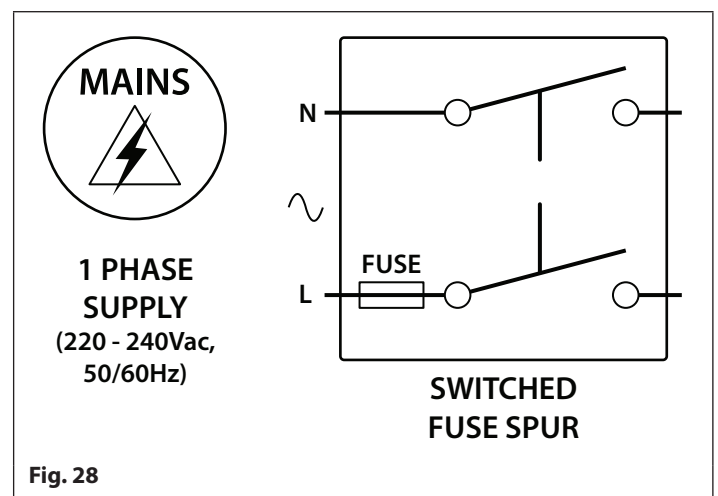

Fitting the SIM & Connecting Power

FITTING THE SIM CARD AND CONNECTING THE POWER TO THE GSM INTERCOM

After installing the power supply, antenna, lock output and any auxiliary devices as shown in this manual and before powering up, a SIM card must be installed (the SIM must already be registered with the network provider). The SIM holder can be found on the back of the module below the antenna connections. A nano SIM card from most network providers can be used, remember the 4G digital GSM will work with a 2G, 3G and a 4G SIM and will also work with the 3 network. Follow the steps below to insert the SIM card.


FITTING AND REMOVING THE SIM

Fitting the SIM:

1. Viewing the back of the digital GSM place the nano SIM on the SIM icon, with the SIM contacts facing down and following the SIM orientation, as shown in **Fig.33**.
2. Carefully, using your index finger, guide the nano SIM down, see **Fig.34**, into the SIM holder, see **Fig.35**.
3. Once the SIM is in place connect the GSM antenna and then connect the 12Vdc power supply wires but **DO NOT** power up the system yet.
4. Follow the **power up initialisation sequence** described below.

Removing the SIM:

1. Before removing the nano SIM disconnect the 12Vdc power to the GSM module.
2. To remove the SIM card carefully use the end of a small flat head terminal driver (indicated with the two arrows on the bottom side of the SIM holder where the edge of the SIM can be seen, **Fig.36**) and gently push the nano SIM up.
3. When the other side of the nano SIM sticks out of the SIM holder at the top edge carefully use your index finger to slide the nano SIM out of the holder, **Fig.37**.

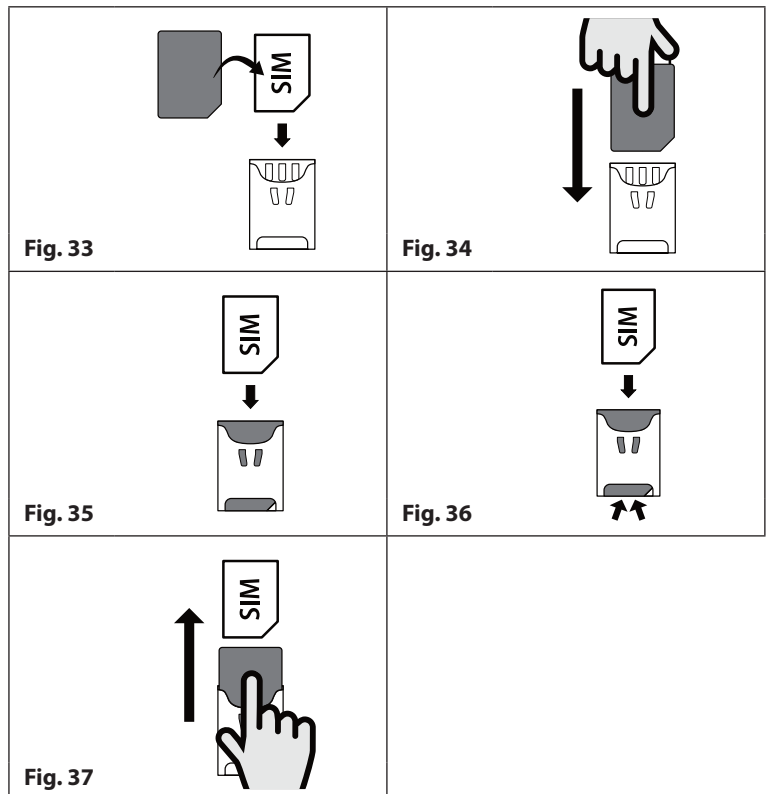

POWER UP INITIALISATION SEQUENCE

The 4G digital GSM intercom requires approximately 25 - 30 seconds too initialise properly. We recommend **NOT** sending any SMS messages or pressing buttons during this time.

1. First check all the connections have been made correctly and then power up the system.
2. The graphical display and the keypad buttons will illuminate.
3. After approximately 5 seconds the display will show the Videx GSM logo and current firmware version number, as shown in **Fig.38**.
4. After a further 10 seconds the GSM will emit a beep and below the Videx logo it will indicate the digital GSM is registering with the network, as shown in **Fig.39**.
5. After a further delay the display will then show the default welcome screen, refer to **Fig.40** for the **Art.4812** and **Fig.41** for the **Art.4812R** below. The digital GSM is ready to begin programming.

The date and time is shown along the bottom of the display and the signal is indicated at the top right corner of the display.



Fig. 38



Fig. 39

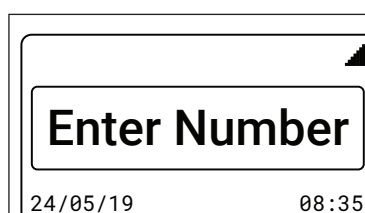


Fig. 40

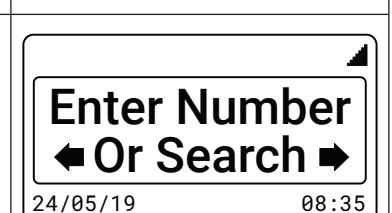




Fig. 41

Reset Procedure

RESETTING THE DIGITAL GSM INTERCOM TO FACTORY DEFAULTS

There are two reset procedures for the 4G digital GSM panel. The first will reset the master code only and the second will reset everything and clear all stored telephone numbers, proximity cards and settings.

RESETTING THE MASTER CODE TO 1111 (4x1)

1. Ensure the power is switched off to the digital GSM panel.
2. Press and hold down the '0' button, , and keep it pressed down while the power is switched back ON.
3. The graphical display and the keypad buttons will illuminate.
4. After a brief delay the display will show the Videx GSM logo and current firmware version number, as shown in **Fig.42**.
5. After another delay the GSM will emit a beep and below the Videx logo it will indicate the digital GSM is registering with the network, as shown in **Fig.43**.
6. When the display shows that it is registering release the '0' button, .
7. After a further delay the display will then show the default welcome screen (refer to **Fig.40** for the Art.4812 and **Fig.41** for the Art.4812R on page 22).
8. The master code has been reset back to factory default 1111 (4x1).

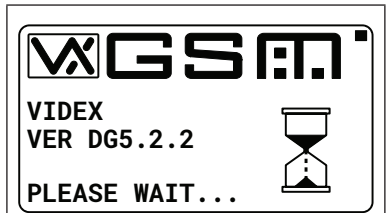

 


Fig. 42



Fig. 43

FULL SYSTEM RESET

1. Ensure the power is switched off to the digital GSM panel.
2. On the rear of the GSM panel link out the **GND** and **PTE** terminals, as shown in **Fig.44**.
3. Press and hold down the 'ENTER' button, , and keep it pressed down while the power is switched back on.
4. The graphical display and the keypad buttons will illuminate.
5. After a brief delay the display will show the Videx GSM logo and current firmware version number, as shown in **Fig.45**.
6. After another delay the GSM will emit a beep and below the Videx logo it will indicate the digital GSM is resetting, as shown in **Fig.46**.
7. When the display shows that it is resetting release the 'ENTER' button, .
8. After a further delay the digital GSM will automatically follow the **power up initialisation sequence** as described on page 22.
9. The digital GSM panel has been fully reset.

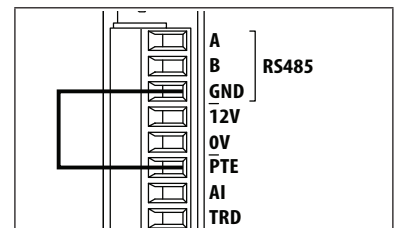


Fig. 44



Fig. 45



Fig. 46

IMPORTANT NOTE: WHEN PERFORMING A FULL SYSTEM RESET ALL THE DATA STORED IN THE DIGITAL GSM WILL BE DELETED FROM THE PANEL. IF ANY DATA IS STILL REQUIRED IT IS RECOMMENDED THAT THIS INFORMATION IS FIRST DOWNLOADED FROM THE DIGITAL GSM USING THE GSM SK PC SOFTWARE AND THEN SAVED. IT CAN THEN LATER BE UPLOADED BACK INTO THE DIGITAL GSM AFTER THE FULL RESET HAS BEEN COMPLETED.

4000 Series Back Box Installation

EXAMPLE: INSTALLING A 4000 SERIES TWO MODULE SURFACE BACK BOX (ART. 4882)

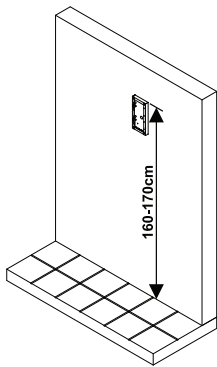


Fig. 47

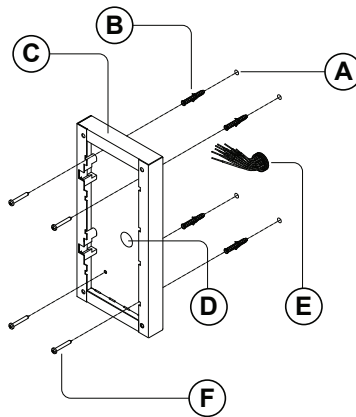


Fig. 48

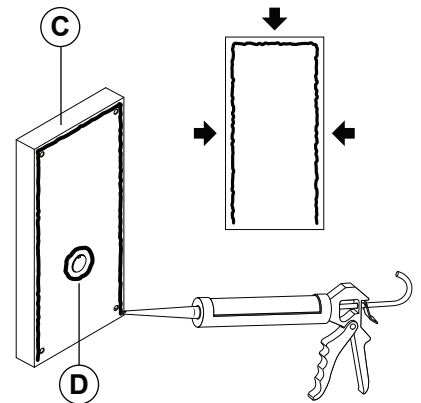


Fig. 49

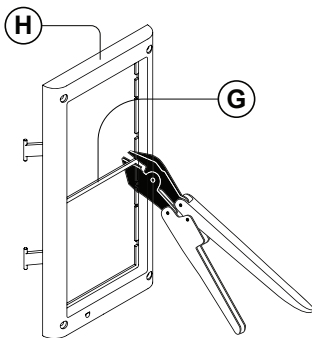


Fig. 50

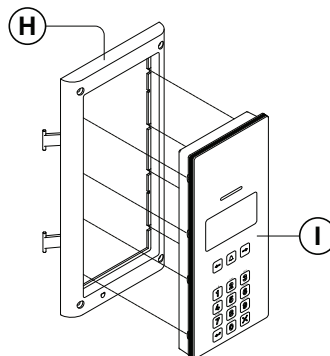


Fig. 51

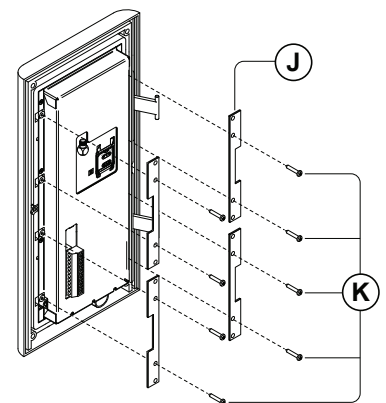


Fig. 52

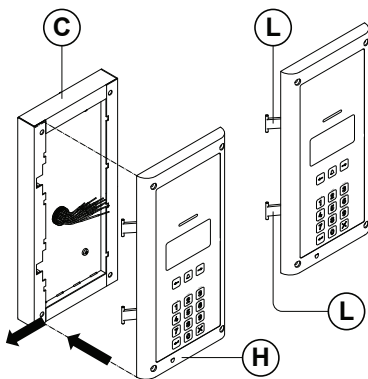


Fig. 53

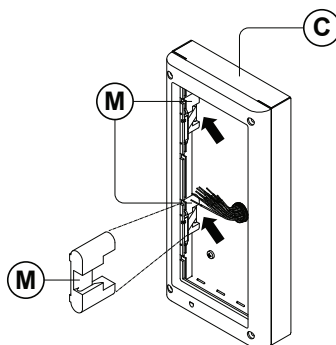


Fig. 54

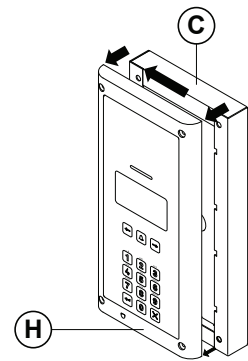


Fig. 55

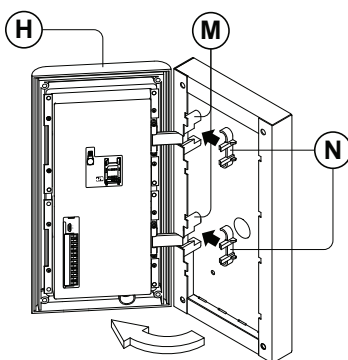


Fig. 56

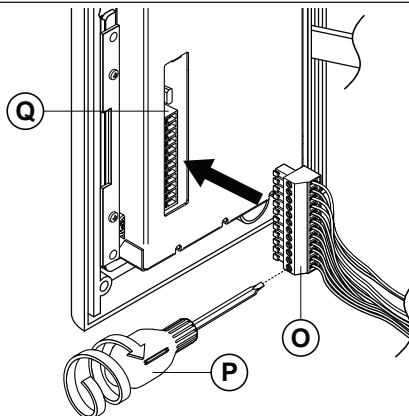


Fig. 57

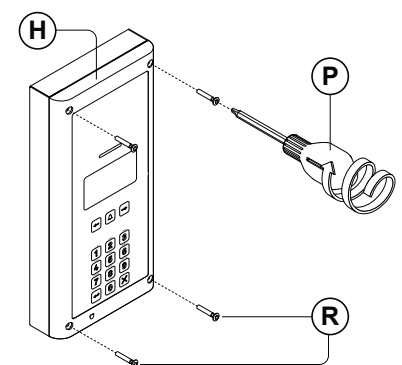



Fig. 58


4000 Series Back Box Installation

INSTALLING A SURFACE MOUNT DOOR STATION

1. Place the surface box against the wall (165-170cm between the top of the box and the floor level as shown in **Fig.47**) and mark the fixing holes **(A)** for the wall plugs **(B)** and the hole for the cables **(E)** (**Fig.48**). Observe the orientation of the box with the hinge mount **(M)** on the left;

 **In order to prevent water ingress we highly recommend using a silicon sealant between the wall and the back box **(C)**, ON THE LEFT, TOP AND RIGHT SIDES ONLY AND AROUND ALL THE HOLES **(D)** . DON'T USE SILICON SEALANT ON THE BOTTOM SIDE OF THE BACK BOX (**Fig.49**);**

2. As shown in **Fig.48**, drill the fixing holes **(A)** , insert the wall plugs **(B)** and feed the cables **(E)** through the surface box opening **(D)** , fix the surface box **(C)** to the wall using the screws **(F)** ;
3. Remove the cross bar **(G)** from the module support frame **(H)** using the appropriate hand tool (where required it may be necessary to wear the appropriate clothing, e.g. protective gloves and eye protection, when doing this) as shown in **Fig.50**;
4. Before installation of the module support frame **(H)** to the surface box **(C)** , fit the module **(I)** to the support frame **(H)** as shown in **Fig. 51** then, as shown in **Fig.52**, fit the module fixing brackets **(J)** using the fixing screws **(K)** ;
5. Next take the frame's hinges **(L)** and hook the module support frame **(H)** to the surface box **(C)** , starting from the left following the guide arrows, as shown in **Fig.53**. Ensure that the frame's hinges **(L)** (**Fig.53**) fit inside the relevant hinge mounts **(M)** inside the surface box **(C)** , following the guide arrows, as shown in **Fig.54**;
6. Pull back the module support frame **(H)** from the surface box **(C)** while moving it slightly to the left, following the guide arrows, as shown in **Fig.55**;
7. Next open the module support frame **(H)** and clip the hinge locks **(N)** to the hinge mounts **(M)** , following the guide arrows, as shown in **Fig.56**;
8. Make the required wiring connections into the terminal block **(O)** using the screwdriver provided **(P)** (using the flat blade end) then plug the terminal block **(O)** into the module's terminal block connector **(Q)** , as shown in **Fig.57**. Make any other necessary panel adjustments required (connecting the antenna cable, fitting the SIM card and setting the dip-switches etc.);
9. After the system has been tested and is working correctly, move back the module support frame **(H)** carefully and then fix it to the surface box **(C)** using the screwdriver provided **(P)** (using the torx end) and the torx pin security screws provided **(R)** , as shown in **Fig.58**. **Note: do not over tighten the screws more than is necessary.**

 **Note: if additional holes are made in the surface box, oxidation problems may appear unless the unprotected metal is coated with a protective paint.**

4000 Series Back Box Installation

EXAMPLE: INSTALLING A 4000 SERIES TWO MODULE FLUSH BACK BOX (ART. 4852)

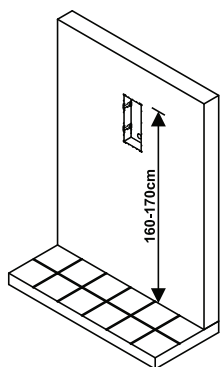


Fig. 59

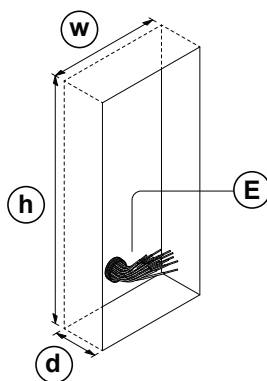


Fig. 60

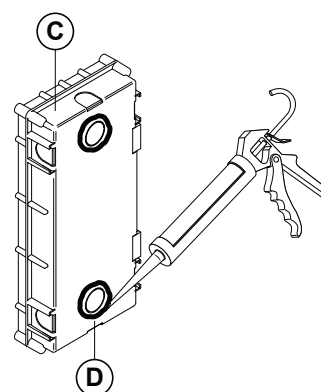


Fig. 61

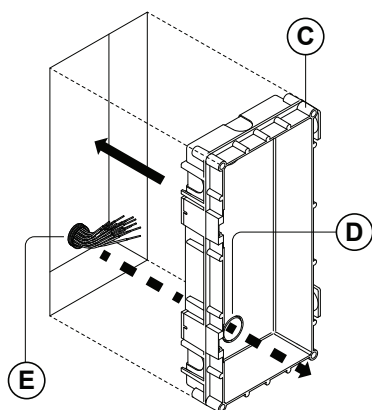


Fig. 62

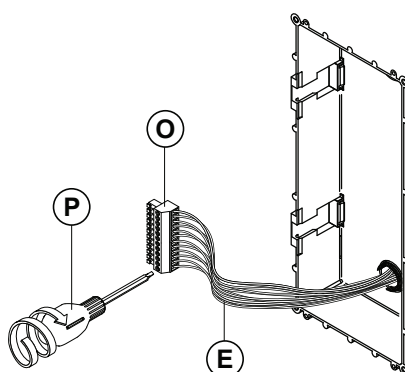


Fig. 63

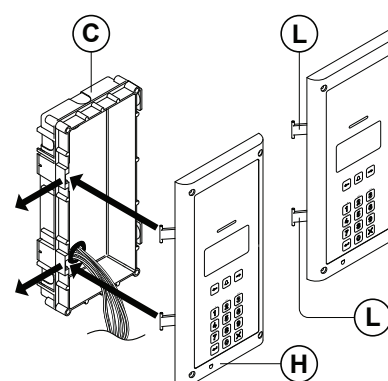


Fig. 64

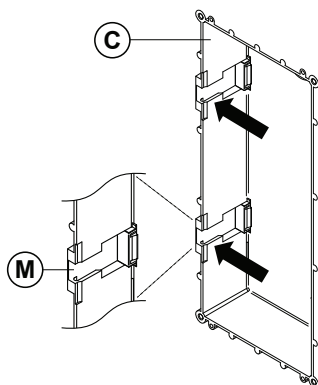


Fig. 65

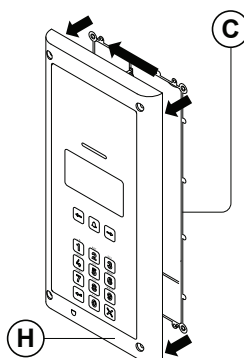


Fig. 66

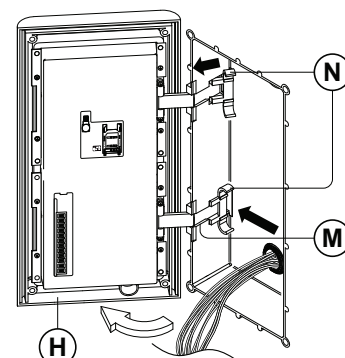


Fig. 67

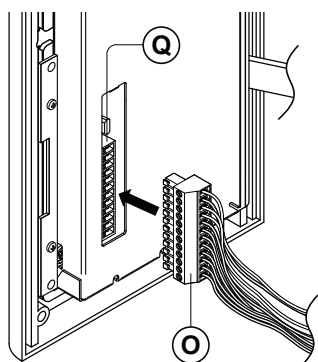


Fig. 68

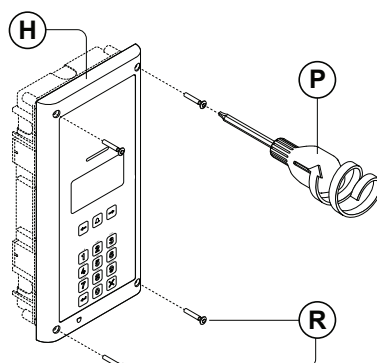



Fig. 69

4000 Series Back Box Installation

INSTALLING A FLUSH MOUNTING DOOR STATION

1. It is recommended that the flush box (C) is mounted into the wall approximately 165-170cm between the top of the box and the floor level as shown in **Fig.59**.
2. Using the flush box (C) and the hole dimensions (**w=120mm x h=263.2mm x d=46mm**), as shown in **Fig.60**, use appropriate tools to cut out the recommended hole size in the wall (where required it may be necessary to wear the appropriate clothing, e.g. protective gloves and eye protection, when doing this). Remember to allow room for the connecting cables (E) (**Fig.60**);

 **Before fitting the flush box (C) into the wall it is recommended that in order to prevent water ingress a silicon sealant is used between the wall and the flush box (C) (Fig.61) and around the flush box openings (D) (Fig.61);**

3. Set the flush box (C) into the hole in the wall feeding the connecting cables (E) through the appropriate flush box opening (D), as shown in **Fig.62**;
4. Follow steps 3 and 4, from 'installing a surface mounting door station', to fit the module into the module support frame (H) as shown in **Fig.50, Fig.51** and **Fig.52** on page 24 and described on page 25;
5. Next take connecting cables (E) and make the required terminal connections into the terminal block (O) using the screwdriver provided (P) (using the flat blade end), as shown in **Fig.63**;
6. Take the frame's hinges (L) and hook the module support frame (H) to the flush box (C), starting from the left following the guide arrows, as shown in **Fig.64**. Ensure that the frame's hinges (L) (**Fig.64**) fit inside the relevant hinge mounts (M) inside the flush box (C), as shown in **Fig.65**;
7. Next close in the front support frame (H) and then pull it back from the flush box (C) while moving it slightly to the left, following the guide arrows, as shown in **Fig.66**;
8. Next open the module support frame (H) (to allow for easy access to the hinge mounts (M)) and clip the hinge locks (N) to the hinge mounts (M), following the guide arrows, as shown in **Fig.67**;
9. Plug the terminal block (O) (from step 5, **Fig.63**) into the module's terminal block connector (Q), as shown in **Fig.68**. Make any other necessary panel adjustments required (connecting the antenna cable, fitting the SIM card and setting the dip-switches etc.);
10. After the system has been tested and is working correctly, move back the module support frame (H) carefully and then fix it to the flush box (C) using the screwdriver provided (P) (using the torx end) and the torx pin security screws provided (R), as shown in **Fig.69**. **Note: do not over tighten the screws more than is necessary.**




NOTES

- The screwdriver's blade has two sides, one flat and one torx, to select one of them unplug the blade from the screwdriver body and plug it into the required side.




















 
 



















 

Programming via Alpha-Numeric Keypad

THE ALPHA-NUMERIC KEYPAD

Programming can be carried out using the onboard alpha-numeric keypad. When in programming mode the keypad can be used similar to mobile phone text typing. The following alpha-numeric table can be used when entering a username for example. The table shows the characters and symbols that can be entered into the panel by pressing a specific numeric button one or more times to select the character or symbol desired.


For the **Art.4812R** with the scroll buttons,  and  are not used. The call button  can also be used to confirm entry.


For the **Art.4812** the alpha buttons A-F are not used.


Number of Presses Button No.	1	2	3	4	5	6	7	8	9
1 	<space>	.	&	1					
2 	A	B	C	2	a	b	c		
3 	D	E	F	3	d	e	f		
4 	G	H	I	4	g	h	i		
5 	J	K	L	5	j	k	l		
6 	M	N	O	6	m	n	o		
7 	P	Q	R	S	7	p	q	r	s
8 	T	U	V	8	t	u	v		
9 	W	X	Y	Z	9	w	x	y	z
0 	+	-	*	/	0				
       	unused buttons								
 	confirm entry								
	delete previous character/symbol and cancel								


Example:


When entering an apartment name, to type the name "VIDEX" the following buttons can be pressed on the keypad:

Press button "8" ,  , 3 times = "V";

Press button "4" ,  , 3 times = "I";


Press button "3" ,  , once = "D";

Press button "3" ,  , twice = "E";


Press button "9" ,  , twice = "X";

Programming Flowcharts

ACCESSING MAIN PROGRAMMING MENU

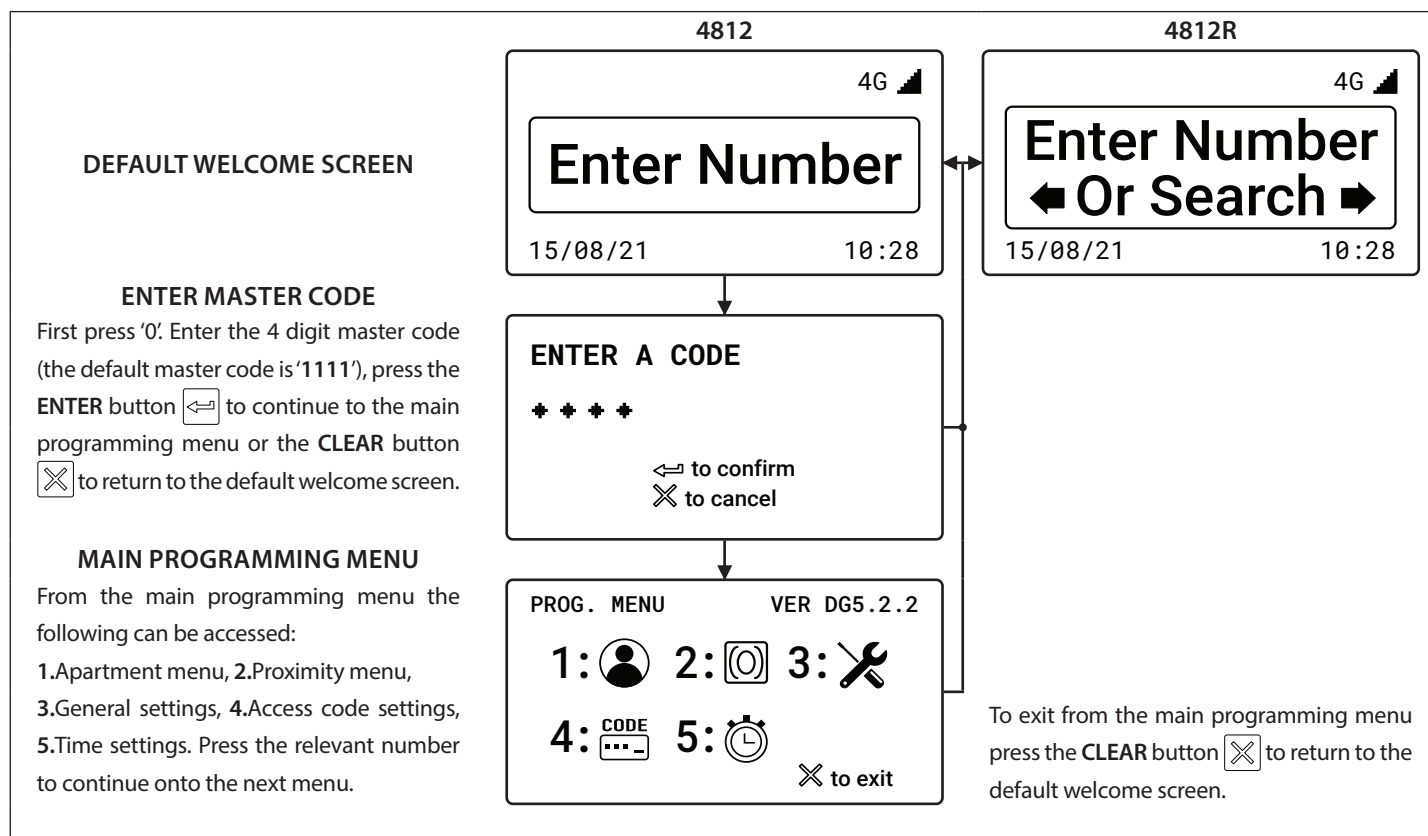


ACCESSING ADMIN MENU

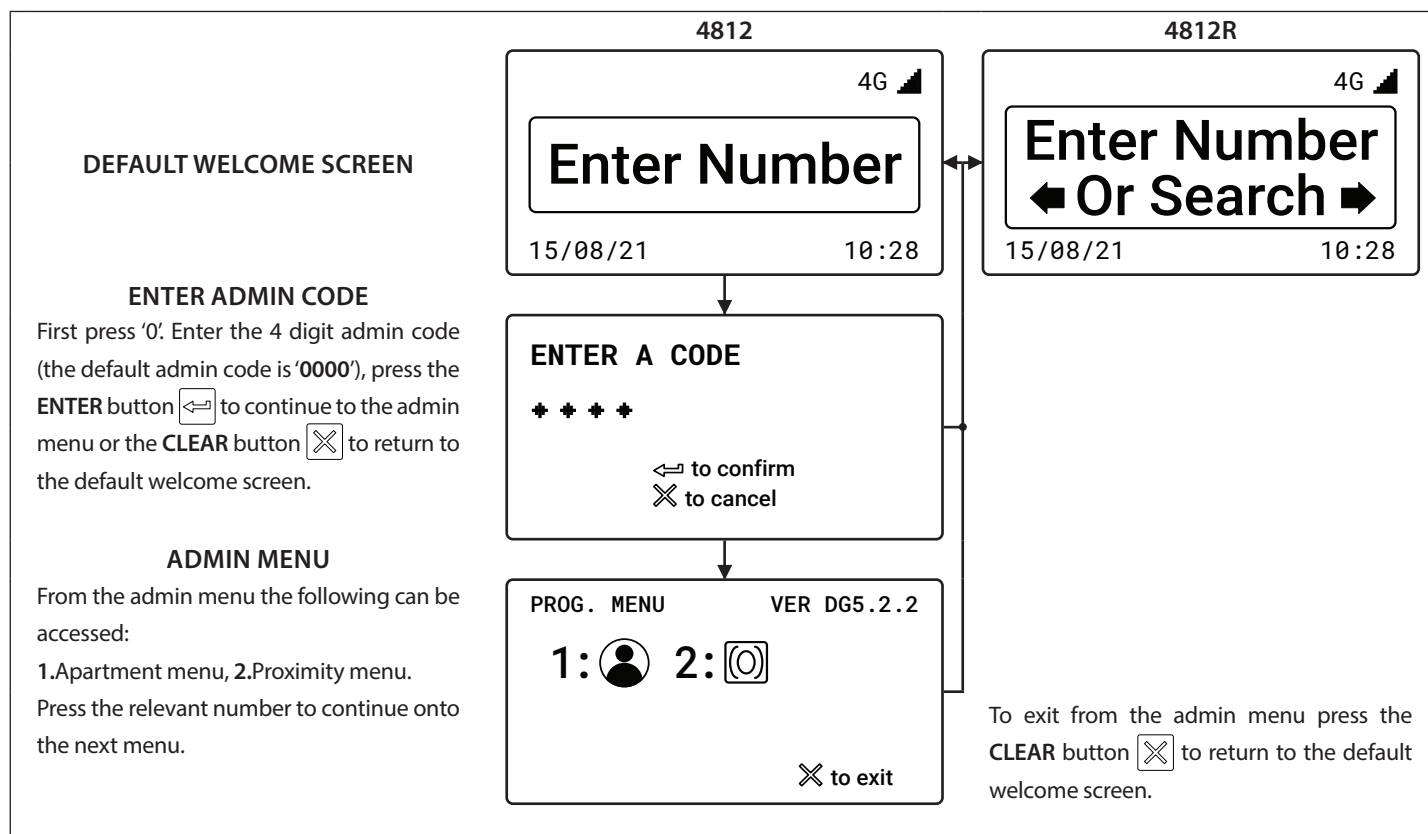


Programming Flowcharts

1. APARTMENT MENU

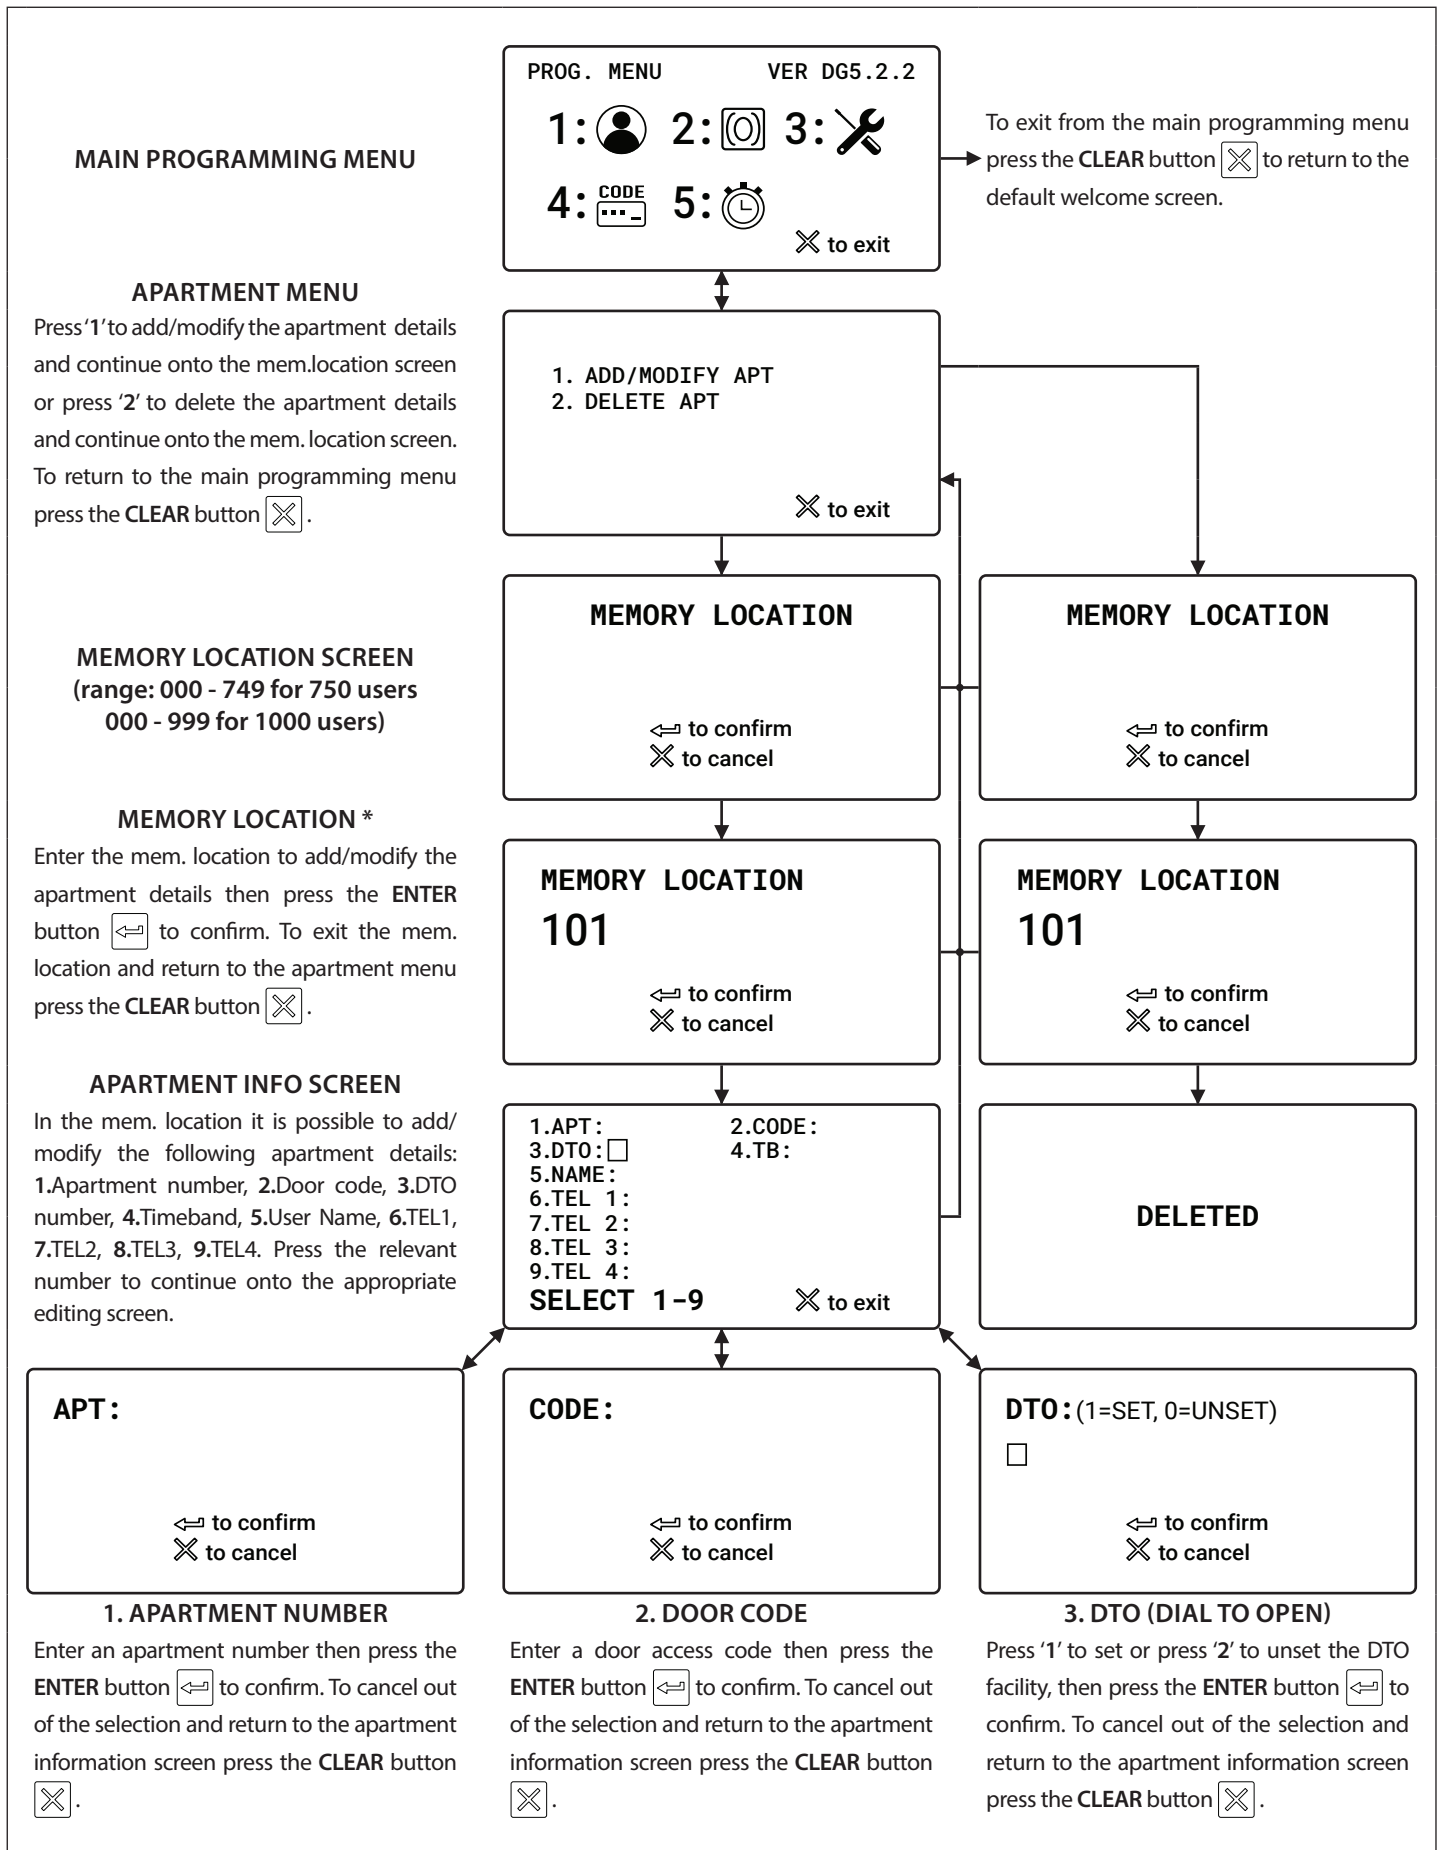

Programming Flowcharts


1. APARTMENT MENU (CONTINUED)

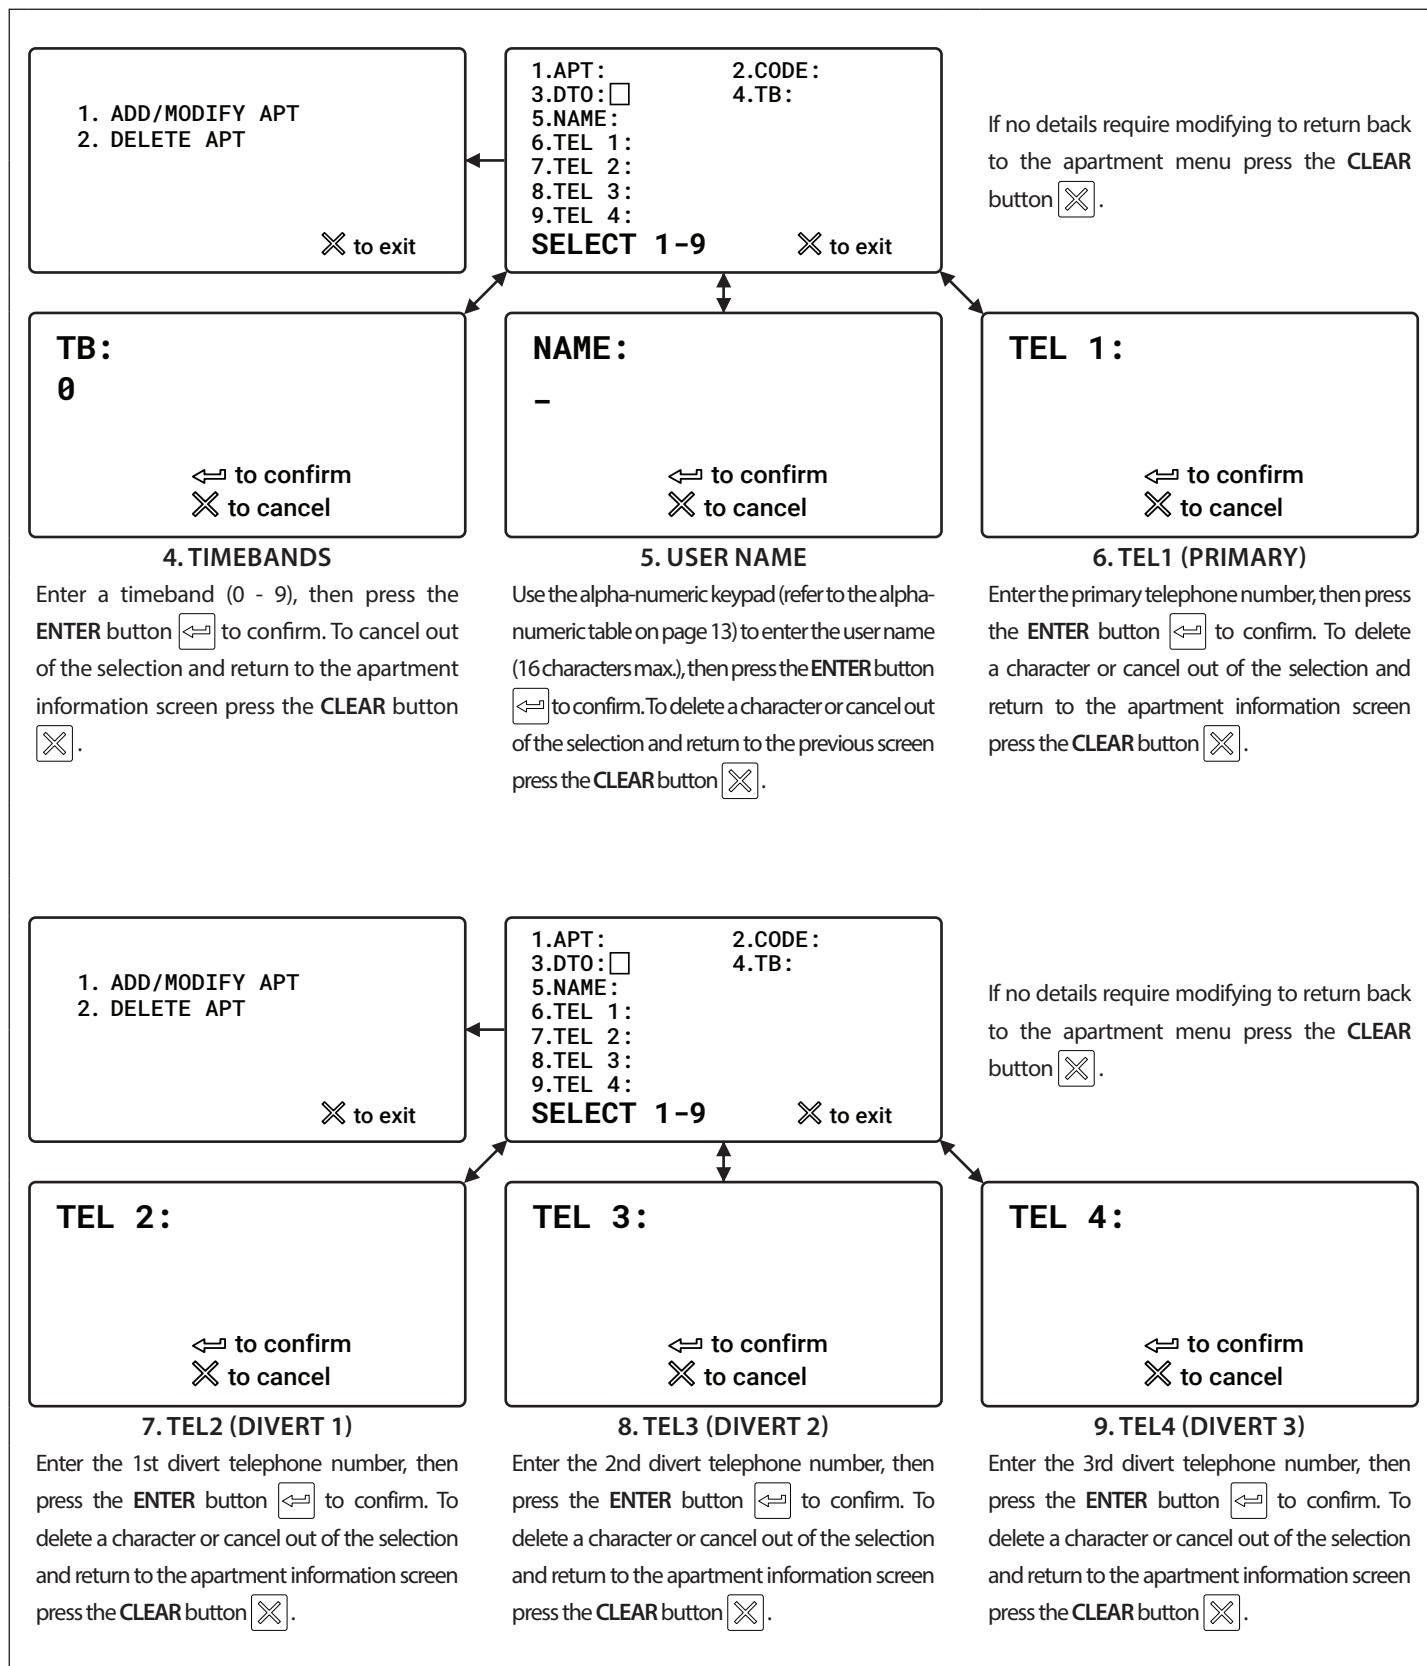

* **IMPORTANT NOTE:** Programming an access code into memory location '000' (via the Apartment Menu) will operate the auxiliary output AO for the programmed AO time (A1T). When a user enters this code via the keypad the digital GSM will show 'OK' on the display to confirm the auxiliary output AO has been activated. Please also note that activating the auxiliary output in this way is only possible when the auxiliary output mode A1M has been set to mode 001.

Programming Flowcharts


2. PROXIMITY MENU

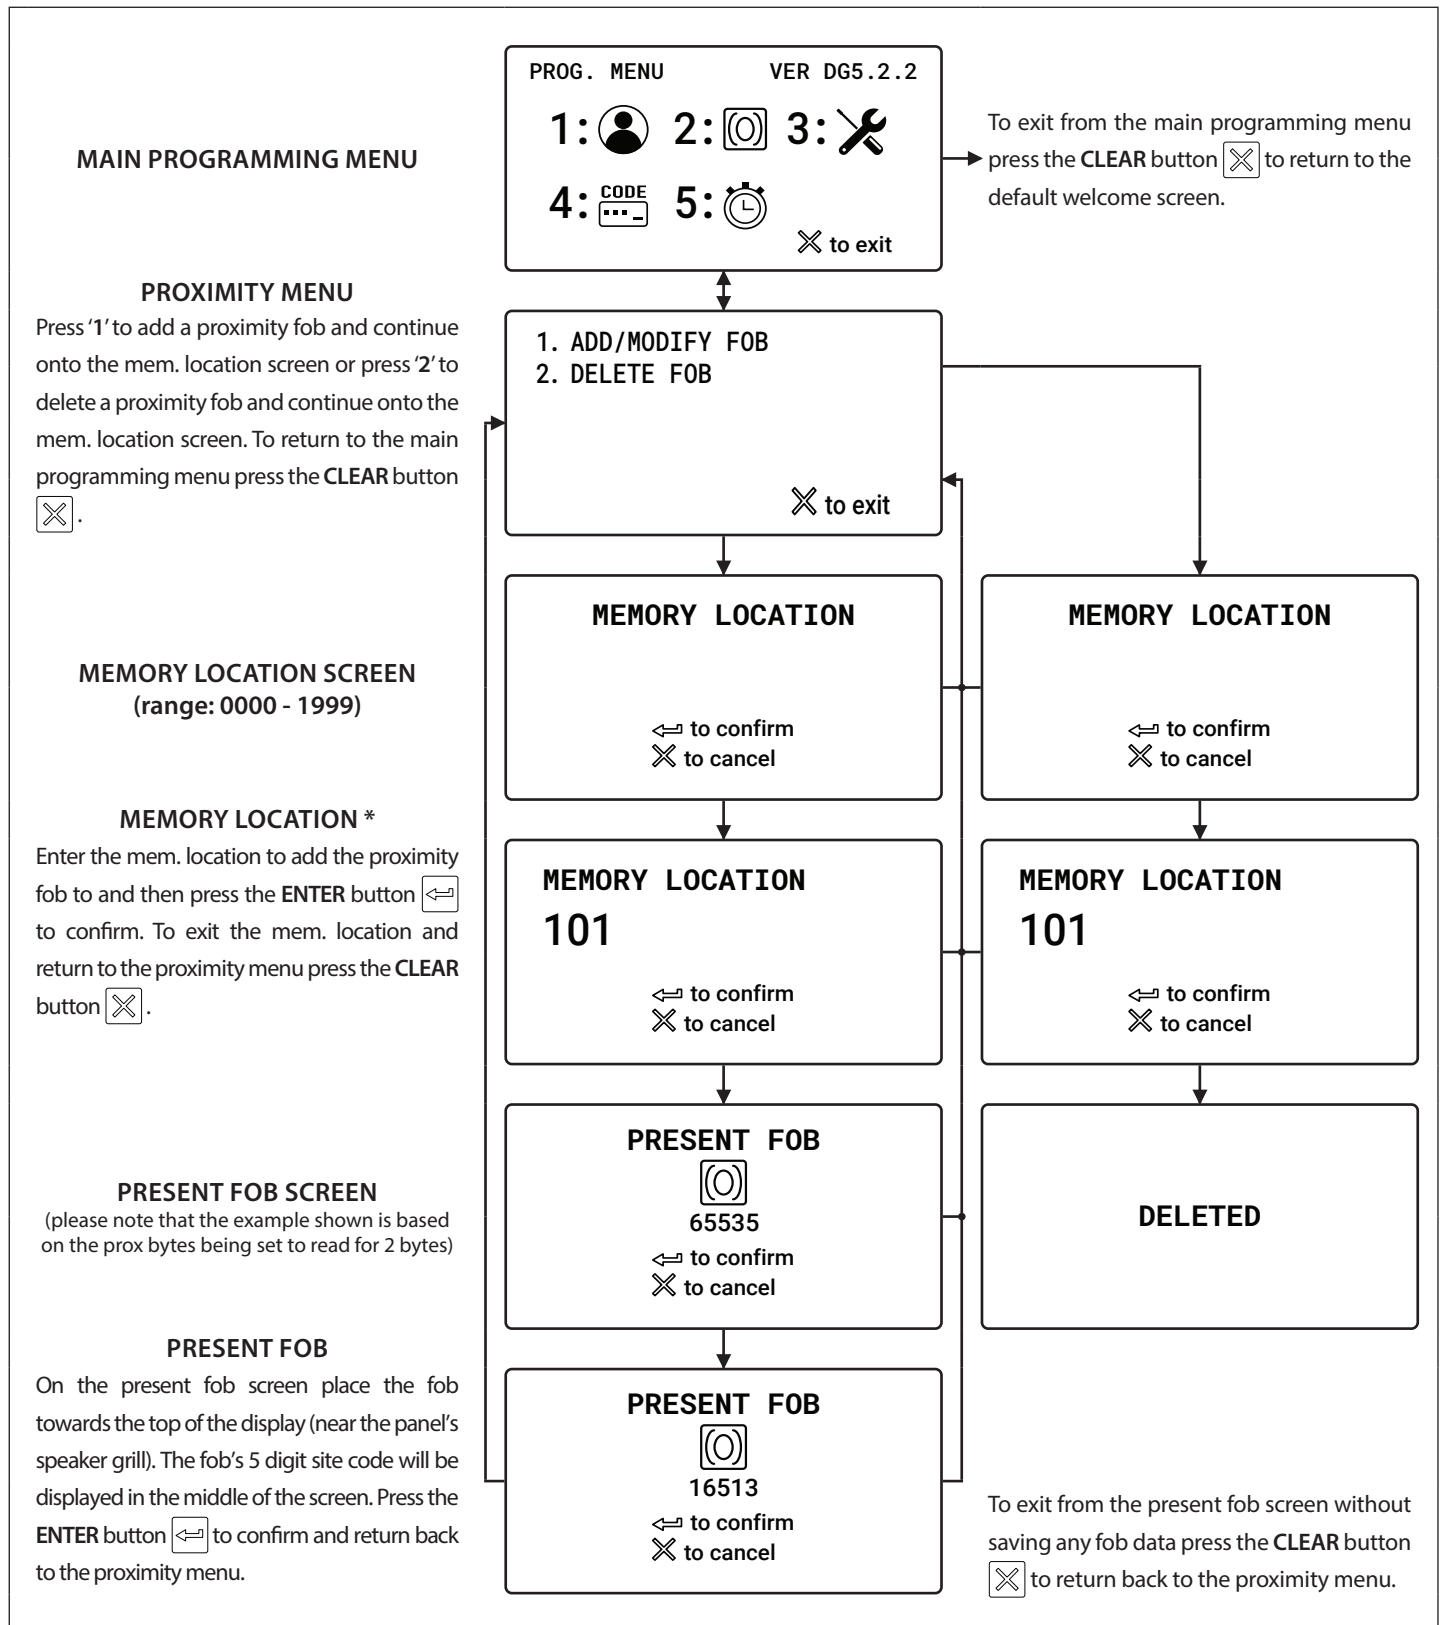

* **IMPORTANT NOTE:** Programming a proximity fob/card into memory location '0000' (via the Proximity Menu) will operate the auxiliary output AO for the programmed AO time (A1T). When a user presents the programmed fob/card to the onboard reader the digital GSM will show 'OK' on the display to confirm the auxiliary output AO has been activated. Please also note that activating the auxiliary output in this way is only possible when the auxiliary output mode A1M has been set to mode 001.


Programming Flowcharts

3. GENERAL SETTINGS

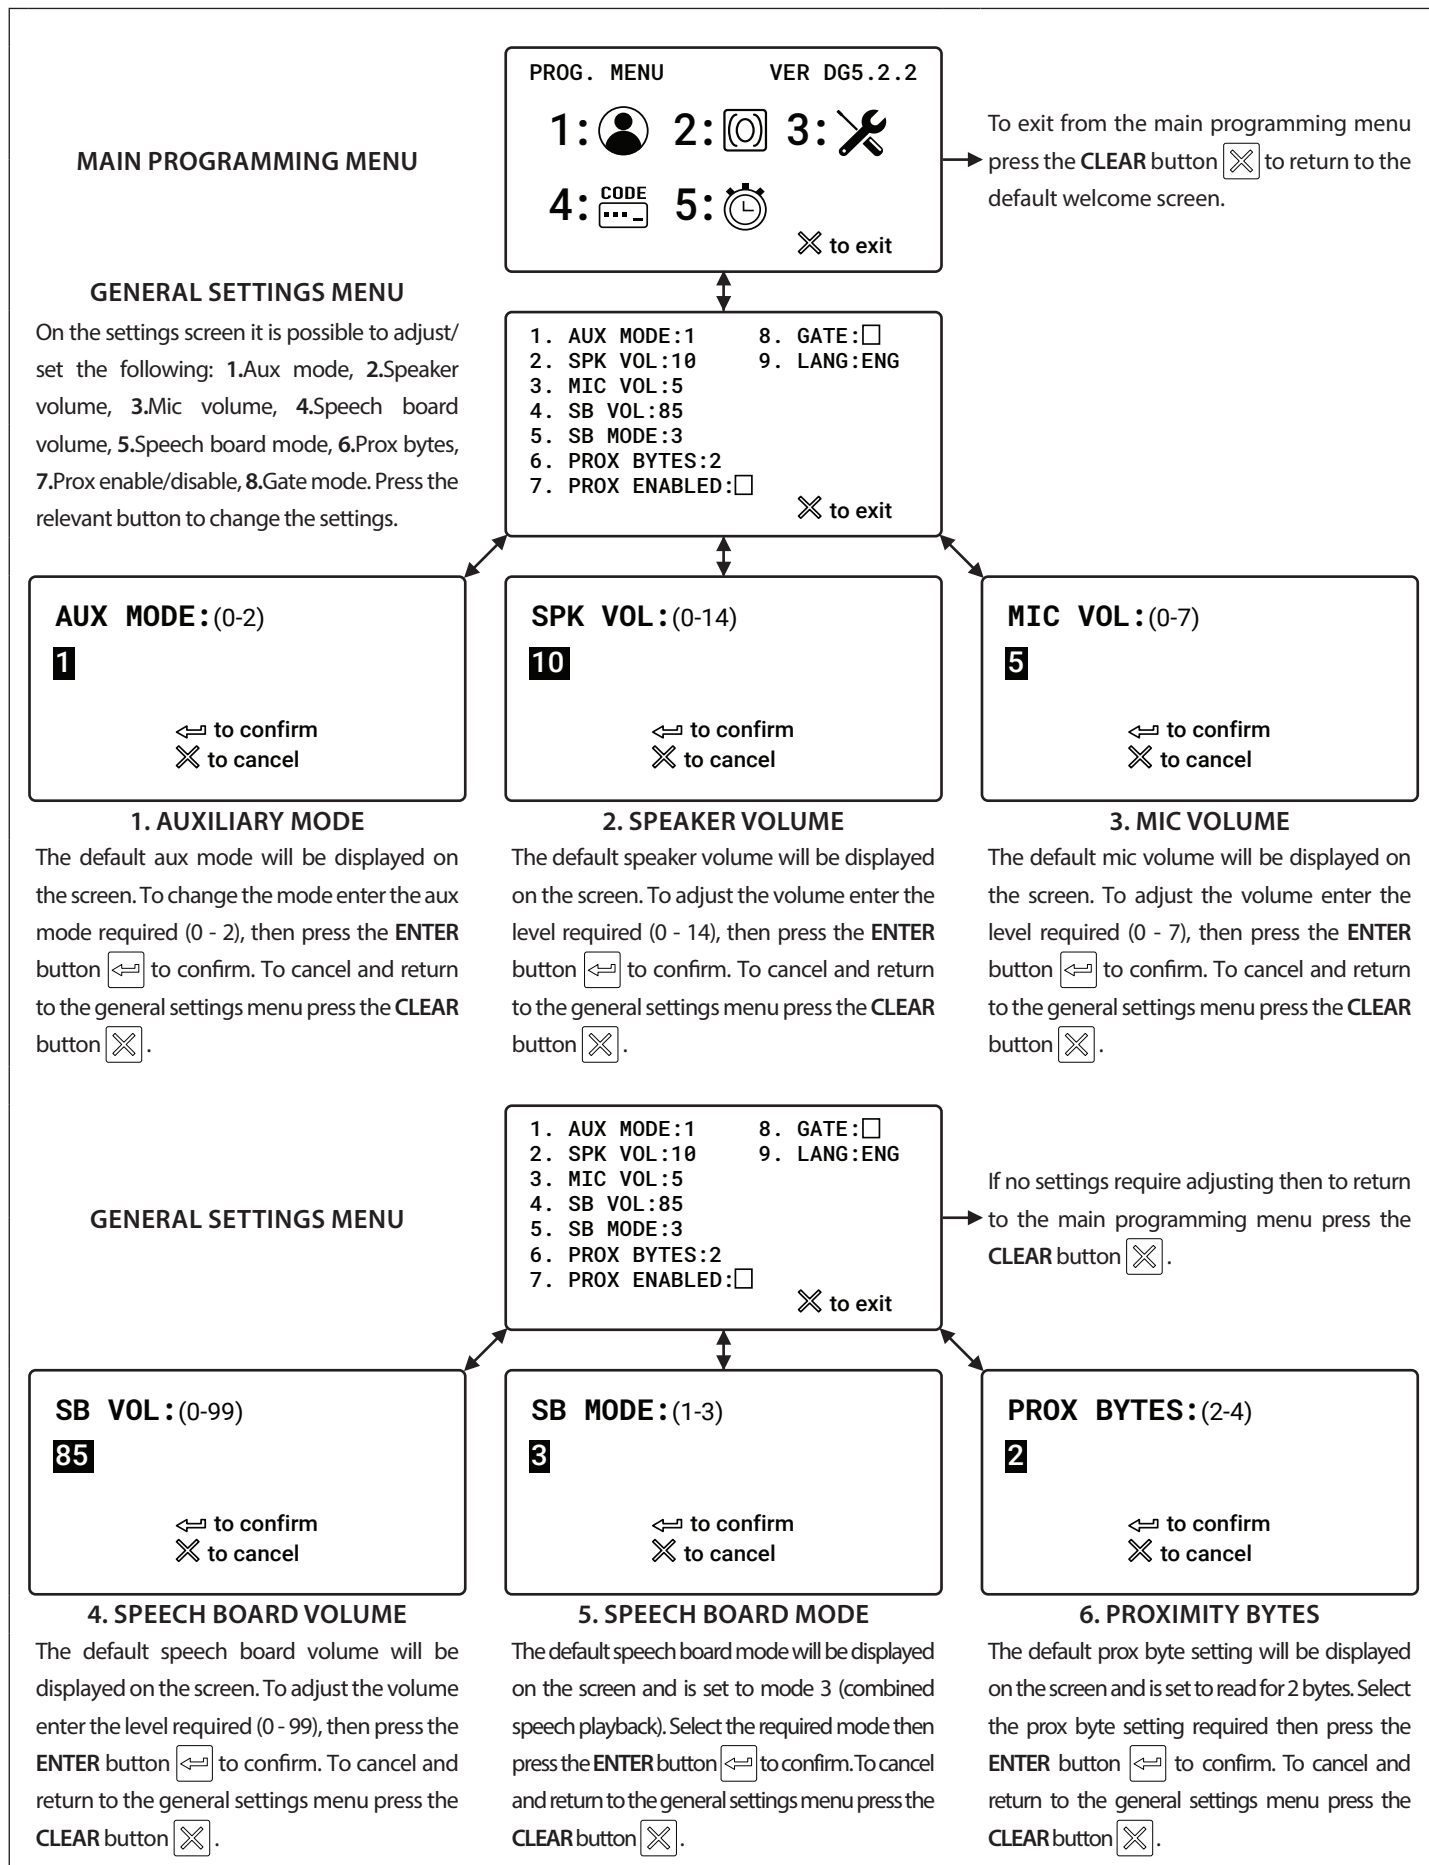


Programming Flowcharts

3. GENERAL SETTINGS (CONTINUED)

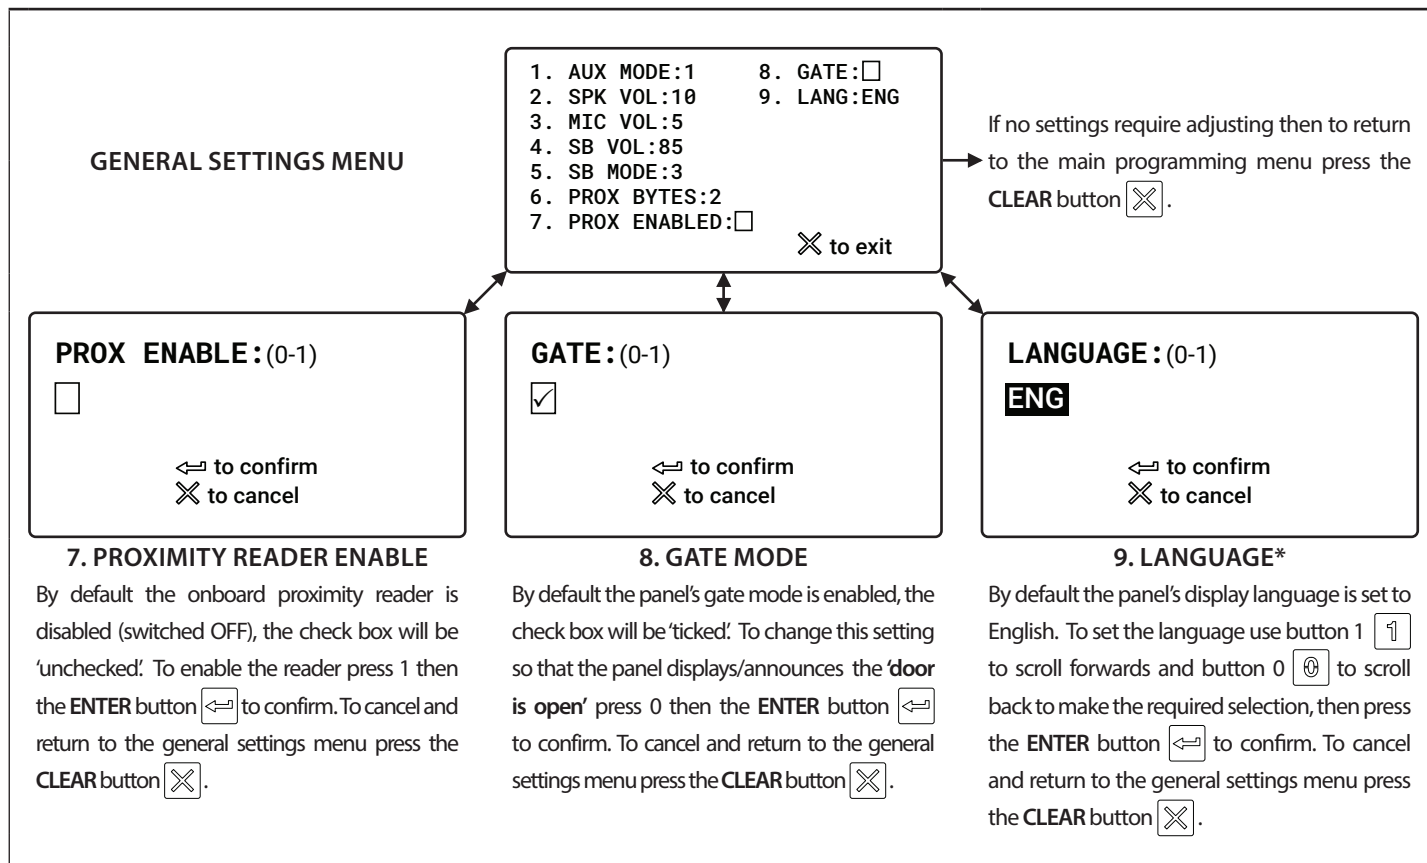


***IMPORTANT NOTE:** When setting the language only the panels on screen display messages (e.g. calling apartment 'nnn', enter number, door open etc.) will be shown in the chosen language. The digital GSM's on screen programming menus will still be displayed in English. Fig.70 shows an example of what the panel would display when calling an apartment if the language has been set to ITA (italian).

The list of supported languages (in scrolling order) : **ENG** (English); **ITA** (Italian); **SPA** (Spanish); **POR** (Portuguese); **FRA** (French); **GER** (German); **CZE** (Czech); **CRO** (Croatian); **DAT** (Dutch); **POL** (Polish); **SLO** (Slovenian); **DAN** (Danish); **NOR** (Norwegian) and **HEB** (Hebrew).

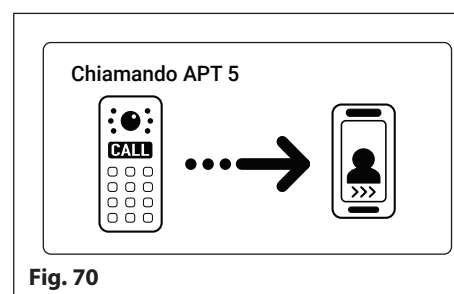


Programming Flowcharts

4. CODE MENU

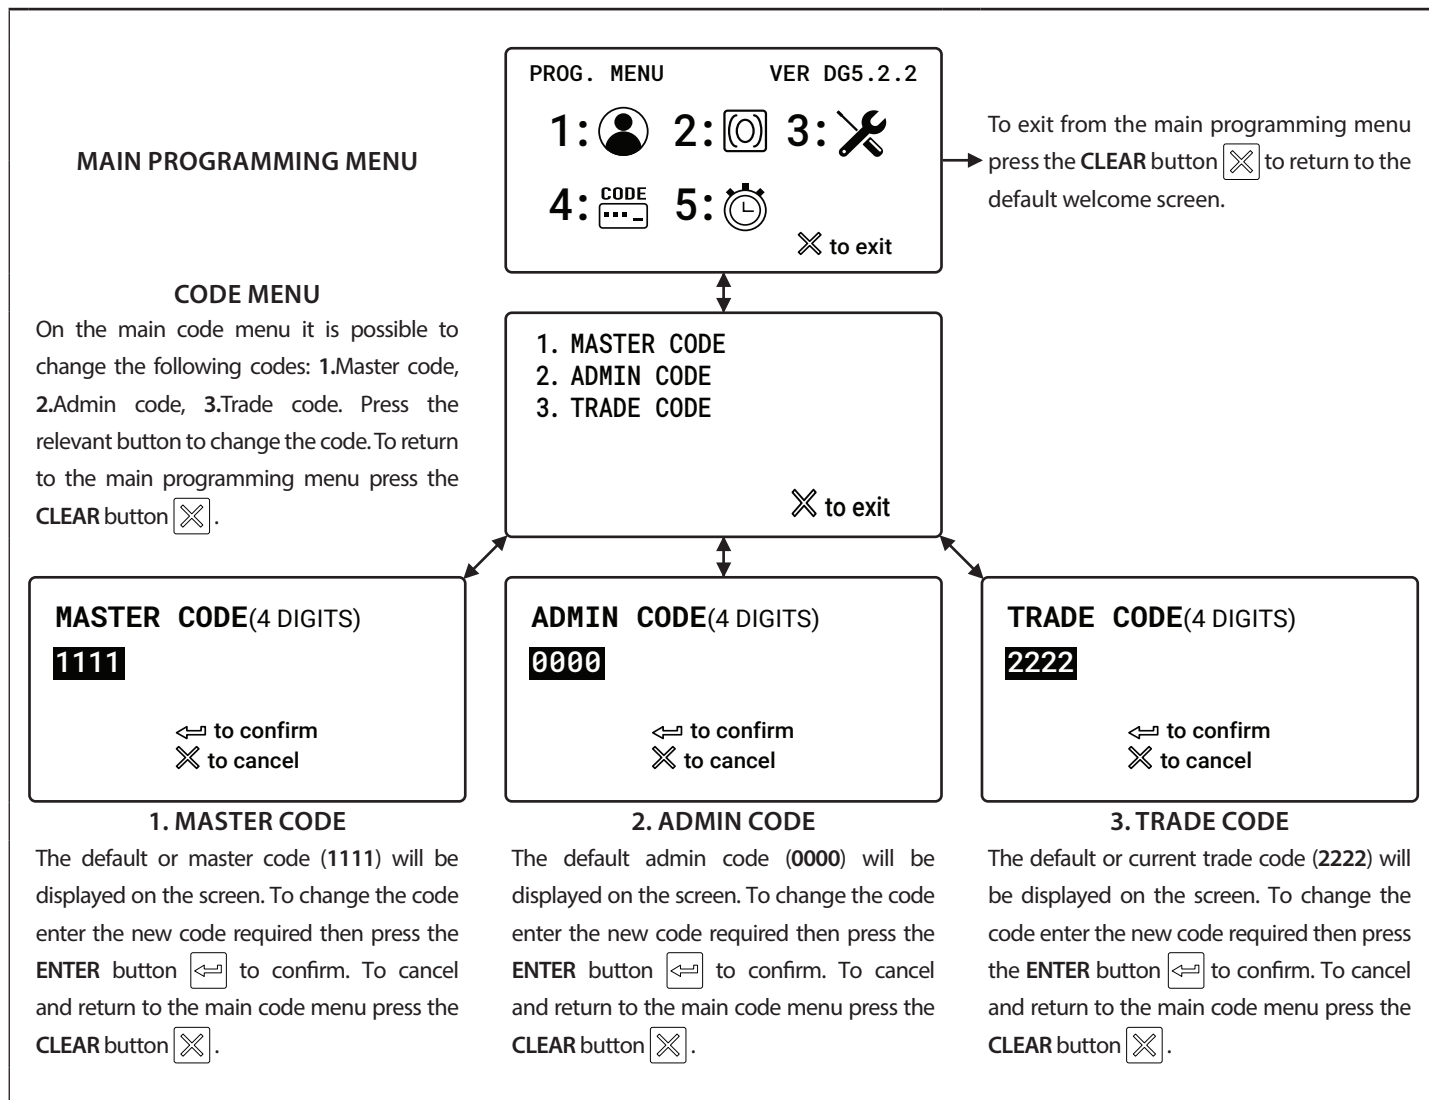

Programming Flowcharts

5. TIME SETTINGS MENU

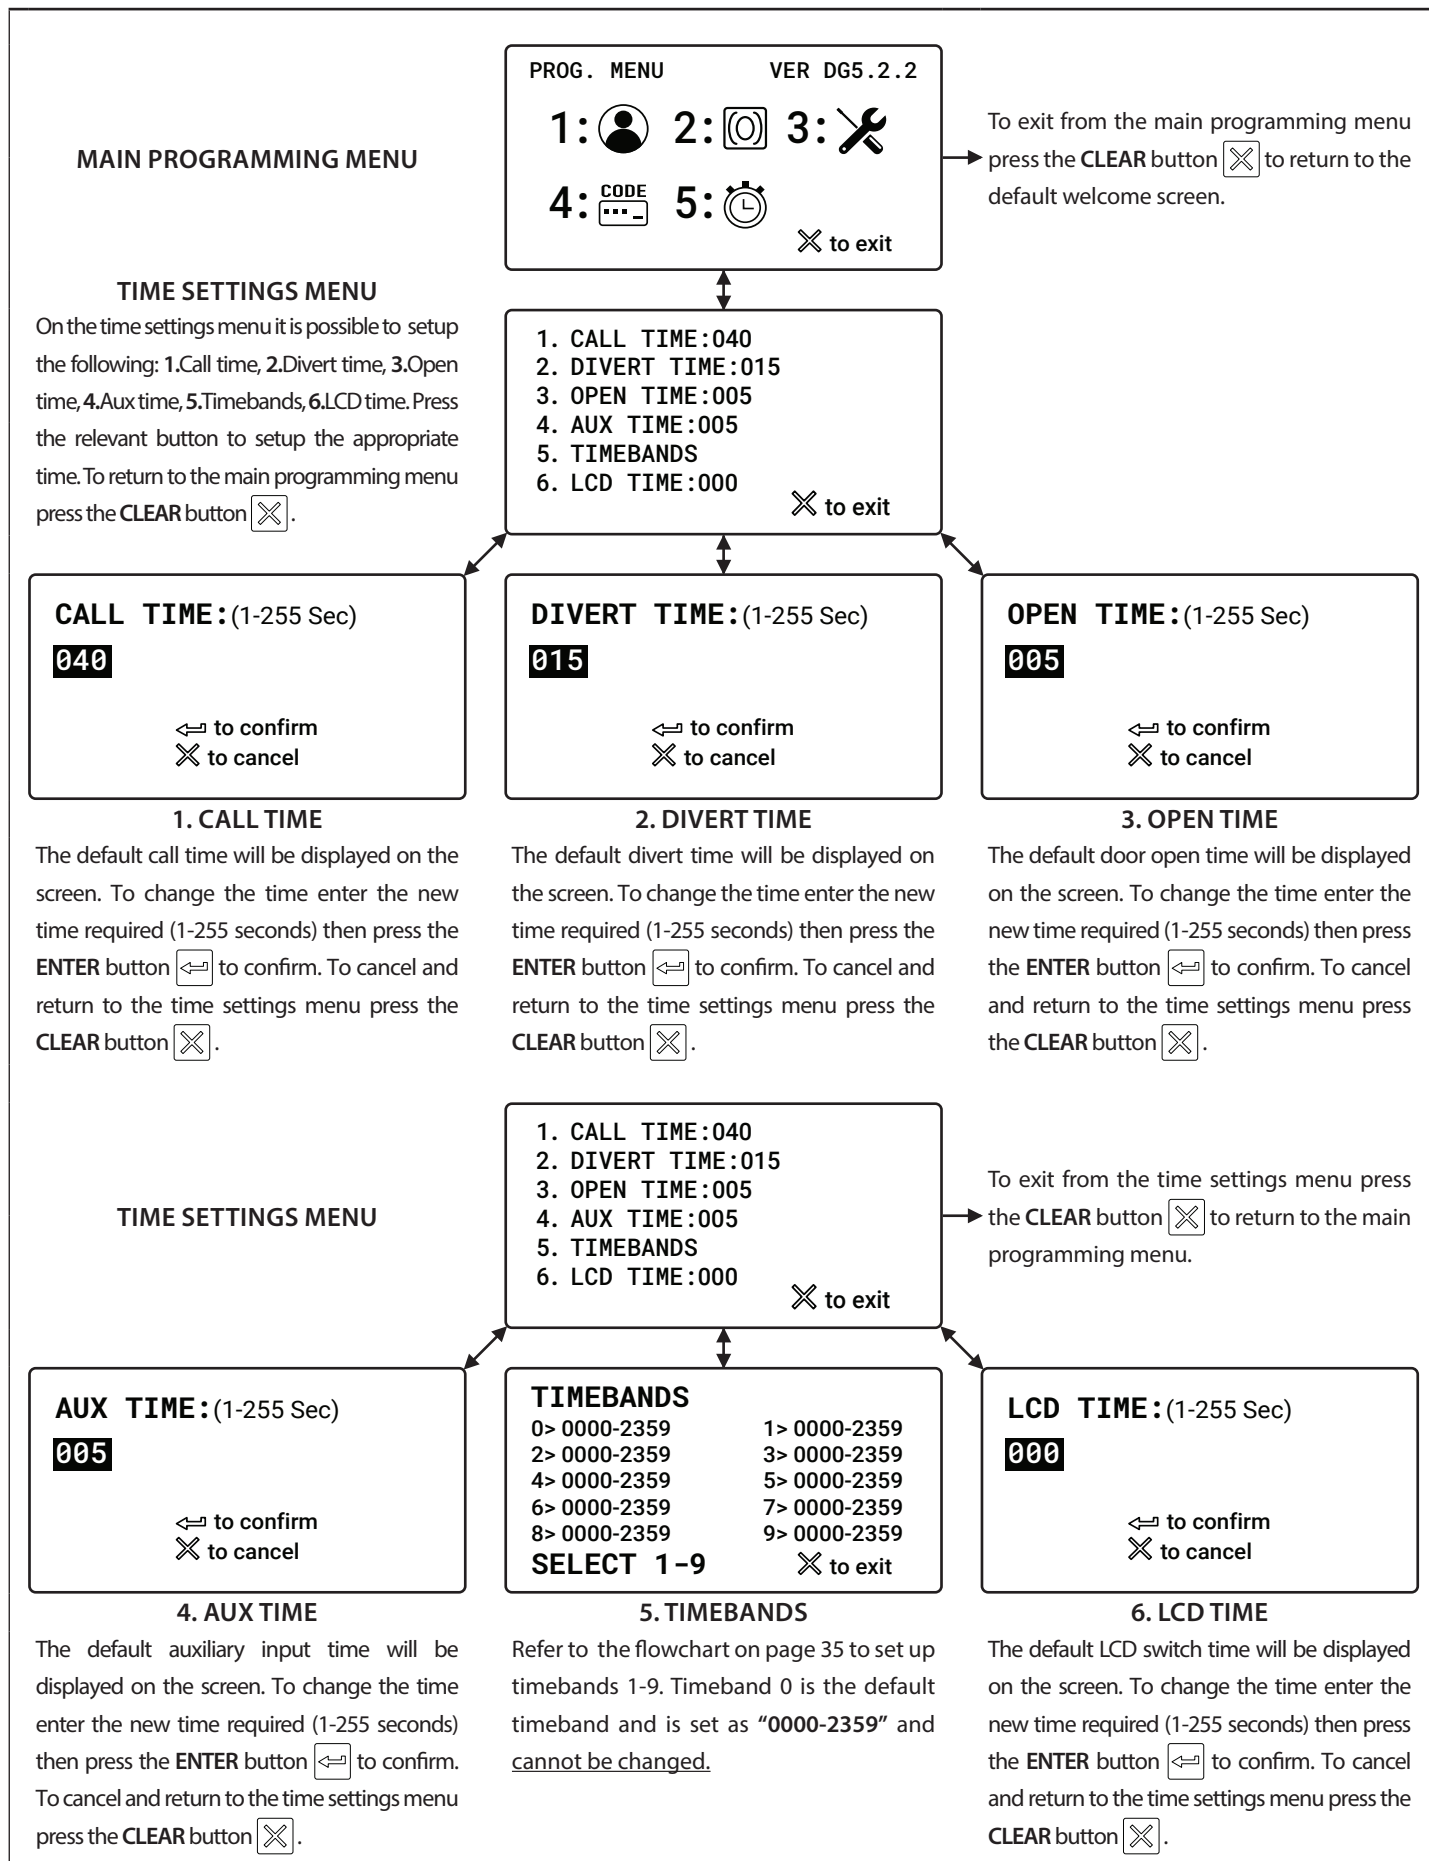



Programming Flowcharts

5. TIME SETTINGS MENU (CONTINUED)


TIME SETTINGS MENU

1. CALL TIME:040
2. DIVERT TIME:015
3. OPEN TIME:005
4. AUX TIME:005
5. TIMEBANDS
6. LCD TIME:000

 to exit

If no time settings require adjusting then to return to the main programming menu press the **CLEAR** button .

TIMEBAND LIST


From the timeband list it is possible to select a timeband that requires changing or setting up. Press the relevant button, from 1-9, to change the timeband required. If no timeband requires amending to return to the time settings menu press the **CLEAR** button .

*When entering a time period on the timebands screen the time must be entered using 24 hour clock notation, e.g. a timeband of 9:30am to 4:35pm would be entered as 09:30-16:35.

TIMEBANDS


- | | |
|--------------|--------------|
| 0> 0000-2359 | 1> 0000-2359 |
| 2> 0000-2359 | 3> 0000-2359 |
| 4> 0000-2359 | 5> 0000-2359 |
| 6> 0000-2359 | 7> 0000-2359 |
| 8> 0000-2359 | 9> 0000-2359 |


SELECT 1-9

 to exit



 TIMEBANDS

1>00:00-23:59

 to confirm

 to cancel

TIMEBAND SCREEN

The current time period will be displayed on the screen. To change the timeband use the alphanumeric keypad to enter the new timeband* required then press the **ENTER** button  to confirm. To cancel and return to the timeband list press the **CLEAR** button .

Programming Screens

MAIN PROGRAMMING MENU

From the main programming menu (refer to **Fig.71**) it is possible to access the following sub menus:

1. Apartment menu
2. Proximity menu
3. General settings menu
4. Code menu
5. Time settings menu

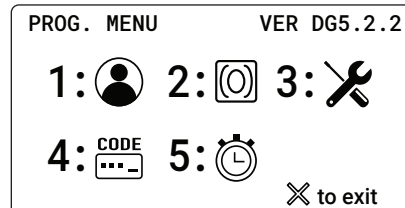


Fig. 71

ADMIN MENU

From the admin menu (refer to **Fig.72**) it is possible to only access the following two sub menus:

1. Apartment menu
2. Proximity menu

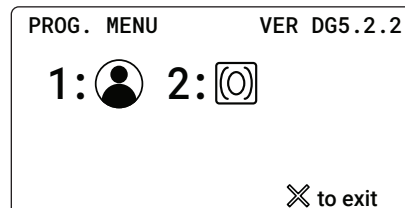


Fig. 72

Please note that the current firmware version of the digital GSM is shown in the top right corner of both the main programming and admin menus.

1.1 APARTMENT MENU (ADD/MODIFY APT) (person icon)

From the apartment menu (refer to **Fig.73**) it is possible to edit the following details:

1. Add or modify apartment details
2. Delete apartment details

Selecting option 1 from the apartment menu will first access the memory location screen and then from there the apartment information screen (refer to **Fig.74**).

The apartment information screen has 9 available options that allows the following information to be entered, enabled and/or assigned:

1. Apartment number (APT)
2. Door/gate access code (CODE)
3. Dial to open number enable (DTO)
4. Timeband assignment (TB)
5. Username (NAME)
6. Primary telephone number (TEL1)
7. First divert number (TEL2)
8. Second divert number (TEL3)
9. Third divert (TEL4)

1. ADD/MODIFY APT
2. DELETE APT

X to exit

Fig. 73

- | | |
|---------------------------------|---------|
| 1.APT: | 2.CODE: |
| 3.DTO: <input type="checkbox"/> | 4.TB: |
| 5.NAME: | |
| 6.TEL 1: | |
| 7.TEL 2: | |
| 8.TEL 3: | |
| 9.TEL 4: | |
| SELECT 1-9 | |

X to exit

Fig. 74

1.1.1 APARTMENT NUMBER (APT)

The apartment number can be entered on the apartment screen (refer to **Fig.75**) and can be made up of a maximum of 6 digits or letters (A - F only) or a combination of both e.g. apartment 100A, 100B etc.

APT:

↵ to confirm
X to cancel

Fig. 75

Programming Screens

1.1.2 DOOR/GATE ACCESS CODE

The door/gate access code can be entered on the code screen (refer to **Fig.76**) and can be made up of a maximum of 6 digits (no letters).

IMPORTANT NOTE: Remember if programming an access code into memory location '000' it will only operate the auxiliary output AO for the programmed AO time (A1T) and not the onboard relay. Please also note that activating the auxiliary output in this way is only possible when the auxiliary output mode A1M has been set to mode 001.

CODE :

↵ to confirm
 ✕ to cancel

Fig. 76

1.1.3 DIAL TO OPEN NUMBER (DTO)

The dial to open (DTO) number can be enabled on the DTO screen. Enter "1" to enable (set, refer to **Fig.77**) the dial to open number or "0" to disable (unset, refer to **Fig.78**) the dial to open number. When set the primary and 3 divert numbers are automatically set as dial to open numbers.

DTO : (1=SET, 0=UNSET)



↵ to confirm
 ✕ to cancel

Fig. 77

DTO : (1=SET, 0=UNSET)



↵ to confirm
 ✕ to cancel

Fig. 78

1.1.4 TIMEBAND (TB)

A timeband can be assigned, to an apartment or apartments for when they can be called, on the timeband assignment screen (refer to **Fig.79**). The default timeband setting is "0" (0000 - 2359), calls to the apartments are enabled all the time. Timeband "0" cannot be changed, timebands 1 - 9 are programmable and can be set on the timeband set up screen (refer to **Fig.111** and **Fig.112** on page 45).

TB:
 0

↵ to confirm
 ✕ to cancel

Fig. 79

1.1.4 USERNAME (NAME)

A username can be entered for an apartment on the username screen (refer to **Fig.80**). A maximum of 16 characters can be entered via the alpha-numeric keypad following the keypad programming table on page 28.

NAME :

-

↵ to confirm
 ✕ to cancel

Fig. 80

1.1.5 TELEPHONE NUMBERS (PRIMARY NUMBER AND 3 DIVERT NUMBERS)

Options 6 (TEL1), 7 (TEL2), 8 (TEL3) and 9 (TEL4) on the apartment information screen is where the primary telephone number and the 3 divert numbers can be programmed respectively (refer to **Fig.81**, **Fig.82**, **Fig.83** and **Fig.84**) and can be a maximum of 30 digits. If a landline number is being programmed then the full regional dialing code must be included as part of the telephone number.

TEL 1 :

↵ to confirm
 ✕ to cancel

Fig. 81

Programming Screens

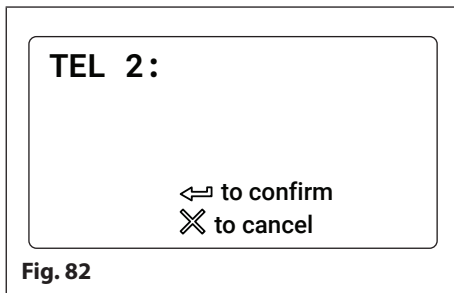


Fig. 82

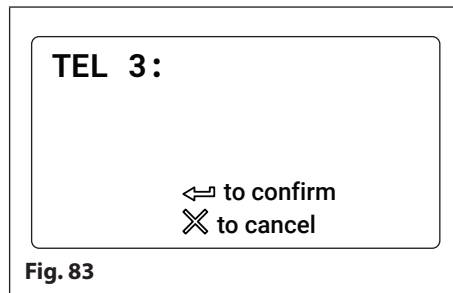


Fig. 83

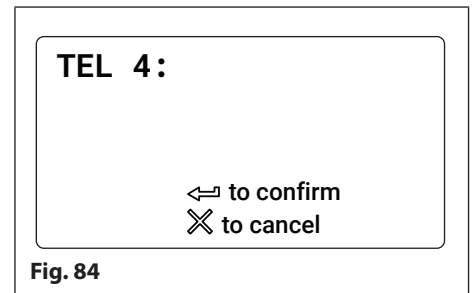


Fig. 84

1.2 APARTMENT MENU (DELETE APT)

Selecting option 2 from the apartment menu will access the memory location screen (refer to **Fig.85**). Enter the memory location of the apartment to delete and press the ENTER button. The deleted screen will appear (refer to **Fig.86**) to confirm the apartment details have been deleted and then return back to the apartment menu.

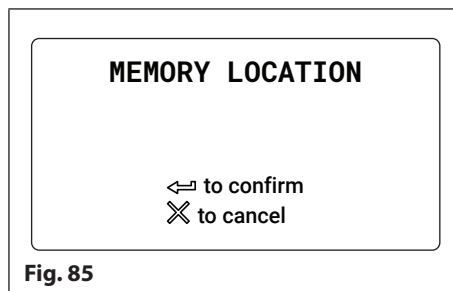


Fig. 85

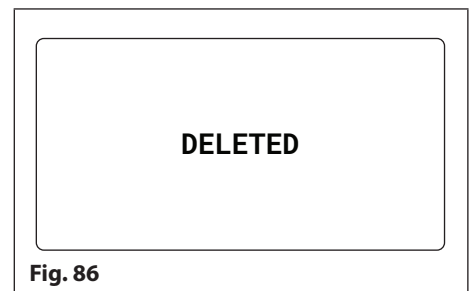


Fig. 86

IMPORTANT NOTE: When deleting a memory location all the user's information is deleted from the digital GSM intercom (telephone numbers, username, apartment number etc.).

2.1 PROXIMITY MENU (ADD/MODIFY FOB)

From the proximity menu (refer to **Fig.87**) it is possible to edit the following details:

1. Add or modify fob details
2. Delete fob details

Selecting option 1 from the proximity menu will first access the memory location screen (refer to **Fig.85**) and then from there the default present fob screen. The default present fob screen that the panel shows will depend on which prox byte setting the panel has been set to (refer to **Fig.88** for 2 bytes, **Fig.89** for 3 bytes and **Fig.90** for 4 bytes). The prox byte setting can be changed on the general settings screen, option 6. Also see prox byte notes on page 42.

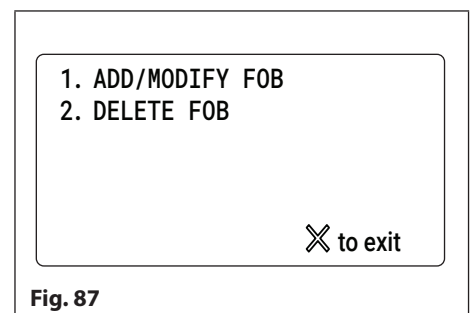


Fig. 87

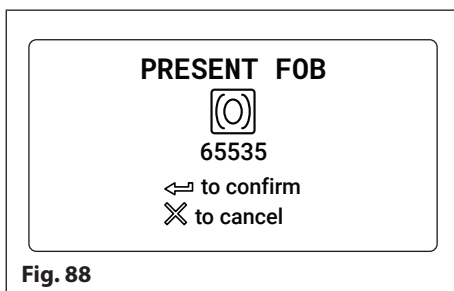


Fig. 88

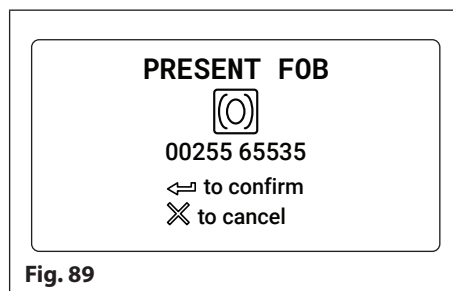


Fig. 89

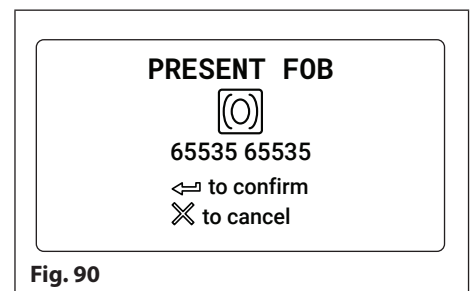


Fig. 90

When the present fob screen appears place the proximity fob towards the display, in front of the fob symbol, as shown in **Fig.91**. The display will show the fob number just below the fob symbol once it has read the fob. To confirm and save the details press the ENTER button and the screen will revert back to the proximity menu (see **Fig.87**).

IMPORTANT NOTE: Remember when programming a proximity fob/card into memory location '0000' it will only operate the auxiliary output AO for the programmed AO time (A1T) and not the onboard relay. Please also note that activating the auxiliary output in this way is only possible when the auxiliary output mode A1M has been set to mode 001.

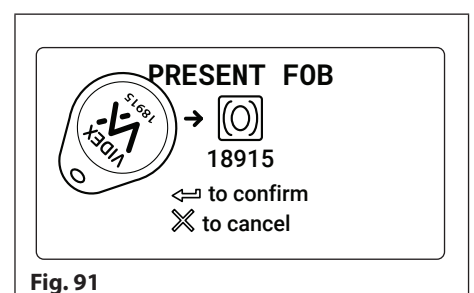


Fig. 91

2.2 PROXIMITY MENU (DELETE/FOB)


Selecting option 2 from the proximity menu will access the memory location screen (refer to **Fig.85**). Enter the memory location of the fob to delete and press the ENTER button. The deleted screen will appear (refer to **Fig.86**) to confirm the apartment details have been deleted and then revert back to the proximity menu.

Programming Screens

3 GENERAL SETTINGS MENU ✕

From the general settings menu (refer to **Fig.92**) it is possible to adjust the following panel settings:

1. Auxiliary mode
2. Speaker volume
3. Microphone volume
4. Speechboard volume
5. Speechboard mode
6. Proximity bytes
7. Proximity enable
8. Gate mode

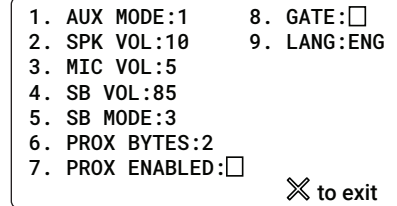

1. AUX MODE:1 8. GATE: ☐
 2. SPK VOL:10 9. LANG:ENG
 3. MIC VOL:5
 4. SB VOL:85
 5. SB MODE:3
 6. PROX BYTES:2
 7. PROX ENABLED: ☐ ✕ to exit


Fig. 92

After each menu option the current mode or setting for the panel is shown (on initial install the default modes and settings will be displayed as shown in **Fig.92**). Press the relevant button on the panel to select the menu option that requires adjustment.

3.1 AUXILIARY MODE (AUX MODE)

Selecting option 1 from the general settings menu will access the auxiliary mode screen (see **Fig.93**). From this screen the mode of the auxiliary output AI can be set. The current setting will be highlighted on the second line of the screen (see **Fig.93**). The default setting is set to mode 1. To set the AI mode select one of the following:

0. **On during a call** - the AI output will activate when a call begins and deactivate when the call ends.
1. **On when triggered (default mode)** - the AI output will only activate when button 6 on the telephone is pressed during a call.
2. **Call activated (timed)** - the AI output will activate when a call begins and deactivate when the auxiliary output time ends.

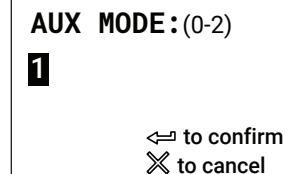


AUX MODE:(0-2)
1
 ⇐ to confirm
 ✕ to cancel

Fig. 93

To confirm and save the setting press the **ENTER** button and the screen will revert back to the general settings menu (refer to **Fig.92**).

3.2 SPEAKER VOLUME (SPK VOL)

Selecting option 2 from the general settings menu will access the speaker volume control screen (refer to **Fig.94**). On this screen the speaker volume of the GSM panel can be adjusted. The current setting will be highlighted on the second line of the screen (see **Fig.94**). The default speaker volume level is set to 5 and can be adjusted between 0 (low) up to 9 (high). Enter the volume level required then to confirm and save the setting press the **ENTER** button and the screen will revert back to the general settings menu (refer to **Fig.92**).

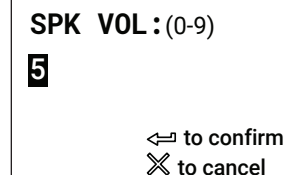


SPK VOL:(0-9)
5
 ⇐ to confirm
 ✕ to cancel

Fig. 94

3.3 MICROPHONE VOLUME (MIC VOL)

Selecting option 3 from the general settings menu will access the microphone volume control screen (refer to **Fig.95**). On this screen the microphone volume of the GSM panel can be adjusted. The current setting will be highlighted on the second line of the screen (see **Fig.95**). The default microphone volume level is set to 5 and can be adjusted between 0 (low) up to 9 (high). Enter the volume level required then to confirm and save the setting press the **ENTER** button and the screen will revert back to the general settings menu (refer to **Fig.92**).

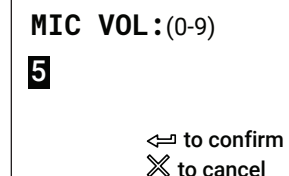


MIC VOL:(0-9)
5
 ⇐ to confirm
 ✕ to cancel

Fig. 95

Programming Screens

3.4 SPEECHBOARD VOLUME (SB VOL)

Selecting option 4 from the general settings menu will access the speechboard volume control screen (refer to **Fig.96**). On this screen the speechboard volume of the GSM panel can be adjusted. The current setting will be highlighted on the second line of the screen (see **Fig.96**). The default speechboard volume level is set to 85 and can be adjusted between 0 (low) up to 99 (high). Enter the volume level required then to confirm and save the setting press the **ENTER** button and the screen will revert back to the general settings menu (refer to **Fig.92**).

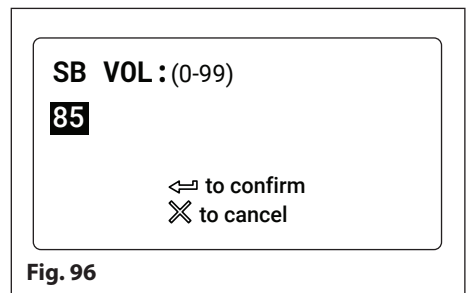


3.5 SPEECHBOARD MODE (SB MODE)

Selecting option 5 from the general settings menu will access the speechboard mode screen (refer to **Fig.97**). From this screen the speechboard mode can be set. The current setting will be highlighted on the second line of the screen (see **Fig.97**). Three modes are available: mode 1, 2 or 3 (see mode options below). The default setting is set to mode 3. To set the speechboard mode select one of the following:

MODE 1 - Speechboard disabled - the speechboard will be switched OFF (no speech annunciation will be heard through the panel's speaker).

MODE 2 - Individual speech playback - the speechboard will be switched ON. When an apartment is called the panel's speechboard will playback the individual numbers that make up an apartment number e.g. if calling apartment 25 the speech will playback "calling two five".

MODE 3 - Combined speech playback (default mode) - the speechboard will be switched ON. When an apartment is called the panel's speechboard will playback the combined numbers that make up an apartment number e.g. if calling apartment 36 the speech will playback "calling thirty six".

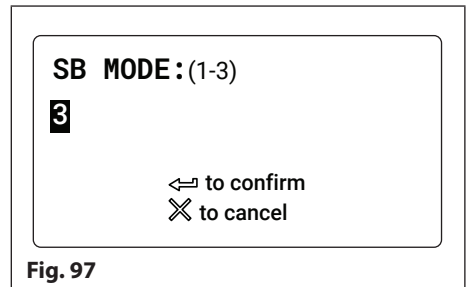

To confirm and save the setting press the **ENTER** button and the screen will revert back to the general settings menu (refer to **Fig.92**).


3.6 PROX BYTE SETTING (PROX BYTES)

Selecting option 6 from the general settings menu will access the proximity byte setting screen (refer to **Fig.98**). From this screen the number of proximity bytes that the onboard reader checks can be set. The current setting will be highlighted on the second line of the screen (see **Fig.98**). There are three byte settings that the panel's reader can be set to check for: 2, 3 or 4 bytes (see byte settings below). The default setting is set to check for 2 bytes. To set the number of bytes select one of the following:

2 Bytes (default setting) - set the panel to check for 2 bytes if the proximity fob/card has no site code and only a 5 digit user code (955/T fobs or 955/C cards).

3 Bytes - set the panel to check for 3 bytes if the proximity fob/card has a 3 digit site code and a 5 digit user code (PBX1E fobs or PBX2 cards).


4 Bytes - set the panel to check for 4 bytes for proximity fobs/cards that have a longer site code and a 5 digit user code.

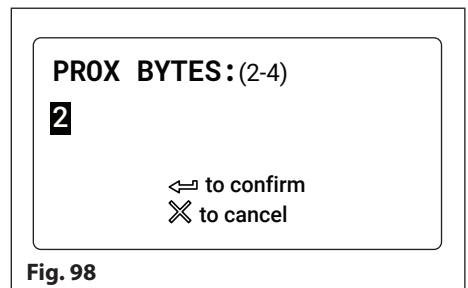

To confirm and save the setting press the **ENTER** button and the screen will revert back to the general settings menu (refer to **Fig.92**).

3.7 PROXIMITY READER ENABLE/DISABLE (PROX ENABLE)

Selecting option 7 from the general settings menu will access the proximity reader enable screen (refer to **Fig.99**). On this screen the proximity reader on the GSM panel can be switched ON and OFF. The current setting will be indicated on the second line of the screen with or without a tick in the check box (see **Fig.99**). By default the onboard reader will be switched OFF. Enter a "0" (reader switched OFF) to disable the reader or a "1" (reader switched ON) to enable the reader. To confirm and save the setting press the **ENTER** button and the screen will revert back to the general settings menu (refer to **Fig.92**).

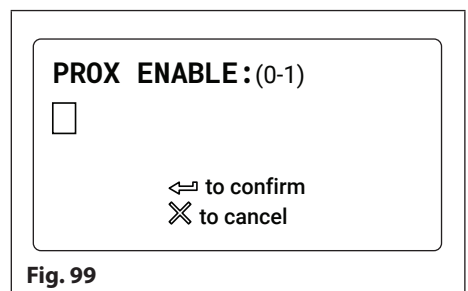

Programming Screens

3.8 GATE MODE (GATE)

Selecting option 8 from the general settings menu will access the gate mode screen (refer to **Fig.100**). On this screen the gate mode of the panel can be set. The current setting will be indicated on the second line of the screen with or without a tick in the check box (see **Fig.100**). By default the gate mode is set with the check box ticked. To set the gate mode enter one of the following:

- 0 - ☐ When set in this mode and the panel's onboard relay is activated the display will show that the door is open (refer to **Fig.122** on page 69). The speech annunciation (if the speechboard is switched ON) will announce "the door is open".
- 1 - ☒ When set in this mode and the panel's onboard relay is activated the display will show that the gate is open (refer to **Fig.123** on pages 69). The speech annunciation (if the speechboard is switched ON) will announce "the gate is open".

GATE : (0-1)



↵ to confirm
 ✕ to cancel




Fig. 100

To confirm and save the setting press the **ENTER** button and the screen will revert back to the general settings menu (refer to **Fig.92**).

3.9 LANGUAGE (LANG)

Selecting option 9 from the general settings menu will access the language selection screen (refer to **Fig.101**). On this screen the desired language can be selected. The current language setting will be highlighted on the second line of the screen (see **Fig.101**). By default English is already set.

It should be noted that only the panels on screen display messages (e.g. calling apartment 'nnn', enter number, door open etc.) will be shown in the chosen language. The digital GSM's on screen programming menus will still be displayed in English.

To set the language use button 1  to scroll forwards and button 0  to scroll back to make the required selection, then press the **ENTER** button  to confirm and the screen will revert back to the general settings menu (refer to **Fig.92**).

The list of supported languages (in scrolling order) : **ENG** (English); **ITA** (Italian); **SPA** (Spanish); **POR** (Portuguese); **FRA** (French); **GER** (German); **CZE** (Czech); **CRO** (Croatian); **DAT** (Dutch); **POL** (Polish); **SLO** (Slovenian); **DAN** (Danish); **NOR** (Norwegian) and **HEB** (Hebrew).

LANGUAGE : (0-1)

ENG

↵ to confirm
 ✕ to cancel

Fig. 101

4 CODE MENU

From the code menu (refer to **Fig.102**) it is possible to edit the following access codes:

1. Master code (by default is set to "1111")
2. Admin code (by default is set to "0000")
3. Trade code (by default is set to "2222")

Press the relevant button (1, 2 or 3) to change the required access code.

1. MASTER CODE
 2. ADMIN CODE
 3. TRADE CODE

✕ to exit

Fig. 102

4.1 MASTER CODE

Selecting option 1 from the code menu will access the master code screen (refer to **Fig.103**). On this screen the master code of the GSM panel can be changed. The current setting will be highlighted on the second line of the screen (see **Fig.103**). By default the master code is set to "1111" and can be changed to any 4 digit number, but must be kept as a 4 digit number. Enter the new code required then to confirm and save the setting press the **ENTER** button and the screen will revert back to the general settings menu (refer to **Fig.92**).

MASTER CODE(4 DIGITS)

1111

↵ to confirm
 ✕ to cancel

Fig. 103

Programming Screens

4.2 ADMIN CODE

Selecting option 2 from the code menu will access the admin code screen (refer to **Fig.104**). On this screen the admin code of the GSM panel can be changed. The current setting will be highlighted on the second line of the screen (see **Fig.104**). By default the admin code is set to "0000" and can be changed to any 4 digit number, but must be kept as a 4 digit number. Enter the new code required then to confirm and save the setting press the **ENTER** button and the screen will revert back to the general settings menu (refer to **Fig.92**).

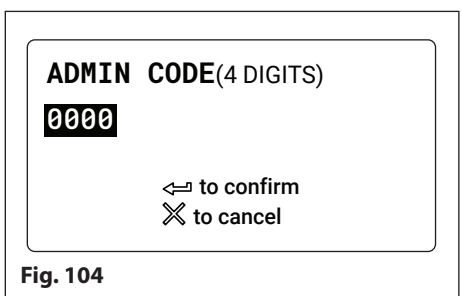


Fig. 104

4.3 TRADE CODE

Selecting option 3 from the code menu will access the trade code screen (refer to **Fig.105**). On this screen the trade code of the GSM panel can be changed. The current setting will be highlighted on the second line of the screen (see **Fig.105**). By default the trade code is set to "2222" and can be changed to any 4 digit number, but must be kept as a 4 digit number. Enter the new code required then to confirm and save the setting press the **ENTER** button and the screen will revert back to the general settings menu (refer to **Fig.92**).

IMPORTANT NOTE: The trade code will only operate when the TRD connection is shorted to 0V (GND).

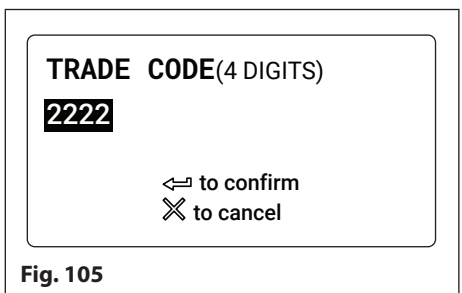


Fig. 105

5 TIME SETTINGS MENU

From the time settings menu (refer to **Fig.106**) it is possible to adjust the following panel settings:

1. Call time
2. Divert time
3. Open time
4. Aux time
5. Timebands
6. LCD time

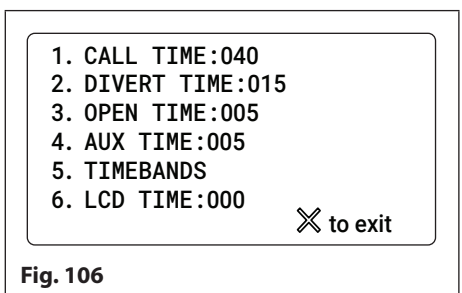


Fig. 106

After each menu option the current mode or setting for the panel is shown (on initial install the default modes and settings will be displayed as shown in **Fig.106**). Press the relevant button on the panel to select the menu option that requires adjustment.

5.1 CALL TIME

Selecting option 1 from the time settings menu will access the call time screen (refer to **Fig.107**). On this screen the call time of the GSM panel can be adjusted. The current setting will be highlighted on the second line of the screen (see **Fig.107**). The default call time is set to 40 seconds and can be adjusted from 1 second up to 255 seconds. Enter the call time required then to confirm and save the setting press the **ENTER** button and the screen will revert back to the time settings menu (refer to **Fig.106**).

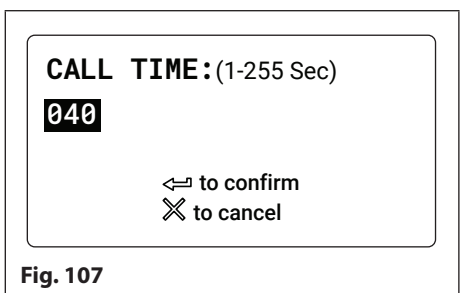


Fig. 107

5.2 DIVERT TIME

Selecting option 2 from the time settings menu will access the divert time screen (refer to **Fig.108**). On this screen the divert time of the GSM panel can be adjusted. The current setting will be highlighted on the second line of the screen (see **Fig.108**). The default divert time is set to 15 seconds and can be adjusted from 1 second up to 255 seconds. Enter the divert time required then to confirm and save the setting press the **ENTER** button and the screen will revert back to the time settings menu (refer to **Fig.106**).

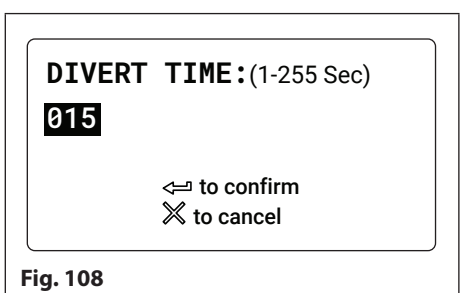


Fig. 108

Programming Screens

5.3 OPEN TIME

Selecting option 3 from the time settings menu will access the open time screen (refer to **Fig.109**). On this screen the door/gate open time of the GSM panel can be adjusted. The current setting will be highlighted on the second line of the screen (see **Fig.109**). The default divert time is set to 5 seconds and can be adjusted from 1 second up to 255 seconds. For latching mode set the relay time to 000 seconds. Enter the door/gate open time required then to confirm and save the setting press the **ENTER** button and the screen will revert back to the time settings menu (refer to **Fig.106**).

OPEN TIME:(1-255 Sec)

005

↵ to confirm
 ✕ to cancel

Fig. 109

5.4 AUX TIME

Selecting option 4 from the time settings menu will access the aux time screen (refer to **Fig.110**). On this screen the time that the auxiliary input stays active for can be adjusted. The current setting will be highlighted on the second line of the screen (see **Fig.110**). The default auxiliary time is set to 5 seconds and can be adjusted from 1 second up to 255 seconds. For latching mode set the relay time to 000 seconds. Enter the aux time required then to confirm and save the setting press the **ENTER** button and the screen will revert back to the time settings menu (refer to **Fig.106**).

AUX TIME:(1-255 Sec)

005

↵ to confirm
 ✕ to cancel

Fig. 110

5.5 TIMEBANDS

Selecting option 5 from the time settings menu will access the 1st timeband screen (refer to **Fig.111**). On this screen the timebands can be selected and then programmed on the next timeband screen. The GSM intercom has 9 programmable timebands (1 - 9). Timeband "0" is the default timeband and is permanently set from 0000 - 2359 and cannot be adjusted.

To enter a time period for one of the programmable timebands press the relevant button to make the selection. The display will access the 2nd timeband screen and the current time period will be highlighted on the second line of the display (refer to **Fig.112**).

Enter the time period required (using 24 hour clock notation, e.g. 4:35pm would be entered as 16:35). To confirm and save the setting press the **ENTER** button and the screen will revert back to the timebands list (refer to **Fig.111**).

It should be noted that the timebands set up on these screens can be assigned to a specific apartment or apartments (refer to **Fig.79** and notes on page 39).

The time settings entered within a timeband is the period of time that an apartment is available for a call. For any period of time outside of the programmed timeband and any call from the GSM intercom to the apartment is disabled, e.g. if timeband 1 is set between 10:00 to 14:35 and has been assigned to apartment 1, a call from the GSM intercom to apartment 1 during this time period will call through ok. Any attempt to call apartment 1 outside of these times then the GSM intercom will not call the apartment. During such an event the GSM intercom's speechboard (if switched ON) will announce **"the phone is switched off, please try later"**. The display will indicate this as shown in **Fig.113**.

TIMEBANDS

0> 0000-2359	1> 0000-2359
2> 0000-2359	3> 0000-2359
4> 0000-2359	5> 0000-2359
6> 0000-2359	7> 0000-2359
8> 0000-2359	9> 0000-2359

SELECT 1-9 ✕ to exit

Fig. 111

TIMEBANDS

1>00:00-23:59

↵ to confirm
 ✕ to cancel

Fig. 112

PHONE OFF

Fig. 113

Programming Screens

5.6 LCD TIME

Selecting option 6 from the time settings menu will access the LCD time screen (refer to **Fig.114**). On this screen the switch time of the GSM's LCD display can be adjusted. The LCD time of the GSM is the time delay of when the GSM display switches between the default welcome screen (see **Fig.40** for Art.4812 and **Fig.41** for Art.4812R on page 22) and a custom welcome screen or logo which has been uploaded to the panel using the GSMSK PC software.

The current setting will be highlighted on the second line of the screen (see **Fig.114**). The default LCD time is set to 000 (0 seconds = LCD switch time disabled) and can be adjusted from 0 seconds up to 255 seconds. Enter the LCD switch time required then to confirm and save the setting press the **ENTER** button and the screen will revert back to the time settings menu (refer to **Fig.106**).

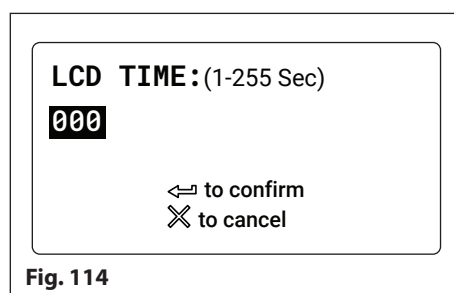


Fig. 114

Programming via Text Message

PROGRAMMING THE DIGITAL GSM INTERCOM

Programming the 4G digital GSM can also be carried out by sending text (SMS) messages.

IMPORTANT NOTE: When you are required to use " in a text message it is important to use the correct symbol and not for example ' (or two ' single apostrophes side by side which may look the same but will be interpreted differently by the digital GSM).

PROGRAMMING BY TEXT MESSAGE

Programming by text message is a simple way to customise the settings of the digital GSM panel and to add or delete apartment programming remotely. This can include changing apartments telephone numbers, access codes, names or other settings. If a large number of telephone numbers need to be programmed it may be easier with the **GSMSK** PC software, refer to the manual **GSMSK_66251720-EN_V2-2** (or later).

Simply send texts in the following format shown below to the telephone number of the SIM within the digital GSM panel:

<4 DIGIT MASTER CODE> <3 DIGIT FUNCTION CODE> <OPTIONAL DATA> <OPTIONAL ?>

4 DIGIT MASTER CODE

This code prevents unauthorised access to the programmable features of the system. The code must be four digits long but can be any combination using digits 0 – 9. The default master code is 1111 and will be used for all examples in this manual.

3 DIGIT FUNCTION CODE

The 3 digit function code identifies the programmable feature to be changed. The code must be in capital letters. The following table lists the available codes.

DESCRIPTION	CODE	EXAMPLE	SETTINGS	DEFAULT	PAGE
Programming and storing user information in a new memory location	MEM	1111MEMnnn"1stNo.,"Div1", "Div2","Div3","AptNo.,"Code", DTO,TB,"Name"	See notes and example on pages 48 - 49	n/a	49 - 50
Store or change an apartment code	STC	1111STCn:"cccccc"	n = <apt no.> cccccc = code	n/a	50 - 51
Enable/disable an apartment DTO setting	STO	1111STOn:O	n = <apt no.> O = 0 or 1	n/a	51
Store a temporary dial to open no. (DTO), store up to 32 temp no's max.	TDR	1111TDR"tele"T? (note: if T is omitted default time T = 8 hours)	tele = tel no. to store T = 1 - 255 hrs	n/a	51
Assign a timeband TB to an apartment	STB	1111STBn:B	n = <apt no.> B = 1-9	n/a	51
Store or change an apartment name	STT	1111STTn:"tttttttttttttt"	n = <apt no.> tttttttttttttt = Name. Use a > to represent a space	n/a	51 - 52
Store a primary telephone no.	STN	1111STNn:"yyyyyyyyyy"	n = <apt no.>	n/a	52 - 53
Store divert 1 telephone no.	STD	1111STDn:"yyyyyyyyyy"	yyyyyyyyyy = telephone no. 30 digits max.	n/a	52 - 53
Store divert 2 telephone no.	STE	1111STEn:"yyyyyyyyyy"		n/a	52 - 53
Store divert 3 telephone no.	STF	1111STFn:"yyyyyyyyyy"		n/a	52 - 53
Store a primary telephone no. and divert no's in a single text message	STN	1111STNn:"pn","d1","d2","d3" 1111STNn:"01912243174", "01912241559","01912243678", "01912245326"	n = <apt no.> pn = primary no. d1 = divert 1 no. d2 = divert 2 no. d3 = divert 3 no.	n/a	53
Set call time	SPT	1111SPTnnn	nnn = 001 - 255	040 (40s)	53
Set relay time	RLT	1111RLTnnn	nnn = 001 - 255	005 (5s)	53
Set auxiliary output AO time	A1T	1111A1Tnnn	nnn = 001 - 255	005 (5s)	53 - 54
Set auxiliary output AO mode	A1M	1111A1Mnnn	nnn = 000 - 001	001	54
Divert time	DIT	1111DITnnn	nnn = 001 - 099	015 (15s)	54
Check GSM signal strength	SIG	1111SIG?	n/a	n/a	54
Check firmware version	VER	1111VER?	n/a	n/a	54
Forced dial/dial a number	DLE	1111DLE"123"	n/a	n/a	54 - 55
Change 4 digit master code	CDE	1111CDE1234	Any 4 digits	1111	55
Change 4 digit admin code	CDA	1111CDA1234	Any 4 digits	2222	55
Change 4 digit trade code	CDT	1111CDT1234	Any 4 digits	0000	55

Programming via Text Message

Trigger the relay	RLY	1111RLY	n/a	n/a	55
Trigger auxiliary output AO	A1O	1111A1O	n/a	n/a	55
Store balance check dial string	SDL	1111SDL"##1345#"	n/a	n/a	55 - 56
Check credit balance	BAL	1111BAL?	n/a	n/a	56
Store a master telephone no.	STM	1111STM"07771234567"	n/a	n/a	56
Latch the relay	RLA	1111RLA	n/a	n/a	56
Unlatch the relay	RUL	1111RUL	n/a	n/a	56
Latch auxiliary output AO	A1L	1111A1L	n/a	n/a	56
Unlatch the auxiliary output AO	A1U	1111A1U	n/a	n/a	56
Store a timeband (for apartment calls and dial to open no's.)	TBA	1111TBA"06002300"	HHMMHHMM	00002359	57
Check/set date & time	CLK	1111CLK"yy/mm/dd,hh:mm"?	yy/mm/dd,hh:mm	n/a	57
Silent dialling mode	AUE	1111AUEnnn	nnn = 000 or 001	001	57 - 58
Enable dial 0 on answer function	EDZ	1111EDZnnn?	nnn = 000 or 001	000	58
Enable the # (hash) function	ED#	1111ED#nnn?	nnn = 000 or 001	000	58
Enable proximity reader	EPR	1111EPRnnn?	nnn = 000 or 001	000	58
Proximity number of bytes to check	PBY	1111PBYnnn?	nnn = 002, 003 or 004	002	58 - 59
Store a fob/card in a known location <u>or</u> the next available location	FOB	1111FOBnnnn"site","user" <u>or</u> 1111FOB"site","user"	nnnn = 0000-1999 <u>or</u> nnn - optional	n/a	59 - 60
Find a fob or card	FDF	1111FDF"nnnnn"?	n/a	n/a	60
Delete a fob or card without knowing its location	DEF	1111DEF"12345"?	n/a	n/a	60
Free access timebands including output setup with latch or momentary trigger	FRE	1111FREn"HHMMHHMM",days:m:o	n = 0 - 9 HHMMHHMM days = Mo, Tu, We, Th, Fr, Sa, Su, AD, WD and WE m = L or M o = RL, A1	n/a	60 - 61
Clear all free access timebands	FRD	1111FRD?	n/a	n/a	61
Disable (001), enable individual (002) or enable combined (003) speech board	SBM	1111SBMnnn?	nnn = 001, 002 or 003	003	61
Set speech board volume	SBV	1111SBVnnn?	nnn = 000 - 099	75	61 - 62
Find a telephone number	FDT	1111FDT"number or ends in"?	n/a	n/a	62
End on Last Divert	EOD	1111EODnnn?	nnn = 000 or 001	000	62
Door or Gate	GAT	1111GATnnn?	nnn = 000 or 001	001	62 - 63
Shutdown and Restart	RBT	1111RBT	n/a	n/a	63
Obtain the GSM's IMEI number	IME	1111IME?	n/a	n/a	63
Unlatch prevention feature	LLA	1111LLAnnn?	nnn = 000 or 001	000	63
Network connection indication	CON	1111CON?	n/a	n/a	63 - 64
Setup the digital GSM for data communication	APN	1111APN"apn","username","password"?	n/a	n/a	64
Store a username & password for each GSM for online events	PAS	1111PAS"username","password"?	n/a	n/a	64 - 65
Enable online events for the digital GSM module	ENE	1111ENEnnn?	nnn = 000 or 001	000	65
Setup port forwarding for connection to a Server	SER	1111SER"IP","PORT"?	n/a	n/a	65
Source of time/date updates	NTZ	1111NTZnnn?	nnn = 000, 001 or 002	001	65 - 66

Programming via Text Message

UTC Time Zone for countries ahead of UTC	TZ+	1111TZ+nnn?	nnn = 000 - 048	000	66
UTC Time Zone for countries behind UTC	TZ-	1111TZ-nnn?	nnn = 000 - 048	000	66 - 67
Daylight savings time adjustment	DST	1111DSTnnn?	nnn = 000 or 001	001	67
Send global announcement feature	SGA	1111SGA"text"	text = up to 150 characters max.	n/a	67
Activate remote relay output (relay, aux A1 or aux A2)	RLN	1111RLNnn? or 1111RLNnaa?	nnn = 00 - 63 (ID) a = 1 (relay), 2 (A1) or 3 (A2)	n/a	67

OPTIONAL DATA

The optional data will vary depending on the command used. It may be a telephone number, a time setting or may not be used at all. For more information refer to the following command settings.

OPTIONAL ?

Most of the commands support the ? feature. When this is added to the end of the text message, a confirmation text message will be sent back to the sender indicating the new data has been received and stored.

When sending text messages there may be a delay from when you send the message to when it is received by the digital GSM intercom depending on how congested the network is. If you are at the door panel when sending the message you will here a single beep from the digital GSM intercom to indicate it has received the message.

PROGRAMMING AND STORING USER INFORMATION IN A NEW MEMORY LOCATION (MEM)

The memory location in the digital GSM is simply a position within the GSM's internal memory where the user's apartment information is stored. Up to 750 user's can be stored in the digital GSM (memory locations 000 - 749).

There are 9 parts of user information that is stored in a memory location:

1. Apartment number (**APT**);
2. Door/gate access code (**CODE**);
3. Dial to open number/setting (**DTO/STO**);
4. Timeband assignment (**TB**);
5. Username (**NAME**);
6. Primary telephone number (**TEL1/STN**);
7. First divert number (**TEL2/Div1/STD**);
8. Second divert number (**TEL3/Div2/STE**);
9. Third divert number (**TEL4/Div3/STF**).

IMPORTANT NOTE: Remember if programming an access code into memory location '000' it will only operate the auxiliary output AO for the programmed AO time (A1T) and not the onboard relay. Also note that activating the auxiliary output in this way is only possible when the auxiliary output mode A1M has been set to mode 001.

Please also note that for the 1000 user version (000 - 999) TEL3 second divert and TEL4 third divert is not applicable.

IMPORTANT NOTE: It is important to remember that before any specific user information can be changed, e.g. apartment number, telephone numbers etc., these details must first be stored in a memory location in the digital GSM. Without this initial information no changes can be made as there would be no user information stored in the GSM's memory to change or edit.

To store a user's information in a memory location the SMS message must be sent in the following format:

1111MEMnnn"TEL1","TEL2","TEL3","TEL4","APT","CODE",DTO,TB,"NAME"?

where:

- **1111** = 4 digit code;
- **MEM** = 3 digit function code;
- **nnn** = memory location (from 000 - 749);
- **TEL1** = primary telephone number (30 digits maximum);
- **TEL2** = first divert number Div1 (30 digits maximum);
- **TEL3** = second divert number Div2 (30 digits maximum);
- **TEL4** = third divert number Div3 (30 digits maximum);
- **APT** = apartment number (maximum of 6 digits including letters A - F);
- **CODE** = door/gate access code (maximum of 6 digits);
- **DTO** = dial to open enable (enter 1 to enable, leave blank or enter 0 to disable);
- **TB** = timeband assignment (from 1 - 9, leave blank or enter 0 for default timeband);
- **NAME** = username (maximum of 16 characters where the > character can be used to insert a space between characters or words).

Programming via Text Message

Where shown, (in the example above) the quotation marks " and commas , must be included as part of the line of programming text with no spaces. The ? at the end of the message is optional if a confirmation text is required. The following text messages that can be sent to the digital GSM to program/store are as follows:

1111MEMnnn"TEL1","TEL2","TEL3", "TEL4","APT","CODE",DTO,TB, "NAME"?	Store the primary telephone number TEL1, first divert TEL2, second divert TEL3, third divert TEL4, apartment number APT, door/gate access code CODE, dial to open enable DTO, timeband assignment TB and username NAME in memory location nnn. A text message will be sent to the sender with the stored information for that memory location. Where nnn = memory location 000 - 749.
1111MEMnnn?	Query the apartment details stored in memory location nnn, where nnn = memory location 000 - 749.

The following example shows how to program a user's details:

Example 1: To program the following user's information: primary telephone number 01912243174, first divert 07791123456, second divert 07897654321, third divert 07999532641, apartment no. 123, door/gate access code 654321, dial to open enabled, timeband 3, username Videx Tech in memory location 150 and receive a confirmation text, the following SMS message can be sent.

1111MEM150"01912243174","07791123456","07897654321","07999532641","123","654321",1,3,"Videx>Tech"?

Note that quotation marks " and commas , are used where appropriate and the > character is used to insert a space between the words Videx and Tech for the username. The optional ? is included at the end so a confirmation text is sent back to the sender.

The digital GSM will store the above information in memory location 150 and send the following confirmation text back to the sender:

**MEM 150 APT = 123 CODE = 654321
 DTO = 1 TB = 3 NAME = Videx Tech
 TEL = 01912243174 TEL (DIVERT 1) = 07791123456
 TEL (DIVERT 2) = 07897654321 TEL (DIVERT 3) = 07999532641
 OK VIDEX 4G**

Using the same **MEM** programming command it is also possible to change all or only part of the user's details as well as delete part of a user's details that may no longer be required. To leave a particular user detail or setting unchanged simply don't enter anything in that section of the command but remember to add a comma ,. To delete part of the user's details simply use two quotation marks "" next to each other in that section of the **MEM** programming command.

Using the same user details from the previous example the next example shows how to change and delete only part of the user's details in memory location 150.

Example 2: If the user only needs to delete the door/gate access code, delete the third divert number and no longer requires the dial to open feature enabled and receive a confirmation text, the following SMS message can be sent.

1111MEM150,,,,,"",0,,?

Note that two quotation marks "" are used next to each other to delete a particular detail and commas , are used where details remain unchanged. The optional ? is included at the end so a confirmation text is sent back to the sender.

The digital GSM will amend the above information in memory location 150 and send the following confirmation text back to the sender:

**MEM 150 APT = 123 CODE =
 DTO = 0 TB = 3 NAME = Videx Tech
 TEL = 01912243174 TEL (DIVERT 1) = 07791123456
 TEL (DIVERT 2) = 07897654321 TEL (DIVERT 3) =
 OK VIDEX 4G**

STORE OR CHANGE AN APARTMENT CODE (STC)

Each apartment can have a unique door/gate access code programmed which can be a maximum of up to 6 digits (also refer to the notes door/gate access code on page 39). The following text messages can be used to store/change, delete and query the access code stored for an apartment.

1111STCn:"cccccc"	Store a door/gate access code cccccc for apartment n, where cccccc = code (up to 6 digits max.) and n = apartment number.
1111STCn:"cccccc"?	Store a door/gate access code cccccc for apartment n, where cccccc = code (up to 6 digits max.) and n = apartment number. Also send a confirmation text back to the sender.

Programming via Text Message

1111STCn:'''	Delete a door/gate access code cccccc for apartment n, where cccccc = code (up to 6 digits max.) and n = apartment number.
1111STCn:'''?	Delete a door/gate access code cccccc for apartment n, where cccccc = code (up to 6 digits max.) and n = apartment number. Also send a confirmation text back to the sender.
1111STCn:?	Query the door/gate access code stored for apartment n, where n = apartment number. Also send a confirmation text back to the sender.

IMPORTANT NOTE: Remember that the apartment number n can be up to 6 digits in length including letters A - F.

ENABLE/DISABLE AN APARTMENTS DTO (DIAL TO OPEN) SETTING (STO)

Each apartment can have their programmed telephone numbers set up as dial to open numbers. Once this feature is enabled for an apartment all the numbers stored for that apartment (primary and 3 divert numbers) will be set as dial to open numbers. If a user calls from any of the stored numbers the digital GSM will see that they are dial to open numbers and drop the call but activate the onboard relay to trigger the door/gate.

IMPORTANT NOTE: It is important to switch OFF voicemail and automatic SMS features on the SIM card in the digital GSM when using this feature (see the 'Forced Dial' DLE section for more details). Also note that it will not be possible to use the dial in to speak facility from a number stored to release the door/gate when dialling in (door release takes priority, refer to the priority function table on page 73).

Please also note it is important that the numbers stored, when dialling in to release the door/gate, must have any "caller ID" or "withheld number" function switched OFF on the telephone/mobile that is making the call to the digital GSM. If this feature is not switched OFF the GSM intercom will not recognise the caller's number and simply end the call with no action taken.

By default this feature is disabled (switched OFF). The following text messages can be used to enable or disable the dial to open feature.

1111STOn:O	Set the dial to open feature O for apartment n, where n = apartment number, O = 0 disabled (switched OFF) or O = 1 enabled (switched ON).
1111STOn:O?	Set the dial to open feature O for apartment n, where n = apartment number, O = 0 disabled (switched OFF) or O = 1 enabled (switched ON). Also send a confirmation text back to the sender.
1111STOn:?	Query the dial to open setting for apartment n, where n = apartment number, O = 0 disabled (switched OFF) or O = 1 enabled (switched ON). Also send a confirmation text back to the sender.

STORE A TEMPORARY DIAL TO OPEN NUMBER (TDR)

Using the following programming command 1111TDR"tele"T? it is also possible to store a temporary dial to open number (DTO) in the digital GSM. The time period T for the temporary code is in hours and can be from 1 up to 255 hours. The time will only begin counting down from when the temporary dial to open number (DTO) is first used. Once the time period has elapsed the temporary DTO will be deleted and up to 32 temporary dial to numbers can be store in the GSM module.

1111TDR"tele"T?	Store a temporary dial to open number tele for the time period T (where tele is the DTO number and T is the time period in hours from 1 - 255hours), also send a confirmation text back to the sender. Note that if T is omitted default time T = 8 hours.
-----------------	--

ASSIGN A TIMEBAND (TB) TO AN APARTMENT (STB)

Each apartment can have a timeband TB assigned to it (also refer to notes on page 38 and 44 on setting up timebands). By default timeband 0 is already assigned to the apartment (timeband 0 is set to 00:00 - 23:59). There are 9 other programmable timebands (1 - 9) available for an apartment to be assigned to and each apartment can only be set to one timeband at any one time.

The following text messages can be used to assign (set) a timeband to an apartment.

1111STBn:B	Set the timeband B to an apartment n, where n = apartment number, B = timeband 1 - 9.
1111STBn:B?	Set the timeband B to an apartment n, where n = apartment number, B = timeband 1 - 9. Also send a confirmation text back to the sender.
1111STBn:?	Query the timeband set for an apartment, where n = apartment number. Also send a confirmation text back to the sender.

STORE OR CHANGE AN APARTMENT NAME (STT)

An apartment name (usually the user's name) can be programmed into the digital GSM. The following text messages can be used to store, change, delete or query an apartment name (also refer to username notes on page 39). The apartment name can be up to a maximum of 16 characters long.

Programming via Text Message

1111STN:"tttttttttttttt"	Store an apartment name (username) ttttttttttttt for apartment n, where n = apartment number, ttttttttttttt = apartment name (16 characters max.).
1111STN:"tttttttttttttt"?	Store an apartment name (username) ttttttttttttt for apartment n, where n = apartment number, ttttttttttttt = apartment name (16 characters max.). Also send a confirmation text back to the sender.
1111STN:""	Delete the apartment name (username) for apartment n, where n = apartment number.
1111STN:""?	Delete the apartment name (username) for apartment n, where n = apartment number. Also send a confirmation text back to the sender.
1111STN:?	Query the apartment name (username) stored for apartment number n, where n = apartment number. Also send a confirmation text back to the sender.

The > symbol can be used to insert a space between characters or words, for example:

Example: To program the username Mr Smith for apartment 321 and receive a confirmation text, the following SMS message can be sent to the digital GSM.

1111STT321:"Mr>Smith"?

Note that quotation marks " and a colon : are used where appropriate and the > character is used to insert a space between the words Mr and Smith for the name. The optional ? is included at the end so a confirmation text is sent back to the sender.

The digital GSM will store the above username for apartment 321 and send the following confirmation text back to the sender:

**APT = 321 NAME = Mr Smith
OK VIDEX 4G**

STORE OR CHANGE THE APARTMENT TELEPHONE NUMBERS (STN, STD, STE AND STF)

Telephone numbers can be stored for the 750 available apartments. Each apartment can have up to four telephone numbers (if the first is busy or not answered in a certain time it can call a 2nd, 3rd and 4th number). The STN code stores the first number (primary telephone number) when the apartment is called. The STD (Div1), STE (Div2) and STF (Div3) codes stores the diverted telephone numbers if the first is busy or not answered (the digital GSM will divert to the 2nd number then divert to the 3rd number and finally the 4th number). The text messages to store, change or check numbers are as follows, replace STN with STD, STE or STF when storing/changing divert numbers.

1111STN:"yyyyyyyyyy"	Store the primary telephone number yyyyyyyyyy for apartment number n.
1111STN:"yyyyyyyyyy"?	Store the telephone number yyyyyyyyyy for apartment number n and send a confirmation text message to confirm storage of new number.
1111STN:?	Query the telephone number stored for apartment number n. A text message will be sent to the sender with the stored number for that location.
1111STN:""	Delete the telephone number stored for apartment number n.
1111STN:""?	Delete the telephone number stored for apartment number n. A text message will be sent to the sender with the delete confirmation for that location.

n is an apartment number which can be made from up to a maximum of 6 digits including letters A - F. The telephone number yyyyyyyyyy can be a maximum of 30 digits. For example: to store the number 01912243174 for apartment 123 and include three divert numbers (if that one is not answered or busy, Div1, Div2 and Div3) of 01912241558, 07771234567 and 01912241559 respectively, the following SMS messages would be sent to the digital GSM:

1111STN123:"01912243174"

1111STD123:"01912241558"

1111STE123:"07771234567"

1111STF123:"01912241559"

To query any of these numbers for apartment 123 the following SMS messages would be sent to the digital GSM:

1111STN123:?

1111STD123:?

1111STE123:?

1111STF123:?

Programming via Text Message

STORE THE PRIMARY AND DIVERT NUMBERS FOR AN APARTMENT IN A SINGLE TEXT MESSAGE (USING STN)

It is also possible to program a primary telephone number and three divert numbers for a particular apartment in a single text message instead of using the individual programming codes STD (1st divert), STE (2nd divert) and STF (3rd divert). Expanding on the STN programming command the text messages used to store/check the primary number and divert numbers are as follows.

1111STNn:"pn" (or 1111STNn:"yyyyyyyyyy") 1111STNn:"pn","d1" 1111STNn:"pn","d1","d2" 1111STNn:"pn","d1","d2","d3"	Store the primary number and respective divert numbers for apartment n, (where n = <apt no.> and pn = primary number, d1= 1st divert, d2 = 2nd divert, d3 = 3rd divert).
1111STNn:"pn"? (or 1111STNn:"yyyyyyyyyy"?) 1111STNn:"pn","d1"? 1111STNn:"pn","d1","d2"? 1111STNn:"pn","d1","d2","d3"?	Store the primary number and respective divert numbers for apartment n, (where n = <apt no.> and pn = primary number, d1= 1st divert, d2 = 2nd divert, d3 = 3rd divert), also send confirmation of stored numbers for that location.

Using the same telephone numbers from the previous example: to store the primary number 01912243174 (pn) for apartment 252A and three divert numbers of 01912241558 (d1), 07771234567 (d2) and 01912241559 (d3) respectively, the following single text message would be sent to the digital GSM instead of sending 4 individual text messages:

1111STN252A:"01912243174","01912241558","07771234567","01912241559"

Similarly if only the primary number (pn) and 1st divert number (d1) were only required for apartment 252A the following message would be sent:

1111STN252A:"01912243174","01912241558"

Remember an optional ? can be included at the end of the message to receive confirmation of the stored numbers, like so:

1111STN252A:"01912243174","01912241558","07771234567","01912241559"?

The following reply will be received from the digital GSM:

APT 252A TEL = 01912243174
TEL (DIVERT 1) = 01912241558
TEL (DIVERT 2) = 07771234567
TEL (DIVERT 3) = 01912241559
OK VIDEX 4G

Remember to include " and , where appropriate.

SET CALL TIME (SPT)

The call time is the maximum time in seconds that a call can last before the GSM panel automatically clears the call down. The time can be from 1 second up to 255 seconds and begins from when the call is made from the panel. The default time is 40 seconds. The following messages are used to set/check the maximum call time (also refer to notes on page 44).

1111SPTnnn	Store the call time nnn seconds, where nnn is the time in seconds.
1111SPTnnn?	Store the call time nnn seconds, where nnn is the time in seconds. Also send a confirmation text back to the sender.
1111SPT?	Query the current stored call time. A text message will be sent back to the sender showing the stored time.

SET RELAY TIME (RLT)

The relay time can be set from 001 – 255 seconds or latching. To set the relay time for latched mode set the relay time to 000. In latch mode the relay will stay energised until the command is sent again (also refer to notes on page 45).

1111RLTnnn	Store the relay time nnn = time in seconds (e.g. nnn = 005, time = 5 seconds).
1111RLTnnn?	Store the relay time nnn = time in seconds. Also send a confirmation text back to the sender.
1111RLT?	Query the current stored relay time. A text message will be sent back to the sender showing the stored relay time.

SET AUXILIARY OUTPUT AO TIME (A1T, FOR A1M MODE = 001 OR 002 ONLY)

The auxiliary output AO time can be set from 001 - 255 seconds or latching. To set the AO output time for latched mode set the auxiliary time to 000. In latch mode the AO output will stay triggered until the relevant command is sent again to unlatch the output (e.g. sending text message **1111A1O** to the digital GSM) or during a call by pressing 6 on the telephone to reset the AO output. The latching mode option is only available when the AO output mode, **A1M**, is set to mode 001. Please refer to the **A1M** modes below for more details (also refer to notes on page 45).

1111A1Tnnn	Store the AO time nnn = time in seconds (e.g. nnn = 005, time = 5 seconds).
-------------------	---

Programming via Text Message

1111A1Tnnn?	Store the AO time nnn = time in seconds. Also send a confirmation text back to the sender.
1111A1T?	Query the current stored AO time. A text message will be sent back to the sender showing the stored AO time.

SET AUXILIARY OUTPUT AO MODE (A1M, MODES 000 - 002)

The auxiliary output AO has three modes that can be set (also see additional notes on page 41):

Call Activated: nnn = 000

AO output will activate when a call begins and deactivate when a call ends. See example, **Fig.14** on page 14.

User Activated: nnn = 001 (default mode)

To activate the AO output press 6 on the telephone during a call or sending the text message **1111A10** to the digital GSM. The auxiliary output can also be activated by triggering the auxiliary input AI. See example, **Fig.15** on page 14.

Call Activated (Timed): nnn = 002

AO output will activate when a call begins and deactivate when the auxiliary output time (**A1T**) expires. See example, **Fig.16** on page 15.

1111A1Mnnn	Store the AO mode nnn = 000 - 002 (see modes above).
1111A1Mnnn?	Store the AO mode nnn = 000 - 002 (see modes above). Also send a confirmation text back to the sender.
1111A1M?	Query the current stored AO mode (see modes above). A text message will be sent back to the sender showing the stored AO mode.

DIVERT TIME (DIT)

The divert time is the number of seconds to wait for a call to be answered before diverting to the 2nd, 3rd and 4th number. The default time is 15 seconds (the count down begins from when an apartment is called, but is refreshed when the telephone begins to ring) and can be set from 001 – 255 seconds (also see notes on page 44).

1111DITnnn	Store the divert time nnn = time in seconds (e.g. nnn = 015, time = 15 seconds).
1111DITnnn?	Store the divert time nnn = time in seconds. Also send a confirmation text back to the sender.
1111DIT?	Query the current stored divert time. A text message will be sent back to the sender showing the stored divert time.

IMPORTANT NOTE: Once the divert time is set on the digital GSM panel it is set for the same time for all divert numbers for all apartments stored in the digital GSM intercom. Each apartments divert numbers cannot have individual divert times set, e.g. if the divert time is set for 10 seconds then the divert time for apartment 1 will be the same as the divert time for apartment 321 and so on. Apartment 1 will not have a different divert time to apartment 321 it will be the same.

CHECK GSM SIGNAL STRENGTH (SIG)

At any time the signal strength of the digital GSM can be checked (also see notes on understanding the signal strength on page 73). It is advisable that when the digital GSM is first setup and before any other programming is carried out to check the signal strength of the GSM intercom. If the signal strength is too low the digital GSM may not operate properly and therefore the GSM antenna will need to be repositioned to increase the signal strength. Use the following command to check the signal strength.

1111SIG?	Check the signal strength of the digital GSM intercom and send a confirmation text back to the sender.
----------	--

CHECK FIRMWARE VERSION (VER)

It is possible to check the current version of firmware in the digital GSM. This may be necessary to see if an update is required for any additional features or updates on the digital GSM which may be included on later versions. Use the following command to check the software version.

1111VER?	Check the software version of the digital GSM intercom and send a confirmation text back to the sender.
----------	---

FORCED DIAL/DIAL A NUMBER (DLE)

A useful feature of the digital GSM panel is its ability to call a number sent to it in a text message. This feature can be used when setting up the SIM card. For example, disabling the voicemail facility or disabling automatic SMS messages or missed calls. Any number up to 15 digits can be called and the call will last for a maximum of 40 seconds. The example below would switch off voicemail on a Vodafone SIM card. Substitute the Vodafone number for other service providers.

1111DLE"1210"	Dial 1210 for the intercom panel.
---------------	-----------------------------------

Programming via Text Message

For UK customers other useful numbers which can be used with this feature are as follows. For other countries please check the service provider's web sites for other useful codes.

IMPORTANT NOTE: Although the following codes have been confirmed to work with the GSM intercom Videx offers no guarantee that other codes from other network providers will work.

	Vodafone	O ²
DISABLE VOICEMAIL	1210	1760
DISABLE TEXT ALERTS	#148#	1760

IMPORTANT NOTE: Disabling voicemail and text alerts is very important as there is no way to retrieve either of these services from the digital GSM panel. Disabling these features will also prevent the intercom panel switching to voicemail or sending a text when dialling in from another phone.

CHANGE THE 4 DIGIT MASTER CODE (CDE)

The four digit master code (by default = 1111) can be any combination of numbers between 0 - 9, but must be 4 digits long. The code allows access to the full programming menu and must be used when sending text messages to the digital GSM. Use the following message to change the four digit master code (also see notes on page 43).

1111CDEnnnn	Change the 4 digit master code to nnnn (where nnnn = new 4 digit master code).
-------------	--

CHANGE THE 4 DIGIT ADMIN CODE (CDA)

The four digit admin code (by default = 0000) can be any combination of numbers between 0 - 9, but must be 4 digits long. The code allows access to the admin menu and must be used when sending text messages to the digital GSM. Use the following message to change the four digit admin code (also see notes on page 44).

1111CDAnnnn	Change the 4 digit admin code to nnnn (where nnnn = new 4 digit admin code).
-------------	--

CHANGE THE 4 DIGIT TRADE CODE (CDT)

The four digit trade code (by default = 2222) can be any combination of numbers between 0 - 9, but must be 4 digits long. The trade code can only be used when a timeclock has been connected to the trade input (TRD terminal) on the digital GSM when a trade code facility is required. Use the following message to change the four digit trade code (also see notes on page 44).

1111CDTnnnn	Change the 4 digit trade code to nnnn (where nnnn = new 4 digit trade code).
-------------	--

TRIGGER THE RELAY (RLY)

There are several ways to trigger the digital GSM relay. The first is to press button 3 on the telephone during a call and the relay will operate for the programmed time. Another way is to send the following text message.

1111RLY	Operate the digital GSM relay (for the programmed time).
1111RLY?	Operate the digital GSM relay (for the programmed time) and send a confirmation text back to the sender.

TRIGGER AUXILIARY OUTPUT AO (A1O)

It is possible to trigger the auxiliary output AO for the programmed output time (A1T, also refer to page 45 for setting A1T time). Please note that this method of triggering auxiliary output AO is only possible when the A1M mode has been set to mode 001, also refer to page 41 and the example, **Fig.15** on page 14. Triggering the auxiliary output can be achieved by shorting terminals AI and GND on the digital GSM intercom, pressing button 6 on the telephone during a call or by sending the following text message to the digital GSM panel.

1111A1O	Trigger auxiliary output AO (for the programmed time).
1111A1O?	Trigger auxiliary output AO (for the programmed time) and send a confirmation text back to the sender.

STORE BALANCE CHECK DIAL STRING (SDL)

Several network providers offer the facility to check available balance on their pay as you go tariffs. For example, on Vodafone the string is *#1345# and on O₂ the string is *#10#. Other networks may also have this feature. Since the digital GSM intercom will not know the details of the network provider's SIM card which you have inserted it will be necessary to store the correct string in order to use the credit balance check features.

1111SDL"*#1345#"	Store the balance check string for a Vodafone pay as you go.
1111SDL"*#10#"	Store the balance check string for an O ₂ pay as you go.

IMPORTANT NOTE: Videx are only aware of the balance check dial string codes for the network providers mentioned above.

Programming via Text Message

Check dial string codes for other networks are currently unavailable at this time. Please also note that this programming function is only applicable for pay as you go SIM cards.

CHECK CREDIT BALANCE (BAL)

The balance can only be checked if the correct balance check string has previously been stored using the **SDL** code explained above. At any point the user will be able to send the following text message and the digital GSM intercom will reply with the current balance stored on the SIM card.

1111BAL?	Check current balance of the SIM in the digital GSM intercom and send a confirmation text back to the sender.
----------	---

In addition to this feature the digital GSM also has the facility to monitor the available credit and then text the user to inform them when the credit has fallen below £5.00, €5.00 or \$5.00. It will then remind the user with another text after every 5 calls until the credit has either increased or if it runs out.

To use this feature, the following settings must first be made:

A Pay As You Go SIM card from a provider that offers this service (**Vodafone, O₂**) must be used.

The correct balance check string must be stored using the **SDL** code (see store balance check dial string).

A mobile phone number that is to receive the 'balance low' text must be stored in the master telephone number location using the **STM** code (refer to 'store master telephone number' feature below).

STORE A MASTER TELEPHONE NUMBER (STM)

The master telephone number is the number which will receive automatic balance updates when the balance gets low (if this feature is setup). To store a master telephone number the following programming texts can be sent to the digital GSM intercom.

1111STM"yyyyyyyyyy"	Store the telephone number yyyyyyyyyy.
1111STM"yyyyyyyyyy"?	Store the telephone number yyyyyyyyyy and send a confirmation text back to the sender.
1111STM?	Query the master telephone number stored. A text message will be sent to the sender with the stored master telephone number.
1111STM""	Delete the master telephone number stored.
1111STM""?	Delete the master telephone number stored and send a confirmation text back to the sender.

LATCH THE RELAY (RLA)

It is possible to latch the digital GSM relay closed. This function is particularly useful if the GSM relay is connected to a gate controller and the user wishes to 'hold open' the gate. The following text message can be sent to the digital GSM intercom.

1111RLA	Latch the digital GSM relay to the C/NO position.
1111RLA?	Latch the digital GSM relay to the C/NO position and send a confirmation text back to the sender.

UNLATCH THE RELAY (RUL)

If the digital GSM intercom relay has been latched it is possible to unlatch the relay with the following text message.

1111RUL	Unlatch the digital GSM relay back to the C/NC position.
1111RUL?	Latch the digital GSM relay to the C/NC position and send a confirmation text back to the sender.

IMPORTANT NOTE: The digital GSM relay can also be unlatched by pressing 3 on the telephone during a call.

LATCH AUXILIARY OUTPUT AO (A1L)

Auxiliary output AO, like the onboard relay, can be latched. To latch auxiliary output AO the following text message can be sent to the digital GSM intercom.

1111A1L	Latch auxiliary output AO.
1111A1L?	Latch auxiliary output AO and send a confirmation text back to the sender.

UNLATCH AUXILIARY OUTPUT AO (A1U)

Auxiliary output AO can also be unlatched. To unlatch auxiliary output AO the following text message can be sent to the digital GSM intercom.

1111A1U	Unlatch auxiliary output AO.
1111A1U?	Unlatch auxiliary output AO and send a confirmation text back to the sender.

Programming via Text Message

STORE A TIMEBAND FOR APARTMENT CALLS AND DIAL TO OPEN NUMBERS (TBA)

IMPORTANT NOTE: This feature relies on the network providers time zone setting and also if they support NITZ (Network Identity and Time Zone). First check the time/date is correct by sending the SMS message 1111CLK? (also refer to check intercoms time & date feature below). If the time/date returned is incorrect, it maybe that they do not support it. The clock can be set manually but any power cut will result in the time and date being lost unless battery backup is included.

The timeband feature allows a call to an apartment to be enabled for a specific time period. Remember there are 9 programmable timebands (1 - 9) available (also refer to notes on page 45). By default timeband 0 is set to 00:00 - 23:59 and cannot be re-programmed, any apartment assigned to timeband 0 will enable a call to go through to the apartment. Once a timeband has been programmed it can then be assigned to an apartment (see notes on page 39 and programming notes to **assign a timeband, STB**, on page 51).

Remember to always use 24hr clock notation and also ensure the **start time** is earlier than the **stop time**. Use the following text messages to store, query and delete a timeband.

1111TBA"HHMMHHMM"	Store the time period HHMMHHMM for timeband n (where n = timeband 1 - 9, the first HHMM is the start time and the second HHMM is the stop time).
1111TBA"HHMMHHMM"?	As above but also send a confirmation text back to the sender with the stored setting.
1111TBA?	Query the time period programmed for timeband n (where n = timeband 1 - 9). A text message will be sent to the sender with the stored HHMMHHMM time period for timeband n.
1111TBA""	Delete the programmed time period for timeband n (where n = timeband 1 - 9).
1111TBA""?	Delete the programmed time period for timeband n (where n = timeband 1 - 9) and confirm deletion of the timeband.

The following example shows how to program a timeband:

Example: Programming a time period to start from 6:00am until 11:30pm for timeband 1. Store the time using the format HHMMHHMM. The first HHMM is the **start time** (i.e. receive calls from 0600, 6am in the morning) and the second HHMM is the **stop time** (i.e. calls will be received up until 2330, 11:30pm at night, as soon as the clock reaches 2331, 11:31pm calls to the apartment will stop).

1111TBA1"06002330"?

Note that quotation marks " are used where appropriate and 24hr clock notation is used. The optional ? is included at the end so a confirmation text is sent back to the sender.

The digital GSM will store the above time period for timeband 1 and send the following confirmation text back to the sender:

TB 1 06002330
OK VIDEX 4G

Any apartment which is then assigned to timeband 1 will only receive calls between the hours of 06:00 in the morning until 23:30 at night, calls after 23:30, i.e. 23:31 onwards will stop.

CHECK/SET DATE & TIME (CLK)

The check date and time feature relies on the network providers time zone setting (also refer to important note above). After a SIM has been placed into the digital GSM intercom and powered up the SIM will attempt to register with the network and automatically synchronise with the network providers time zone setting. The following text messages can be sent to the digital GSM to check and set the current time and date. The date and time format is as follows: yy/mm/dd, hh:mm, where yy = year, mm = month, dd = date and hh = hour, mm = minutes.

1111CLK?	Check current time & date and send a confirmation text back to the sender.
1111CLK"yy/mm/dd,hh:mm"	Set current time & date.
1111CLK"yy/mm/dd,hh:mm"?	Set current time & date and send a confirmation text back to the sender.

Example: Setting the current time & date to 10:05am, 24th April 2017, the following text can be sent to the digital GSM intercom:

1111CLK"17/04/24,10:05"?

Note that quotation marks " are used where appropriate. The optional ? is included at the end so a confirmation text is sent back to the sender. The digital GSM intercom will reply with the following text:

CLK = 17/04/24, 10.05
OK VIDEX 4G

SILENT DIALLING MODE (AUE)

When the digital GSM is calling the telephone number stored there is a choice of either hearing the ringing noise from the intercom

Programming via Text Message

panel or just hearing beeps to indicate a call is in progress.

- Ringing heard during calling: nnn = 001
- Beeps heard during calling: nnn = 000

The following text messages can be sent to the digital GSM intercom to enable (000), disable (001) or query the setting of the silent dialling feature.

1111AUEnnn	Set the silent dialling mode nnn (where nnn = 001 or 000).
1111AUEnnn?	Set the silent dialling mode nnn (where nnn = 001 or 000) and send a confirmation text back to the sender.
1111AUE?	Query the current mode stored. A text message will be sent back to the sender confirming which silent dialling mode has been set.

ENABLE THE DIAL '0' ON ANSWER FUNCTION (EDZ)

When enabled this feature allows an incoming call to an apartment to be diverted to the programmed divert telephone number if the '0' button on the telephone has not been pressed after answering the call. This can be useful if the user's number has an answerphone service (or answer machine) and they do not want the call to be answered by this service or if the primary number (mobile no.) is switched OFF.

The default for this function is disabled (set to 000). The following texts can be used to enable or disable this function.

1111EDZnnn	Set the dial '0' function nnn: 001 or 000 (001 = enable, 000 = disabled).
1111EDZnnn?	Set the dial '0' function nnn: 001 or 000 (001 = enable, 000 = disabled) also send a confirmation text back to the sender.
1111EDZ?	Query the dial '0' mode set.

When this feature is set (enabled = 001) the user answering the call must press '0' on their phone to accept the call otherwise the call will be diverted to the next number.

ENABLE THE '#' (HASH) FUNCTION (ED#)

Once enabled the user must press the # button on their phone before pressing any other button (also refer to user command table 1 on page 72) with the exception of when the user needs to enter the 4 digit master code "1111".

The user will have up to 3 seconds to press the user command button required (e.g. button 3 to activate the panel's relay), if the user doesn't press the next button within the 3 second window they will have to press the # button again.

The default for this function is disabled (set to 000). The following texts can be used to enable or disable this function.

1111ED#nnn	Set the # function nnn: 001 or 000 (001 = enable, 000 = disabled).
1111ED#nnn?	Set the # function nnn: 001 or 000 (001 = enable, 000 = disabled) also send a confirmation text back to the sender.
1111ED#?	Query the dial '#' mode set.

ENABLE PROXIMITY READER (EPR)

The digital GSM features a built-in proximity fob/card reader. The proximity reader can be enabled or disabled depending on whether this feature is required. By default the setting for this is disabled (proximity reader switched OFF). The following programming text messages are used to enable or disable the proximity reader (also see notes on page 42).

1111EPRnnn	Set proximity reader nnn: 001 or 000 (001 = enabled, 000 = disabled).
1111EPRnnn?	Set proximity reader nnn: 001 or 000 (001 = enabled, 000 = disabled) and send a confirmation text back to the sender.
1111EPR?	Query proximity mode set. A text message will be sent back to the sender confirming if the proximity reader is enabled or disabled.

IMPORTANT NOTE: When an Art.4850R parallel reader is connected to the digital GSM (via the RS485 BUS terminals) and a programmed fob/card is presented to it then the fob/card will only operate the Art.4850R's relay even if the built-in reader on the digital GSM is disabled. The EPR function only enables and disables the digital GSM's built-in reader and not the Art.4850R expansion reader.

PROXIMITY NUMBER OF BYTES TO CHECK (PBY, 002, 003 & 004)

This function of the built-in proximity reader will only be applicable if the proximity reader has been enabled (see EPR function above). After the proximity reader is enabled the number of bytes that the reader checks is dependant on which type of proximity fob/card is used (also refer to notes on page 42).

Understanding the Fob Format and Card Number

It is important to understand the relationship between the fob format and the card number when setting up the proximity reader

Programming via Text Message

to check for the correct number of bytes.

- **Fobs/Cards with 5 digit number (user code):** If a proximity fob/card has no site code but a 5 digit user code (e.g. 955/T or 955/C) the **PBY** format should be set to check for 2 bytes (002).
- **Fobs/Cards with 3 digit site code and 5 digit user code:** If using a fob/card with a 3 digit site code and 5 digit user code (e.g. PBX1E or PBX2) the **PBY** format can be set to check for 2 bytes (002) or 3 bytes (003).
- **Fobs/Cards programmed using the PROXE desktop reader:** If using the PROXE desktop reader the **PBY** format can be set to check for 2 bytes (002), 3 bytes (003) or 4 bytes (004).

By default the setting for this function is set to check for 2 bytes, '002'. The following texts can be used to change this setting.

1111PBYnnn	Set proximity reader to check for number of bytes nnn: 002, 003 or 004 (002 = check for 2 bytes, 003 = check for 3 bytes, 004 = check for 4 bytes).
1111PBYnnn?	as above and send a confirmation text back to the sender.
1111PBY?	Query the number of bytes that the digital GSM has been set to check for.

PBY setting	Description
2 bytes	Will read all fobs/cards types programmed.
3 bytes	Will not read fobs/cards programmed with only 2 bytes (5 digit) information.
4 bytes	Will not read fobs/cards programmed with only 2 bytes (5 digit) or 3 bytes (8 digit) information.

IMPORTANT NOTE: It is recommended that only one fob/card type is used to allow for easier setup and programming of the digital GSM reader. Mifare cards cannot be used.

STORE A PROXIMITY FOB/CARD IN A KNOWN LOCATION (0000 - 1999) OR THE NEXT AVAILABLE LOCATION (FOB)

Once the built-in proximity reader has been enabled and the number of bytes to check for has been set (refer to the **EPR** and **PBY** setup) the proximity fobs/cards can be programmed into the digital GSM intercom. Fobs/cards that are programmed will also automatically work on an **Art.4850R** expansion reader when connected via the RS485 BUS terminals.

The digital GSM can store up to 2000 fobs/cards (0000 - 1999). The reader can be programmed with any one of the following fobs:

- **955/T or 955/C** = Videx fobs or cards. These fobs and cards have no site code and have a 5 digit user code, so the **PBY** function must be set to 002 (the default setting, checking for 2 bytes).
- **PBX1E or PBX2** = Portal Plus fobs or cards. These fobs and cards have a 3 digit site code and 5 digit user code, so the **PBY** function can be set to 002 or 003.

The following texts can be used to program fobs or cards.

1111FOBnnnn"site","user"	Store fob/card in location nnnn, where nnnn = the memory location from 0000 - 1999 of where the fob/card is actually stored (see examples below for each type of fob/card). The "site" and "user" code is the number printed on the fob/card.
1111FOBnnnn"site","user"?	As above and send a confirmation text back to the sender with the stored fob/card details.
1111FOBnnnn?	Query the fob/card stored in memory location nnnn and send a confirmation text back to the sender with the stored fob/card details.

The following examples show how to program each fob/card type:

Example 1: Programming a **955/T** or **955/C** with no site code, a 5 digit user code of **12345** and storing it in memory location **0001**, the following text can be sent to the digital GSM:

1111FOB0001"0","12345"

Note that quotation marks " and commas , are used where appropriate. For these fob/card types a '0' must be inserted for the "site" code.

Example 2: Programming a **PBX1E** or **PBX2** with a 3 digit site code of **123**, a 5 digit user code of **45678** and storing it in memory location **0010**, the following text can be sent to the digital GSM:

1111FOB0010"123","45678"

Note that quotation marks " and commas , are used where appropriate.

IMPORTANT NOTE: Remember when programming a proximity fob/card into memory location '0000' it will only operate the auxiliary output AO for the programmed AO time (A1T) and not the onboard relay. Please also note that activating the auxiliary output in this way is only possible when the auxiliary output mode A1M has been set to mode 001.

It should also be noted that if an **Art.4850R** parallel reader is connected to the digital GSM (via the RS485 BUS terminals) and a fob/card that has been programmed to memory location '0000' (with A1M mode set to mode 001 on the digital GSM) when the fob/card is presented to the **Art.4850R** reader it will activate the **Art.4850R's** relay and NOT the auxiliary output on the digital GSM.

Programming via Text Message

Expanding on the **FOB** programming command it is also possible to store a fob/card into the next available memory location. This is particularly useful when programming additional fobs/cards into the digital GSM with existing fobs and cards that have already been programmed into it, but the locations of where they are stored is unknown. Using the **FOB** programming text string, but omitting the **nnnn** (0000 - 1999) memory location from the command the following texts can be used to program fobs or cards to the next free memory location and confirm where the fob or card will be stored.

1111FOB"site","user"	Store fob/card in the next memory location available. The "site" and "user" code is the number taken directly from the fob/card.
1111FOB"site","user"?	Store fob/card in the next memory location available and send a confirmation text back to the sender with the memory location of where the fob/card is stored. The "site" and "user" code is the number taken directly from the fob/card.

FIND A FOB OR CARD (FDF)

The find a fob or card feature allows the user to search and find the fob/card memory location (between 0000 - 1999) of where a proximity fob or card is stored in the digital GSM intercom. It locates the fob or card using the 5 digit user code printed on the fob (see the following example). The following text message can be used.

1111FDF"nnnnn"?	Find the fob/card memory location for user code nnnnn, where nnnnn = user code (5 digit user code printed on fob/card).
------------------------	---

Example: Find fob/card memory location of card no. **12345**, the following text can be sent to the digital GSM intercom:

1111FDF"12345"?

Note that quotation marks " are used where appropriate. The optional ? is included at the end so a confirmation text is sent back to the sender. The digital GSM intercom will reply with the following text:

**STORED IN nnnn
OK VIDEX 4G**

where nnnn = memory location (0000 - 1999) of where the fob/card is stored.

DELETE A FOB OR CARD WITHOUT KNOWING ITS LOCATION (DEF)

This feature allows the user to delete a fob or card without knowing the memory location of where it is stored. The feature uses the 5 digit user code printed on the fob/card to search through the memory locations where the fob/card data is stored and then deletes it from the digital GSM intercom. The following text message can be used.

1111DEF"nnnnn"?	Find the fob/card location with user code nnnnn and delete, where nnnnn = user code (5 digit user code printed on fob/card), also send a confirmation text back to the sender.
------------------------	--

Example: Delete fob/card card no. **54321**, the following text can be sent to the digital GSM:

1111DEF"54321"?

The digital GSM intercom will reply with the following text:

**DELETED
OK VIDEX 4G**

FREE ACCESS TIMEBANDS (0 - 9) INC. OUTPUT SETUP WITH LATCH OR MOMENTARY TRIGGER (FRE)

The digital 4G GSM has up to 10 programmable free access timebands (0 - 9) that can be setup to operate the onboard relay or the auxiliary output **AO**. Both the relay and the auxiliary output can be set to latch or momentarily trigger for the programmed relay time or programmed auxiliary output time respectively. The free access timebands are programmed in a similar way as the timebands (**TBA**) with a **start** time and an **end** time (using 24hr clock notation) which can be set for a specific day or days of the week to be active for.

If the selected output (relay or auxiliary) is setup to latch, the free access timeband will automatically activate the output when the **start** time is reached and will deactivate the output when it reaches the **end** time (i.e. the selected output will stay latched for the duration of the timeband).

If the selected output (relay or auxiliary) is setup for momentary trigger, the free access timeband will automatically activate the output for the programmed output time when the **start** time of the timeband is reached. When the timeband reaches the **end** time the selected output will trigger again for the programmed output time, for example if the relay was setup to trigger for 5 seconds then the relay will activate for 5 seconds at the beginning of the timeband and then activate again for 5 seconds at the end of the timeband.

The following text messages can be used to setup the free access timebands to activate the digital GSM's relay or the auxiliary output and setup the selected output for latch or momentary trigger. For the list of days refer to the Days table below.

Programming via Text Message

Days				
Mo = Monday	Tu = Tuesday	We = Wednesday	Th = Thursday	Fr = Friday
Sa = Saturday	Su = Sunday	AD = All days	WD = Week days only	WE = Weekends only

When including the day or days in the command they must be separated using a comma , between the codes required, also refer to the example below. Use the following text messages to store, query and delete a free access timeband.

1111FREn"HHMMHHMM"days:m:o	Store the time period for free access timeband n, where n = timeband no. (0 - 9) using this format: the first HHMM is the start time to be active from (i.e. 0845 for 8:45am in the morning) and the second HHMM is the end time that will stop being active from (i.e. 1930 for 7:30pm at night), where days = Mo, Tu, We, Th, Fri, Sa, Su, AD, WD, WE, output trigger m = L for latch or M for momentary and output selection o = RL for relay, AO for the auxiliary output.
1111FREn"HHMMHHMM"days:m:o?	As above and also send a confirmation text back to the sender of programmed free access timeband period including day(s) active for, output trigger and output selection.
1111FREn?	Query the information stored for free access timeband n, where n = free access timeband number (0 - 9), also send a confirmation text back to the sender.

Example: To program free access timeband number 4 to latch the digital GSM's relay between 9:45am until 10:45am for Monday, Tuesday and Friday only, the following text can be sent to the digital GSM:

1111FRE4"09451045"Mo,Tu,Fr:L:RL?

Note that in this example no comma , is required to separate the time period and days selection. A ? has been included to receive a confirmation text. The digital GSM will reply with the following text:

**FA4 =09451045,Mo,Tu,Fr,L,RL
OK VIDEX 4G**

In this example the reply from the digital GSM confirms the relay has been setup to latch for Monday, Tuesday and Friday only for free access timeband number 4 between 9:45am until 10:45am.

IMPORTANT NOTE: If the selected output (relay: RL or auxiliary: AO) is setup for a momentary trigger the output will trigger for the programmed output time. Remember to set the output time using the respective programming code, i.e. for the relay use 1111RLTnnn? and for the auxiliary output use 1111A1Tnnn?

It should also be noted that when any of the outputs have been setup with free access the free access feature takes priority over other programming or modes that may have been setup for the output.

CLEAR ALL FREE ACCESS TIMEBANDS (FRD)

It is also possible to clear and reset all the free access timebands. The following text message can be used clear all the free access timebands.

1111FRD?	Delete all free access timebands, also send a confirmation text back to the sender.
-----------------	---

DISABLE OR ENABLE SPEECH BOARD (SBM)

The digital GSM intercom includes call progress speech annunciation which can be either enabled or disabled. There are three options available:

- when set to 001 the speech board is disabled (switched OFF);
- when set to 002 the speech board is enabled with individual number speech playback;
- when set to 003 the speech board is enabled but with combined number speech playback.

By default this function is enabled with combined speech playback (003). The following text messages can be used to enable or disable this feature (also see notes on page 42).

1111SBMnnn	Disable or enable speech board nnn: 001, 002 or 003 (001 = disabled, 002 = enabled with individual playback or 003 = enabled with combined playback).
1111SBMnnn?	Disable or enable speech board nnn: 001, 002 or 003 (001 = disabled, 002 = enabled with individual playback or 003 = enabled with combined playback). Also send a confirmation text back to the sender.
1111SBM?	Query the speech board status/setting.

SET SPEECH BOARD VOLUME (SBV)

The volume setting of the speech board in the digital GSM can be adjusted. The default volume level is set to 75, but can be set anywhere between 000 (low) up to 099 (high). The following text messages can be used to increase or decrease the volume level

Programming via Text Message

and query the current speech board volume setting stored (also see notes on page 42).

1111SBVnnn	Increase or decrease speech board volume nnn, where nnn = 000 (low) - 099 (high).
1111SBVnnn?	Increase or decrease speech board volume nnn, where nnn = 000 (low) - 099 (high), also send a confirmation text back to the sender.
1111SBV?	Query the speech board volume setting.

FIND A TELEPHONE NUMBER (FDT)

The find a telephone number feature allows the user to find the memory location (between 0000 - 0499) of where a particular telephone number (the primary number or any of the 3 divert numbers) is stored in the digital GSM. It can locate the number either from using the full telephone number or a minimum of the last 4 digits of a number (see following examples). The following text messages can be used.

1111FDT"yyyyyyyyyy"?	Find the memory location of where the telephone number yyyyyyyyyy is stored, where yyyyyyyyyy = telephone number (minimum of 4 digits).
-----------------------------	---

Example 1: To find the memory location of where the telephone number **01234567890** is stored using the full number, the following text can be sent to the digital GSM:

1111FDT"01234567890"?

Note that quotation marks " and commas , are used where appropriate. The optional ? is included at the end so a confirmation text is sent back to the sender. The digital GSM intercom will reply with the following text:

STORED IN nnnn
OK VIDEX 4G

where nnnn = the memory location between 0000 - 0499 of where the number is stored.

Example 2: To find the memory location of where the telephone number ending in **4567** is stored using the last 4 digits of the number only, the following text can be sent to the digital GSM:

1111FDT"4567"?

Note that quotation marks " and commas , are used where appropriate. The optional ? is included at the end so a confirmation text is sent back to the sender. The digital GSM intercom will reply with the following text:

STORED IN nnnn
OK VIDEX 4G

where nnnn = the memory location between 0000 - 0499 of where the number is stored.

Example 3: If the **FDT** search function is used to locate a telephone number that is not stored the digital GSM will reply with the following text:

NOT FOUND
OK VIDEX 4G

END ON LAST DIVERT (EOD)

The end on last divert feature allows the digital GSM to ring each programmed divert number as usual and if the divert number is not answered it will then proceed to ring the next programmed divert number, if however there is no divert number stored the digital GSM will simply end the call.

By default this feature is disabled (set to 000), but can be enabled (set to 001). The following programming commands can be used to set/check the end on divert function.

1111EODnn	Set end on last divert to nnn, where nnn = 000 (disabled) or 001 (enabled).
1111EODnn?	Set end on last divert to nnn, where nnn = 000 (disabled) or 001 (enabled). Also send a confirmation text back to the sender.
1111EOD?	Query the end on last divert status stored in the digital GSM module.

DOOR OR GATE (GAT)

This command feature of the digital GSM allows the internal speech board to change the default speech annunciation that is heard from the intercom when the onboard relay is activated. For this feature to be heard the internal speech board must be switched ON (refer to notes on enabling/disabling the speech board, **SBM**, on pages 42 and 61).

By default the mode of this feature is set to '001', whereby the internal speech board will announce "**the gate is open**" when the onboard relay is activated. The alternative mode can be set to '000', whereby the internal speech board will announce "**the door is open**". To set the required door/gate mode the following commands can be sent to the digital GSM intercom (also see notes on page 43).

Programming via Text Message

1111GATnnn	Set the speech board annunciation to mode nnn: 001 or 000 (001 = "the gate is open", 000 = "the door is open").
1111GATnnn?	Set the speech board annunciation to mode nnn: 001 or 000 (001 = "the gate is open", 000 = "the door is open") also send a confirmation text back to sender.
1111GAT?	Query the speech board annunciation mode set.

SHUTDOWN AND RESTART (RBT)

This command feature allows the digital GSM to be remotely shutdown and then rebooted again. The following command can be sent to the GSM intercom.

1111RBT	Shutdown and restart the digital GSM intercom.
---------	--

IMPORTANT NOTE: This feature should not be confused with the 'hard-wired' reset (described on page 23). The RBT function simply powers down the digital GSM panel and then powers it back up again.

The following commands are reserved for the technical department for interrogating the digital GSM when testing and applying specific additional features that are not covered in this technical manual. For the application of these commands please contact Videx Technical on tel: 0191 224 3174. For overseas customers please contact Videx customer support on tel: (+39) 0734 631 699.

OBTAIN THE GSM'S IMEI NUMBER (IME)

If the IMEI number (unique 15 digit number of the main internal hardware chip) of the digital GSM is required the following text message can be sent to obtain the number.

1111IME?	Query IMEI number of the GSM module, also send confirmation to the sender.
----------	--

Example: Obtain IMEI number of the GSM module, the following message can be sent to the digital GSM intercom:

1111IME?

The digital GSM will reply with the following text:

IMEI-357803045065535
OK VIDEX 4G

IMPORTANT NOTE: If installing the digital GSM for the first time, when registering the SIM card with the chosen network provider you may be asked for the IMEI number of the GSM module. As the programming command described above will only work with a SIM card that has already been registered with a network the command will not work.

Therefore in order to obtain the GSM's IMEI number, which is located on the main hardware chip internally, use a SIM that is already registered with another network provider and fit it into the digital GSM module (following the procedure on page 22 for initialisation), then use the programming command above 1111IME? to obtain the GSM's IMEI number, so that when registering the actual SIM that will be used with the GSM module with the chosen network, you will have the appropriate IMEI number to hand.

UNLATCH PREVENTION FEATURE (LLA)

The unlatch prevention command LLA, when enabled, will prevent a programmed latched output (the digital GSM's relay or the auxiliary output) from being inadvertently unlatched by a programmed fob/card, access code, DTO number or by pressing the relevant button (3) on the phone during a call. Even when this feature is enabled if the digital GSM's relay or the auxiliary output have been setup to latch they can still be unlatched using the relevant 1111RUL or 1111A1U programming command.

By default this feature is disabled (set to 000), but can be enabled (set to 001). The following programming commands can be used to enable/disable and check the unlatch prevention feature.

1111LLAnnn	Set the unlatch prevention feature to nnn, where nnn = 000 (disabled) or 001 (enabled).
1111LLAnnn?	Set the unlatch prevention feature to nnn, where nnn = 000 (disabled) or 001 (enabled). Also send a confirmation text back to the sender.
1111LLA?	Query the status of the unlatch prevention feature stored in the GSM module.

NETWORK CONNECTION INDICATION (CON)

As well as checking the power & network status indication LED on the back of the digital GSM intercom (**Fig.10**, **(E)** page 10) to check which network type (2G, 3G or 4G) the GSM intercom is connected to, the following command 1111CON? can be sent to the digital GSM.

1111CON?	Check the network type (2G, 3G or 4G) the GSM module is connected to, also send confirmation to the sender.
----------	---

Example: To check which type of network the 4G digital GSM is connected to, the following message can be sent to the digital GSM intercom:

Programming via Text Message

1111CON?

The digital GSM intercom will reply with the following text:

CON=nG
OK VIDEX 4G

(where n = 2, 3 or 4)

SETUP THE DIGITAL GSM INTERCOM FOR DATA COMMUNICATION (APN)

The digital GSM can be setup for data communication. In order for data communication the SIM card used in the GSM must also have a data allowance setup, this should be done by the user/installer when choosing a network provider (O₂, EE, Vodafone etc.) to use. There are two purposes for setting up the GSM for data communication:

- The first is to allow a user to be able to remotely monitor the GSM's events online using the web browser based events application or remotely monitor the GSM's events via either of the two mobile apps - the **Videx SMS Wizard** (for users) and the **Videx SMS Wizard PRO** (for installers and engineers), also refer to the **GSM mobile apps** notes on page 68.
- The second purpose is to allow for the programming 'over the air' option so that a user/installer can remotely program the GSM intercom using the **GSM SK** PC software (the PC software can still be used to program the GSM intercom, but the PC or laptop is not directly linked to it via the USB or RS485 connections).

The following programming command can be used to store the network provider's **APN** details to the GSM intercom.

1111APN"apn","username","password"?	Store the APN details of the network provider to the GSM, also send confirmation to the sender, where the apn , username and password are the details provided by the SIM card network provider, these details can usually be found on the network providers website or doing an online search.
-------------------------------------	---

Example: Store the **APN** details for an O₂ pay and go SIM to the GSM module, where the **apn** = **payandgo.o2.co.uk**, **username** = **payandgo** and **password** = **password**, the following message can be sent to the GSM intercom:

1111APN"payandgo.o2.co.uk","payandgo","password"?

With the inclusion of the ? the GSM intercom will reply with the following text:

APN=payandgo.o2.co.uk
payandgo
password
OK VIDEX 4G

IMPORTANT NOTE: Remember that the **APN** details will vary from network to network and may also have different **APN** details for their contract SIM cards and their pay as/and you go SIM cards. The table below provides the **APN** details for the most common network providers in the UK that have been gathered by VIDEX and are correct at time of print. Please note that these details may also be subject to change without prior notice by the respective network provider, therefore VIDEX are not responsible for any errors, omissions or discrepancies that may effect the **APN** setup.

Provider: Vodafone (contract) APN: wap.vodafone.co.uk Username: wap Password: wap	Provider: Vodafone (pay & go) APN: pp.vodafone.co.uk Username: wap Password: wap	Provider: EE APN: everywhere Username: eesecure Password: secure
Provider: O₂ (contract) APN: mobile.o2.co.uk Username: o2web Password: password	Provider: O₂ (pay & go) APN: payandgo.o2.co.uk Username: payandgo Password: password	Provider: Giffgaff APN: giffgaff.com Username: giffgaff Password:
Provider: Tesco Mobile APN: prepay.tesco-mobile.com Username: tescowap Password: password	Provider: ASDA Mobile APN: asdamobiles.co.uk Username: web Password: web	Provider: Virgin Mobile APN: goto.virginmobile.uk Username: user Password:

It is recommended that after changing the **APN** details to reboot the digital GSM intercom using the **1111RBT** command (also see **RBT** notes on page 63).

STORE A USERNAME & PASSWORD FOR EACH GSM MODULE FOR ONLINE EVENTS (PAS)

When using the online events application each GSM module that is setup through the application requires it's own username and password. The username and password is created by the user, following the online setup steps (via the website www.videxevents.co.uk), when adding a new GSM to the list of GSM modules. Each GSM module on the list can have their events monitored remotely

Programming via Text Message

online or via either of the two GSM mobile apps - the **Videx SMS Wizard** (for users) and the **Videx SMS Wizard PRO** (for installers and engineers).

The following command is used to store the username and password for each of the GSM modules on the GSM module list.

1111PAS"username","password"?	Store the username & password for the GSM module, also send confirmation to the sender.
--------------------------------------	---

Example: To store the **username** "videx-tech-1" and the **password** "gsm-tech-1" for a 4G GSM on the GSM modules list, the following message can be sent to the GSM intercom:

1111PAS"videx-tech-1","gsm-tech-1"?

With the inclusion of the ? the GSM intercom will reply with the following text:

**PAS=videx-tech-1
gsm-tech-1
OK VIDEX 4G**

ENABLE ONLINE EVENTS FOR THE DIGITAL GSM MODULE (ENE)

After the user has registered an online events profile (via the website www.videxevents.co.uk), the GSM module has been configured for data communication (**APN**) and added to the list of GSM modules with a username and password setup (**PAS**) the GSM module itself requires the events to be enabled (i.e. the events from the GSM module will be sent to the web browser application to be displayed in the list of events).

By default this feature is disabled (set to 000), but can be enabled (set to 001). The following programming commands can be used to enable/disable and check the status.

1111ENEnnn	Enable the online events feature, where nnn = 000 (disabled) or 001 (enabled).
1111ENEnnn?	Enable the online events feature, where nnn = 000 (disabled) or 001 (enabled). Also send a confirmation text back to the sender.
1111ENE?	Query the status (enabled or disabled) of the events feature.

Further notes on how to complete the online events setup can be found on page 75, **Managing GSM events remotely**.

SETUP PORT FORWARDING FOR CONNECTION TO A SERVER (SER)

Before setting up a connection to a server the GSM module must first be setup for data communication using the **APN** programming command (see **APN** setup notes and example on the previous pages), this will allow the GSM to be able to be programmed remotely 'over the air' using the **GSMSK** PC software.

Also in order for the remote 'over the air' feature to work port forwarding needs to be setup on the router where the PC connects to so that the GSM module can forward and receive packets from it, to do this follow the setup and configuration instructions on Videx application note **AN0046_RemotelyProgramming4GIntercomsViaPCSoftware**.

To initiate communication the **SER** programming command can be used (see below), this will effectively let the GSM module know where the server is.

1111SER"IP",PORT?	Setup port forwarding for connection to a server, where IP is the public IP address where the PC is located and the PORT is any free port. Also send a confirmation text back to the sender.
--------------------------	--

⚠ IMPORTANT NOTE: IT IS IMPORTANT TO MAKE SURE THAT THE SIM CARD INSTALLED HAS BEEN ENABLED FOR DATA AND HAS DATA ALLOWANCE AVAILABLE PRIOR TO USING THE APN, ENE, PAS AND SER PROGRAMMING COMMANDS OTHERWISE THE REMOTE ONLINE EVENTS FEATURE AND THE 'OVER THE AIR' FEATURE WILL NOT WORK!

SOURCE OF TIME/DATE UPDATES (NTZ)

The source of where the Digital GSM synchronises its internal clock is particularly important when using any of the timeband features as these features rely on the GSM's clock to be accurate. As such the 4G Digital GSM has 3 modes which it can be set to, for where it can obtain the current time and date updates to synchronise its internal clock with. The three modes are as follows:

- **mode 00:** no clock setting at all i.e. the GSM receives no automatic time updates.
- **mode 01:** the time is taken from the telephone network providers clock setting via **NITZ** (network identity & time zone), but only if the network supports **NITZ** (default).
- **mode 02:** the time is taken from an online clock using the **NTP** protocol where the Digital GSM is able to synchronise its clock with an online **NTP server**.

By default the 4G Digital GSM is set to **mode 01**, whereby it will try to automatically synchronise with the network providers clock setting via **NITZ** (network identity & time zone) providing that the network supports **NITZ**, also refer to **important note** regarding **NITZ** on page 57. The following programming commands can be used to set and confirm the required mode.

Programming via Text Message

1111NTZnnn	Set the mode of the GSM's internal clock to obtain the current time & date updates, where nnn = 000 (no automatic time updates), 001 (default, time taken from the phone network provider) or 002 (time taken from an NTP server, UTC time).
1111NTZnnn?	As above and also send a confirmation text back to the sender.
1111NTZ?	Query which mode the time & date updates is set to and send a confirmation text to the sender.

For the network providers that **do not** support the **NITZ** format, **mode 002** can be set. This mode utilises the **NTP server** protocol which is an internet protocol that is used to synchronise the clocks on computer networks to coordinated universal time (**UTC**). It enables the GSM to request and receive **UTC** data from an **NTP server** that, in turn, receives precise time from an atomic clock.

When **mode 002** is set the following 3 additional programming commands become available to the user: **TZ+**, **TZ-** and **DST**. These additional commands allow the user (depending on where/which country in the world they are installing the GSM intercom module) to manually setup the GSM in the correct **Time Zone** using the **TZ+** or **TZ-** commands and if the **Time Zone** they are in also requires a daylight savings time adjustment then they can use the **DST** command.

IMPORTANT NOTE: It should be noted that the coordinated universal time (**UTC**) is the basis for civil time today. This 24-hour time standard is kept using highly precise atomic clocks. Therefore when setting up the **TZ+**, **TZ-** and **DST** automatic time correction features the Time Zone (**UTC+0**) used is taken from the GMT UK based time of '0', i.e. Time Zone (**UTC+0**) = UK standard time (**GMT**) = 0.

UTC TIME ZONE FOR COUNTRIES AHEAD OF UTC (TZ+)

If the GSM module is being installed in a **Time Zone** ahead of **Time Zone (UTC+0)** then the command **1111TZ+nnn** can be used to set the correct time ahead. The time adjustments are made in increments of 15 minutes (e.g. 1 increment = 15 minutes), so an hour adjustment ahead of **Time Zone (UTC+0)** will be equal to **004** increments, an adjustment of 2 hours ahead of **Time Zone (UTC+0)** will be equal to **008** increments and so on.

By default the value **nnn** is set to **000** (i.e. **Time Zone (UTC+0)** = UK standard time (**GMT**) = 0). The following commands can be used to set the time ahead and confirm.

1111TZ+nnn	Adjust the GSM's time zone ahead of Time Zone (UTC+0) by nnn increments, where nnn = value between 000 (default) to 048.
1111TZ+nnn?	As above and also send a confirmation text back to the sender.
1111TZ+?	Query the time zone adjustment setting and send a confirmation text to the sender.

Example - setting the Time Zone to Rome, Italy, Europe (1 hour ahead):

If the Digital GSM module is being installed in Rome, Italy and the network provider used does not support **NITZ**, the **NTZ** command would be set to **mode 002 = 1111NTZ002**. As the European time zone = 1 hour ahead of **Time Zone (UTC+0)** the adjustment will be 4 increments of 15 minutes = 1 hour. Therefore the following command can be sent to the 4G GSM module:

1111TZ+004?

The **?** is included in the example for a confirmation back from the GSM. The GSM intercom will reply with the following text:

TZ+004
OK VIDEX 4G

UTC TIME ZONE FOR COUNTRIES BEHIND UTC (TZ-)

If the GSM module is being installed in a **Time Zone** behind **Time Zone (UTC+0)** then the command **1111TZ-nnn** can be used to set the correct time behind. As with the **TZ+** command the time adjustments are made in increments of 15 minutes (e.g. 1 increment = 15 minutes), so an hour adjustment behind **Time Zone (UTC+0)** will be equal to **004** increments, an adjustment of 2 hours behind **Time Zone (UTC+0)** will be equal to **008** increments and so on.

By default the value **nnn** is set to **000** (i.e. **Time Zone (UTC+0)** = UK standard time (**GMT**) = 0). The following commands can be used to set the time behind and confirm.

1111TZ-nnn	Adjust the GSM's time zone behind Time Zone (UTC+0) by nnn increments, where nnn = value between 000 (default) to 048.
1111TZ-nnn?	As above and also send a confirmation text back to the sender.
1111TZ-?	Query the time zone adjustment setting and send a confirmation text to the sender.

Example - setting the Time Zone to New York, USA, North America (5 hours behind):

If the Digital GSM module is being installed in New York, USA and the network provider used does not support **NITZ**, as with the **TZ+** command in the previous example the **NTZ** command would be set to **mode 002 = 1111NTZ002**. Since New York is on the Eastern coast of the USA it falls into the Eastern Standard Time (**EST**) time zone = 5 hours behind **Time Zone (UTC+0)**. The adjustment will therefore be 20 increments of 15 minutes = 5 hours. The following command can be sent to the 4G GSM module:

1111TZ-020?

Programming via Text Message


The ? is included in the example for a confirmation back from the GSM. The GSM intercom will reply with the following text:

TZ-020
OK VIDEX 4G

DAYLIGHT SAVINGS TIME ADJUSTMENT (DST)

If the GSM module is being installed in a time zone that allows for daylight savings time then the automatic **DST** adjustment feature can be enabled or disabled. By default this feature is enabled, set to 001. The following command can be used to enable or disable this feature.

1111DSTnnn	Enable/disable the daylight savings time feature, where nnn = 000 (disabled) or 001 (enabled).
1111DSTnnn?	As above and also send a confirmation text back to the sender.
1111DST?	Query the status of the daylight savings time feature stored in the GSM module.

 **IMPORTANT NOTE:** IT WILL BE NECESSARY TO REBOOT THE POWER TO THE GSM MODULE USING THE PROGRAMMING COMMAND 1111RBT AFTER ANY TIME ZONE ADJUSTMENTS HAVE BEEN MADE. THIS IS SO THAT THE NEW CLOCK TIME AND DATE SETTINGS WILL BE RECOGNISED AND TAKE EFFECT.

SEND GLOBAL ANNOUNCEMENT FEATURE (SGA)

It is possible to send out a global announcement text message to all the call numbers stored (primary and divert numbers) in the digital GSM module. The message can be up to 150 characters in length max. The feature is particularly useful if an urgent message needs to be sent out to all users that use the digital GSM in a single text. The following text message can be used, remembering to include both the " before and after the message, also if the message requires spaces between words then replace the space with a >.

1111SGA"text"	Send global text message to stored call button numbers (inc. primary and divert numbers), where text = message up to 150 characters max.
---------------	---

ACTIVATE REMOTE RELAY OUTPUT (RLN)

When the digital GSM networked with the **Art.2813** relay via the RS485 bus (see wiring diagram example on page 18, **Fig.22**) it is possible to activate the any of the three outputs (the onboard relay, **A1** and **A2**) remotely via text message.

It is important that the remote relay has already been setup with a unit ID (from **ID.00** to **ID.63**) and with the output activation times programmed, further details on this can be found in the installation instructions: **2813_66251545_V1-0** (or later).

To activate the desired output the following texts can be sent to the digital GSM.

1111RLNnn	Activate the remote relay, where nn = the unit ID of the remote relay from ID.00 to ID.63 . The onboard relay will activate for the programmed time.
1111RLNnn?	As above and also send a confirmation text back to the sender.
1111RLNnna?	Activate the specified output on the remote relay, where nnn = the unit ID of the remote relay from ID.00 to ID.63 and where a = 1 (for the onboard relay), 2 (for auxiliary A1) or 3 (for auxiliary A2). The specified output will activate for the programmed time and the GSM will send a confirmation text back to the sender.

The GSM Mobile Apps

VIDEX SMS ACCESS, SMS WIZARD & SMS WIZARD PRO

In addition to programming by direct text messages or using the **GSMSK** PC programming software it is also possible to program the GSM intercom using the GSM mobile apps: **Videx SMS Access** (for users), **Videx SMS Wizard** (for administrators) and **Videx SMS Wizard PRO** (for installers and engineers).



The mobile apps can be used to simplify the programming of the GSM intercom using SMS messages. The SMS wizards generate the text message required to communicate with the GSM intercom. Depending on the model of the GSM (GSM PRO, 4G GSM, Digital GSM, GSM Lite, GSMVRK and 2270 GSM module) text messages can be generated to program features such as access codes, proximity access fobs/cards, dial to open (DTO) telephone numbers, assign pre-existing access levels, free access periods and call button/apartment telephone numbers.

Other features are also included to simplify the programming setup process. Additionally it is also possible for users to control their gate or door via the dial to open (DTO) or text message features.

WHERE TO DOWNLOAD THE MOBILE APPS AND GETTING STARTED

The GSM mobile apps are available for both Android smart devices (mobile smartphones and tablets) and also Apple iOS (iPhones and iPads) and can be downloaded for free from the Google Play Store (for Android devices) and the App Store (for iOS devices).

Before using mobile apps, the following details will be required for initial setup:

- **Model of the GSM intercom module** - e.g. **Art.4812/4G** or **Art.4812R/4G** (digital GSM) etc.
- **Firmware level of the GSM intercom** - e.g. for the **Art.4812/4G** GSM the firmware might be **DG5.2.3** (the current firmware version of the GSM module can usually be found on the label on the back of the GSM intercom or by sending the text message **1111VER?** to obtain the firmware version, also refer to notes on page 54).
- **Telephone number of the GSM intercom** - i.e. the mobile number of the SIM card being used in the GSM module.
- **Master code of the GSM intercom** - i.e. the 4 digit code used for programming, by default this is set to '1111'. In the event that this code has been forgotten or lost please refer to '**change the 4 digit master code (CDE)**' notes on page 55 or '**resetting the master code to 1111**' notes on page 23 to reset the code back to factory default if required.

If the **SMS Access** or **SMS Wizard** app is downloaded and installed it is recommended that you first tap on the help icon (?) in the top right corner of the app's homescreen and then follow the '**TO GET STARTED**' quick guide.

If the **SMS Wizard PRO** app is downloaded and installed it is recommended that you first tap on the menu icon ☰ in the top right corner of the app's homescreen and then tap on the hint/help icon (?) from the drop down menu and then follow the '**TO GET STARTED**' quick guide.

It should be noted when navigating between the apps different programming screens the hint/help icon (?) (either located in the top right corner of each screen or located in the drop down menu on each screen) can be used to offer additional guidance on how to use the current programming screen, **Fig.115**.



Fig. 115

SMS ACCESS, SMS WIZARD AND SMS WIZARD PRO APP COMPATIBILITY

The GSM mobile apps are all compatible with the latest GSM intercoms and modules available. They are also compatible with the older **Art.4810N** GSM PRO models from firmware version **1.0.4** onwards.

System Operation

STANDBY MODE

When the digital GSM intercom is in standby the display will show the standard welcome message, refer to **Fig.116** (Art.4812) and **Fig.117** (Art.4812R). The date and time is shown along the bottom of the display and the signal is indicated at the top right corner of the display.

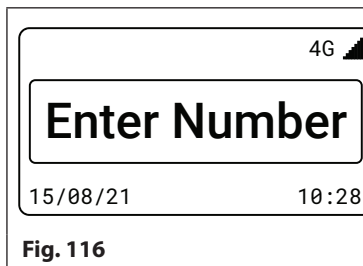


Fig. 116

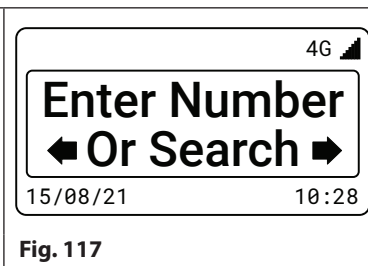







Fig. 117

MAKING A CALL

To make a call, from standby, simply enter the apartment number to be called (e.g. apartment 2) and then press the ENTER button , see **Fig.118**. On the panel with the scroll facility use the scroll buttons ,  to search for the required apartment number and then press the CALL button , see **Fig.119**. The digital GSM will call the apartment (the primary number), see **Fig.120**. If an incorrect apartment number has been entered/selected simply press the CLEAR button  and start again. The panel will cancel the call to the apartment, see **Fig.121**.

If the speech board is switched ON the panel will announce the following:

“calling two”, if apartment 2 was being called, **Fig.120**.

“call cancelled”, if the call was cancelled, **Fig.121**.

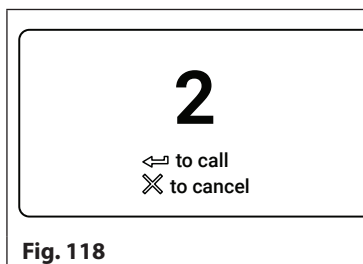


Fig. 118

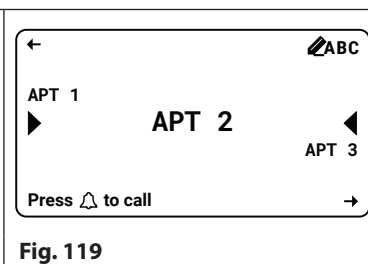


Fig. 119

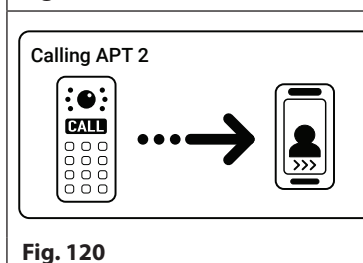


Fig. 120

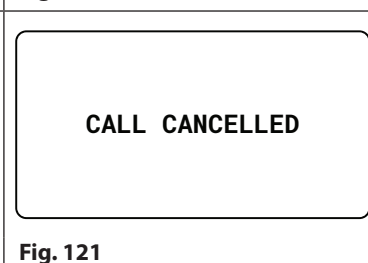


Fig. 121

DIVERTED CALL

First make a call from the digital GSM intercom following the steps above ‘making a call’. If any divert numbers are programmed and the primary number is not answered the panel will then dial the divert number(s) after the programmed divert time has elapsed. The panel display will still show that a call is in progress (see **Fig.120**). If the speech board is switched ON then the GSM intercom will announce “please wait”, this will indicate that the call has been diverted to the first divert number. This process will repeat again if a 2nd and 3rd divert number has been programmed into the panel.

ANSWERING A CALL AND OPERATING THE DOOR/GATE

After a call has been made and then answered both the caller and user can start a conversation.

The GSM intercom display will indicate this when the call has been answered and the line is open, see **Fig.122**.

During a conversation the user can operate the door (see **Fig.123**) or gate (see **Fig.124**) by pressing ‘3’ on their mobile/telephone.

The user also has some limited programming and operational functions available to them e.g. adjusting mic and speaker volumes, latching and unlatching the onboard relay and activating the auxiliary output (depending on the operating mode of the auxiliary output), for these user functions please refer to user command table 1 on page 72.

If the speech board is switched ON the panel will announce one of the following:

“the door is open”, if the GAT feature is set to 000, **Fig.123**.

“the gate is open”, if the GAT feature is set to 001, **Fig.124**.

Also see GAT programming notes on pages 62 and 63.

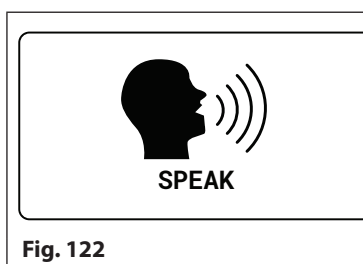


Fig. 122

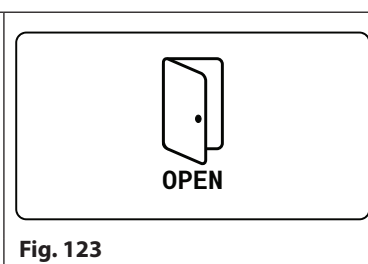


Fig. 123

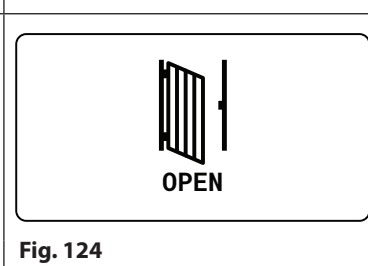


Fig. 124


System Operation


ENTERING A DOOR/GATE AND TRADE ACCESS CODE

If an access code is programmed into the GSM intercom first press the '0' button, the 'ENTER A CODE' screen will appear on the display, see **Fig.125**.

The access code can be entered using the alpha-numeric keypad.

If an incorrect digit has been entered press the CLEAR button

 (to delete the most recent digit entered).

Re-enter the correct digit again and so on until the correct access code has been entered followed by the ENTER button , see **Fig.126**.

If an incorrect code or a code that is not stored in the digital GSM is entered, after the ENTER button has been pressed, the display will show **not found**, see **Fig.127**.

If the speech board is switched ON the panel will announce one of the following:

"the door is open", if the GAT feature is set to 000 and the correct code entered, **Fig.123**.


"the gate is open", if the GAT feature is set to 001 and the correct code entered, **Fig.124**.

"you have entered an incorrect number, please try again", if an incorrect code has been entered, **Fig.127**.

ENTERING A TRADE CODE

If a trade code is programmed into the panel (this will require the use of the Art. 701T timeclock set in timeclock mode and connected into the TRD terminal, refer to **Fig.12** on page 13) follow the same steps as if entering a door/gate code. It is important to note that the panel's trade facility is **not** related to the timeband feature TBA.

USING THE BUILT-IN PROXIMITY READER

If the proximity reader facility is being used this can be confirmed if the key symbol  is shown at the top of the LCD graphical display, see **Fig.128** and **Fig.129**. The user can present the programmed fob/card in front of this symbol to operate the door/gate, see **Fig.130** and **Fig.131**.

It should be noted that even if a proximity fob or card is programmed into the digital GSM intercom, if the proximity facility is not enabled then the fob/card will not operate the door/gate.

If the speech board is switched ON the panel will announce one of the following:

"the door is open", if the GAT feature is set to 000 and a programmed fob or card is presented, **Fig.123**.

"the gate is open", if the GAT feature is set to 001 and a programmed fob or card is presented, **Fig.124**.

"invalid code" and also emit a long beep, if a fob or card that is presented to the reader is **not** programmed into the digital GSM, **Fig.132**.

Additional user operations can be carried out via text messaging following user command table 2 on page 72.

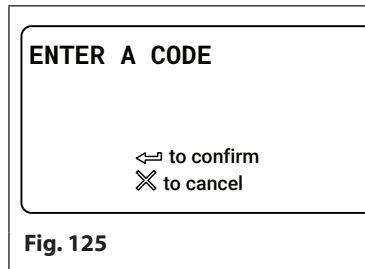


Fig. 125

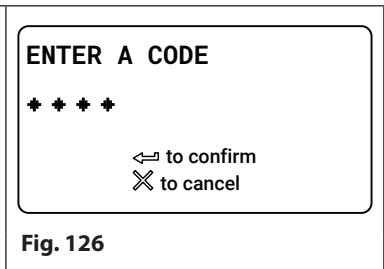


Fig. 126

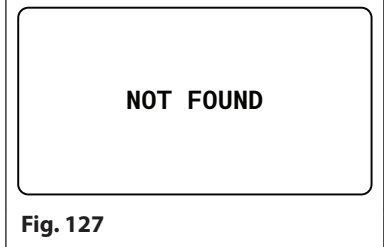


Fig. 127

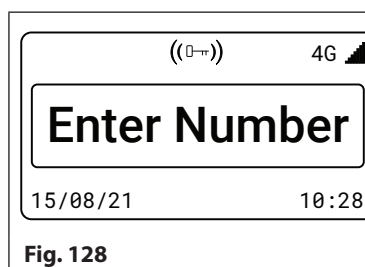


Fig. 128

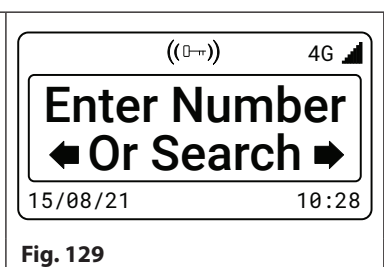


Fig. 129

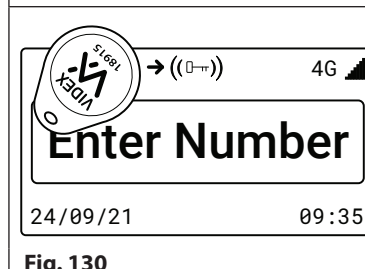


Fig. 130

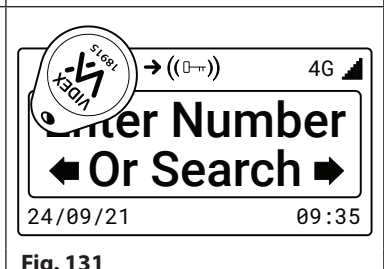


Fig. 131

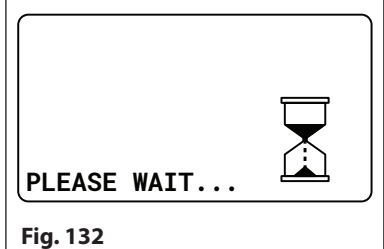


Fig. 132

RELEASING THE DOOR/GATE BY DIALLING THE DIGITAL GSM INTERCOM (DIAL TO OPEN DTO)

This feature is only possible if the dial to open, DTO, feature has been enabled on the digital GSM intercom (refer to **Fig.77** and notes on page 39). When this feature is enabled the primary number and the 3 divert numbers will be set as dial to open numbers. A call from any of these stored numbers to the digital GSM will result in the panel dropping the call and then opening the door/gate for the programmed relay time RLT.

System Operation

USING AN ART. 4850R EXPANSION READER, ART. 4903 OR ART. 2813 (IF CONNECTED VIA RS485 BUS)

If an **Art.4850R** expansion reader, an **Art.4903** keypad or an **Art.2813** remote relay is connected (refer to **Fig.20**, **Fig.21** and notes on pages 17 and 18) and if the speech board is switched ON the digital GSM panel will announce one of the following, but only if the respective module (i.e. **Art.4850R**, **Art.4903** or **Art.2813**) has been setup as device ID.1, if setup as any other ID then the digital GSM will **not speak**:

“the door is open”, if the **GAT** feature is set to **000** and a programmed fob/card is presented to it or a correct access code is entered. Also the LED on the **Art.4850R** will change from amber to green and emit a confirmation beep and operate its own relay (not the digital GSM's relay). In the case of the **Art.4903** the green access granted LED will flash and the keypad emit a series of beeps and operate its own relay and not the digital GSM's relay. In the case of the **Art.2813** remote relay this will operate for the remote relay's programmed time.

“the gate is open”, if the **GAT** feature is set to **001** and a programmed fob/card is presented to it or a correct access code is entered. Also the LED on the **Art.4850R** will change from amber to green and emit a confirmation beep and operate its own relay (not the digital GSM's relay). In the case of the **Art.4903** the green access granted LED will flash and the keypad emit a series of beeps and operate its own relay and not the digital GSM's relay. In the case of the **Art.2813** remote relay this will operate for the remote relay's programmed time.

“invalid code” or “you have entered an incorrect number, please try again”, the **Art.4850R** reader will emit a single beep, a brief pause followed by a short then long beep. Also the reader's LED will change from amber to red if a fob or card that is presented to the reader is **not** programmed into the digital GSM. The relay will **not** operate. In the case of the **Art.4903** keypad the red access denied LED will flash and the keypad will emit a beep and the relay will **not** operate. In the case of the **Art.2813** remote relay this will **not** operate.

IMPORTANT NOTE: Whenever a fob/card is presented to the **Art.4850R** expansion reader or an access code entered via the **Art.4903** keypad the display of the digital GSM will remain the same, i.e. it will continue to show the default welcome screen, refer to **Fig.116** and **Fig.117** on page 69, regardless of which one of the actions described above takes place.

ACTIVATING THE AUXILIARY OUTPUT AO USING AN ACCESS CODE OR BY USING A FOB/CARD

Using an Access code:

Activating the auxiliary output AO using an access code will only be possible if the access code has been stored in memory location **'000'**.

To activate the auxiliary output AO using a code simply enter the code following the same door/gate code steps described on the previous page.

The digital GSM will show **'OK'** on the display to confirm the auxiliary output AO has been activated, see **Fig.133**, and emit a series of beeps in line with the auxiliary output time **A1T**, e.g. if **A1T** is set to 5 seconds then 5 beeps will be heard.

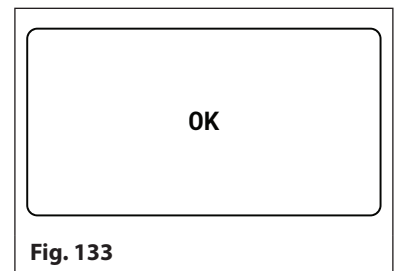


Fig. 133

Using a Proximity fob/card:

Activating the auxiliary output AO using a programmed fob or card will only be possible if the auxiliary output mode **A1M** has been set to mode **'001'** and a fob/card has been stored in memory location **'0000'**.

To activate the auxiliary output AO simply present the fob/card to the onboard reader on the digital GSM, the GSM's display will show **'OK'** to confirm the auxiliary output AO has been activated, see **Fig.133**, and emit a series of beeps in line with the auxiliary output time **A1T**, e.g. if **A1T** is set to 8 seconds then 8 beeps will be heard.

IMPORTANT NOTE: Even when the digital GSM's speech board is switched ON when activating the auxiliary output AO by code or proximity fob/card only the display will show **'OK'**, **Fig.133**, no speech annunciation will take place. The exception to this is when a programmed fob/card (stored in memory location **'0000'**) is presented to an **Art.4850R** expansion reader, the expansion reader will emit a single beep, the LED on the **Art.4850R** will change from red to green and operate its own relay and **not** the digital GSM's relay for the programmed relay time of the **Art.4850R**. In this instance with the digital GSM's speech board switched ON it will announce either **“the door is open”** or **“the gate is open”** depending on whether the **GAT** feature is set to **'000'** or **'001'** respectively.

User Commands

USER COMMAND TABLES

Table 1 shows the user commands that can be carried out during a call. Successful commands are signalled by two beeps from the telephone, errors are signalled by four beeps.

IMPORTANT NOTE: When the ED# function has been enabled the user must press the # button on their phone before pressing any of the following user commands (also refer to page 58 for further information).

Table 1

FUNCTION	1st KEY TO PRESS	2nd KEY TO PRESS
Latch the relay (unlatch by pressing 3)	1	0
Release the door or gate	3	n/a
Activate auxiliary output AO ¹	6	n/a
Adjust door speech volume (digital GSM speaker)	4	0 - 9 (0 = lowest, 9 = highest)
Adjust phone speech volume (digital GSM mic)	7	0 - 9 (0 = lowest, 9 = highest)

¹ - Activating auxiliary output AO in this way is only possible when **A1M** mode has been set to mode **001** (also see **Fig.15** and notes on page 14 and also notes on page 54, **set auxiliary output AO mode**) and will operate for the programmed **A1T** time. If the AO output time has been set to latch simply press **6** on the phone to unlatch the output again.

Table 2 shows the SMS text messages that can be sent to the 4G digital GSM intercom while in standby (the examples shown in the table use the default 4 digit master code 1111). Successful text commands are signalled by a single beep from the digital GSM and where the ? is used the appropriate confirmation text returned. Unsuccessful text commands are signalled by a long beep followed by a short beep from the digital GSM and where the ? is used the error message text returned, as shown in **Fig.134**.

ERROR VIDEX 4G

Fig. 134

Table 2

FUNCTION	MESSAGE TO SEND
Check the signal strength	1111SIG?
Check network type and connection	1111CON?
Check the available balance ²	1111BAL?
Check the software version	1111VER?
Release the door/gate	1111RLY? (? optional, send if confirmation is required)
Latch the relay	1111RLA? (? optional, send if confirmation is required)
Unlatch the relay	1111RUL? (? optional, send if confirmation is required)
Activate auxiliary output AO	1111A1O? (? optional, send if confirmation is required)
Latch auxiliary output AO	1111A1L? (? optional, send if confirmation is required)
Unlatch auxiliary output AO	1111A1U? (? optional, send if confirmation is required)
Check Timeband setting (for apartment calls and dial to open numbers DTO)	1111TBAn? (where n = timeband 1 - 9, also refer to notes on page 57)
Check Free Access Timeband setting	1111FREn? (where n = free access timeband 0 - 9, also refer to notes on pages 60 - 61)
Check Intercom Time and Date	1111CLK?
Find a Telephone Number - primary or divert no's, including dial to open (DTO) no's - (0000 - 0749)	1111FDT"yyyyyyyyyy"? (where yyyyyyyyyy = telephone number, minimum of 4 digits, also refer to notes on page 62)
Find a Fob or Card location (0000 - 1999)	1111FDF"nnnnn"? (where nnnnn = 5 digit user code printed on fob/card, also refer to notes on page 60)

The following command is only applicable when an **Art.2813** remote relay is connected via the RS485 bus

Activate remote relay output	1111RLNna? (where nn = unit ID from 00 - 63 and where a = 1 (trigger relay), 2 (trigger A1 output) or 3 (trigger A3 output), also see notes on page 67.
------------------------------	--

² - The balance can only be checked if the correct balance check string has been stored (also see **SDL** notes on pages 55 - 56). This feature is only applicable for pay-as-you-go SIM cards.

Additional User Information

UNDERSTANDING THE SIGNAL STRENGTH (SIG) AND BIT ERROR RATE (BER)

When a request for signal strength message is sent to the digital GSM intercom it will reply with a two part code.

The first part of the code is a signal strength code **SIG** which will be between 0 – 31 or 99. Ideally the signal strength should be as close to 31 as possible for the best possible performance. The lower the number, the weaker the signal. Signal strengths lower than 10 may cause operational problems such as loss of speech quality (and possibly missing DTMF tones) and/or network loss. A signal strength of 99 indicates it could not be detected.

The second part of the code is the bit error rate **BER**. The bit error rate is used in digital telecommunication as a figure of merit for how effectively the receiver (in this case the digital GSM intercom) is able to decode transmitted data (the data in this instance are the various text message commands used to program the digital GSM intercom, described on pages 47 - 67, speech and DTMF signals used by the digital GSM intercom for normal operation). It is the percentage of bits that have errors relative to the total number of bits received in a transmission. Ideally the **BER** code should be as close to 0 as possible, the lower the **BER** the better. High **BER** codes can be caused by noise, interference, distortion or bit synchronisation errors over the transmission of data to the digital GSM intercom and as a result the problems described above (loss of speech quality, possibly missing DTMF tones and/or network loss etc.) can occur.

The example below shows the ideal reply to expect when the signal strength query **1111SIG?** is sent to the digital GSM intercom:

SIGNAL = 31
BER = 0
OK VIDEX 4G

To achieve the best overall performance from the GSM intercom a high signal strength SIG and low bit error rate BER is required. In the event that a low signal strength and high bit error rate is received it is recommended that the **Art.434 GSM antenna** or if using the **Art.434 block antenna** is repositioned, where permissible, at the highest point to achieve the best signal. Where this is not possible an alternative high gain antenna can be used, in particular Videx recommends using the **Art.434/HG/5M** or **Art.434/HG/15M** high gain antennas or another suitable 4G GSM antenna with a standard SMA male connector.

DIALLING INTO THE DIGITAL GSM FROM ANOTHER TELEPHONE

There are three possible outcomes to dialling into the digital GSM intercom depending on the telephone number you are dialling in from and the features setup during programming. The three possible outcomes are shown in the priority function table below and are shown in order of priority. For example, if the number is programmed to automatically activate the relay (**DTO**), this will take priority over the following two options and if the telephone number is stored as a telephone number called from one of the push buttons, this will take priority over the last option.


Priority Function Table

FUNCTION	REQUIREMENT	PRIORITY
Dial in to open the Door (DTO). After dialling the GSM number, the relay will activate and the call will be dropped.	The telephone number of the telephone dialling in must be stored as a primary number or one of the divert numbers: STNn , STDn , STEn or STFn . The DTO feature <u>must</u> be enabled (switched ON) for the apartment, also see STOn:O notes on page 51 and also see STNn , STDn , STEn , STFn notes on pages 52 - 53. (750 user, where n = apt no. 000 - 749).	1st
Dial in to activate a call (live speech, activate relay/ auxiliary AO). After dialling the GSM number, the call will be answered and two beeps will be heard. The speech will then be live.	The telephone number of the telephone dialling in must be stored as a primary number or one of the divert numbers: STNn , STDn , STEn or STFn . The DTO feature <u>must</u> be disabled (switched OFF) for the apartment, also see STOn:O notes on page 51 and also see STNn , STDn , STEn , STFn notes on pages 52 - 53. (750 user, where n = apt no. 000 - 749).	2nd
Dial in to open the speech from a telephone number not stored in the digital GSM. After dialling the GSM number, the call will be answered and two beeps will be heard. You will then be required to enter the 4 digit code to open the speech.	If neither of the two requirements above are met.	3rd

Additional User Information

UNDERSTANDING THE BEEPS

Functions and errors are indicated by beeps from the digital GSM panel. The following will help you understand the different beeps heard and what, if anything, needs to be done in response to the beeps.

BEEP	REASON	SOLUTION
Short beeps at 1 second intervals.	Relay or auxiliary output activated.	None, this is normal.
Single short beep while the system is in standby and not being used.	A valid text message has been received and processed.	None, this is normal.
Two short beeps followed by a long beep. During this time the GSM display will indicate that it is attempting to call an apartment, see Fig.120 on page 69.	Call made to a stored apartment number but no actual telephone number stored.	Program a telephone number for the apartment.
Long beep, followed by a short beep while the system is in standby. During this time the GSM will send an error message to the sender, see Fig.134 on page 72.	Invalid text message received.	If this has happened when sending one of the programming text messages then check the message for errors. These beeps will also be heard if the 4 digit master code in the text message is incorrect. If you are unsure of the 4 digit code, try resetting it to '1111', also see notes on resetting the master code back to factory defaults on page 23.
Short beep while the system is in use.	Manually ending a call by pressing the CLEAR button  .	None, this confirms the call has been cancelled. Another call can be placed if required.
Single short beep approx. every 50 seconds after power up. During this time the GSM display will indicate that it is attempting to register with the network, see Fig.38 and Fig.39 on page 22.	Not registered with a network provider but still trying. Unable to see the SIM card or unable to see the antenna or other unknown registering problem.	Leave it a short while to see if it manages to find the network. If the beeps repeat every 50 seconds or so then try the following: check the SIM card is fitted correctly. Try removing the SIM card, cleaning and fitting again. Try moving the antenna to a better location. Try changing the SIM card to another network provider or try changing the antenna.

PROXIMITY READER (ONBOARD READER OR ART.4850R EXPANSION READER)

BEEP	REASON	SOLUTION
Successive short beeps lasting for the duration of the relay time ("the door is open" or "the gate is open").	Programmed fob/card presented to the onboard or expansion reader.	None, this is normal.
Single long beep ("invalid code").	Fob/card presented to the onboard or expansion reader that is not programmed.	The fob/card requires programming into the digital GSM (ensuring the onboard reader is enabled).
Single long beep ("invalid code").	Fob/card presented to the onboard or expansion reader is programmed in the digital GSM however the number of bytes to check for maybe incorrect.	Although the fob/card is programmed in the digital GSM try changing the number of bytes to check for to 2 bytes.
No beeps. The onboard reader is unresponsive.	The onboard reader has not been enabled (regardless of whether fobs have or have not been programmed).	Enable the onboard proximity reader.

User Management

RECORD SHEET

In order to manage the 4G digital GSM intercom effectively it is recommended that an up to date record sheet is kept for all the programming particularly if there is a high volume of telephone numbers and fob/cards stored in the digital GSM. This will also be useful if any future changes need to be made.

USING THE GSMSK PC SOFTWARE TO MANAGE USER INFORMATION

Because of the high volume of user information that may need to be recorded it is possible to use the **GSMSK** PC software (version 4.1.0.36 or later) to record and save the apartment information as an excel spreadsheet using the '**Export Calls to Excel**' feature. The same PC software can also be used to record and save the proximity information as an excel spreadsheet using the '**Export Prox to Excel**' feature. The software can also be used to download up to 8000 stored events from the digital GSM.

Further information on how to do this can be found in the following technical manual:

- **GSMSK_66251720-EN_V2-2** (or later).

MANAGING GSM EVENTS REMOTELY

Users can also remotely monitor events in real-time from the digital GSM intercom using Videx's latest web browser based events application. These events can then be viewed on any device such as a tablet, smartphone, laptop and PC.

Details on how to register an online profile for the events application can be found on the website: www.videxevents.co.uk

IMPORTANT NOTE: The SIM card used in the digital GSM intercom requires a data package to be included in order to send the events to the server. Setup of the system only requires a few short steps and help on this can be found once registered and logged in (also refer to the following steps).

Online Events Setup Guide

The steps below is a guide on how to setup a GSM to allow event communication between GSM module and events webpage:

1. From the '**My Modules**' page select '**Add new unit**'.
2. Send the following SMS message to the GSM hardware to obtain it's unique 15 digit **IMEI** number:
 - **1111IME?** (please note: **1111** is the default engineers code)
3. Complete the following fields:
 - **IMEI** - 15 digit number obtained from step 2.
 - **Description** - e.g. Videx Front Door.
 - **Model** - Select a GSM model from the available drop down list.
 - **Username** - Create a **username** for the GSM module - minimum 6 characters.
 - **Password** - Create a **password** for the GSM module - minimum 6 characters.
4. Press the '**Register**' button and you will be returned back to the '**My modules**' page where the GSM module will now be listed.
5. Next send the following SMS message to the GSM module replacing '**username**' and '**password**' with the credentials created in step 3:
 - **1111PAS"username";password"?**
6. Determine the SIM card network providers **APN**, **username** and **password** details. This can usually be found on the network providers website (also refer to the table of **APN** details for the most common network providers in the UK on page 64).
7. Next send the following SMS message to the GSM module replacing the **APN**, **username** and **password** with the correct network providers information:
 - **1111APN"APN";username";password"?**
 e.g. the SMS message for an O₂ payandgo would be **1111APN"payandgo.o2.co.uk";payandgo";password"?**
8. Finally to enable sending of events, send the following command to the GSM module:
 - **1111ENE001?**

Troubleshooting

SYSTEM CHECKS AND TESTING

The following table can be used to help diagnose any potential issues that may occur during installation and the system checks that can be carried out to help resolve them.

SYMPTOM	TEST
Interference on the speech.	Check the signal strength 1111SIG? (if the signal strength is too low the GSM module increases it's power to compensate, causing interference with the speech circuits). Try relocating the antenna or using a more powerful or directional antenna (e.g. high gain antenna).
	Ensure the antenna cables are not running close to the power supply cables or the microphone wires inside the intercom panel.
	Try a different SIM card from a different network service provider as they may have better coverage in that area.
Nothing is shown on the graphical display and it is not illuminated.	Check the power supply has adequate voltage as described earlier in this manual (refer to page 7).
	Try a full reset (refer to page 23)
	The digital GSM module may have a fault.
The digital GSM intercom does not respond to SMS messages.	Check the SIM card has an SMS service centre number stored. This will require putting the SIM card into a mobile phone to check. Contact the SIM card provider if you are not sure.
	Check the number you are sending the message to is correct (the number of the SIM card in the digital GSM intercom panel).
	After sending an SMS message to the digital GSM listen for a single short beep from the intercom panel. This will indicate that the message was received and understood. If a long beep is heard it indicates the message was either not understood or the 4 digit master code was incorrect.
	Try resetting the 4 digit master code to 1111 (refer to page 23).
The digital GSM intercom does not respond to SMS messages, but all other functions appear to operate ok, e.g. DTO feature, adjusting speech volumes, releasing the door/gate when button 3 pressed on the phone etc.	This issue can occur on smartphones where the SMS messaging input method is set to UNICODE. Smartphones generally have 3 input methods: GSM alphabet, Automatic and UNICODE. The UNICODE setting is typically used when emoticons/emojis are used in the message so the digital GSM will not recognise text messages that are set to this mode.
	Check that the SMS messaging input method setting on the smartphone is not set up as UNICODE and is set to either GSM alphabet or Automatic. This can usually be done via the settings icon on the smartphone. If you are unsure of how to do this Videx recommend consulting with the user's manual that came with the smartphone or consulting directly with the manufacturer of the smartphone.
The call keeps dropping out.	Increase the call time (SPT) of the digital GSM intercom (refer to the ' time settings menu ' programming flowchart on page 36 to program via the keypad and page 53 to program by SMS message).
	Check the signal strength and if necessary, move or change the antenna or try a different SIM card provider.
Speech echoes and feeds back.	Try adjusting the mic and speaker volume via the keypad selecting the ' general settings menu ' on the digital GSM intercom (refer to the programming flowchart page 33).
	Try adjusting the mic and speaker volume using the programmable settings during a call (refer to user command table 1 on page 72).
	Check the microphone is fitted correctly in the intercom panel and the mic is sat correctly in the rubber boot and the mic hole is not blocked in any way.
ERROR message returned in SMS when programming or no SMS returned at all even though a ? was included at the end of the message sent.	<p>Check over the message sent again and compare it with the examples in this manual. Common errors include:</p> <ol style="list-style-type: none"> 1. Using two apostrophe marks side by side instead of ". Note that these look the same in the message. An easy way to see if this is the problem is to move the cursor along in the message and if the cursor can get between the two " then it is not the correct character used. 2. Lower case letters instead of upper case. For example using stn when STN should be used.

Troubleshooting

Unable to open the gate/door from the telephone during a call (DTMF tones not being recognised) continued.	If the DTMF tone to release the gate/door (or other DTMF tones shown in the user command table 1 on page 72) does not work then check to see if the ED# function has been enabled: <ol style="list-style-type: none"> 1. Send the following SMS command 1111ED#? to the digital GSM and wait for a reply confirming the status of this function. 2. Note: If the 1111EDZ function (also see notes on page 58) is set to 001 (enabled) then when answering the call it will be necessary to first press 0 to accept the call before 3 can be used to operate the gate/door. Further notes on how to effectively use this function and on the setup of this function can be found on page 58.
	If the DTMF tones are not working reliably then try the following adjustments: <ol style="list-style-type: none"> 1. Send the following SMS command 1111AT1"AT#DTMFCFG=8,2500,1500"? to the digital GSM and wait for a reply. 2. After receiving the reply send the SMS command 1111RBT then wait for the digital GSM to reboot. 3. After the digital GSM intercom has rebooted test the door opening feature from the telephone during a call.
	If the first solution still does not resolve the issue then try the following: <ol style="list-style-type: none"> 1. Send the following SMS command 1111AT1"AT#DTMFCFG=7,2300,1300"? to the digital GSM and wait for a reply. 2. After receiving the reply send the SMS command 1111RBT then wait for the digital GSM to reboot. 3. After the digital GSM intercom has rebooted test the door opening feature from the telephone during a call.
	If none of the solutions above resolve the problem then please contact Videx technical on tel: 0191 224 3174 for further assistance. For overseas customers contact Videx customer support on tel: (+39) 0734 631 699 for further assistance.

Further guidance can also be found in the 'additional user information' section of this manual on pages 73 and 74 in the 'understanding the beeps' table.

General Information

FIRMWARE REVISION

DATE	FIRMWARE VERSION	REVISION
21/01/21	DG5.2.0 (alpha, 750 user), DG1.2.0 (scroll, 750 user), DG7.2.0 (alpha, 1000 user), DG3.2.0 (scroll, 1000 user)	Launch of 4G variant of Art.4812 (alpha, 750 user), Art.4812R (scroll, 750 user), Art.4812 (alpha, 1000 user) and Art.4812R (scroll, 1000 user) digital GSM intercoms.
01/07/21	DG5.2.1 (alpha, 750 user), DG1.2.1 (scroll, 750 user), DG7.2.1 (alpha, 1000 user), DG3.2.1 (scroll, 1000 user)	New command to control where the GSM module gets correct time/date updates from NTZ . Time taken from NTP server, UTC time feature TZ+ and TZ- allowing for manual setup of time zones. Also daylight savings time command DST . Also minor bug fixes.
01/10/21	DG5.2.2 (alpha, 750 user), DG1.2.2 (scroll, 750 user), DG7.2.2 (alpha, 1000 user), DG3.2.2 (scroll, 1000 user)	Firmware updates: fixed issue where 1111STRnnn""? didn't free the location for use with 1111STR"nnnn"? find . Added means to add additional VoLTE files via PC software. Added remote AT command feature via PC software. Changed free access override settings. To prevent a user resetting an output unlatch protection must also be enabled. If unlatch protection is not enabled it will be possible to unlatch the relay using dial to open, fobs, codes, SMS and during a call. When enabled it will only be possible to unlatch using the unlatch SMS and then it will only be possible to reactivate by SMS latch, all other means of activation will be ignored until the end of the free access period. i.e. works as previous firmware if unlatch protect set. Improved balance check feature and fixed issue with O₂ balance check. Improved test routines for factory testing.
07/03/22	DG5.2.3 (alpha, 750 user), DG1.2.3 (scroll, 750 user), DG7.2.3 (alpha, 1000 user), DG3.2.3 (scroll, 1000 user)	Updated and added: new events, additional "no service" recovery, support for Art.2813 remote relay inc. RLN user command. Added SMS messaging service, user code limited SMS functions for users. Send global announcement SGA feature also added. Removed NOD command (No. of days before auto call). Fixed bug with STE and STF on 750 user version. Other minor bug fixes.

FURTHER READING

Additional programming information using the **GSM SK** PC software can be found in the following technical manual:

- **GSM SK_66251720-EN_V2-2** (or later)

Additional setup information for the **Art.4850R** expansion proximity reader module, the **Art.4903** keypad module and the **Art.2813** remote relay can be found in the following installation instructions:

- **ART.4850R_66250407-EN_V1-1** (or later)
- **ART.4903_66251800-EN_V1-2** (or later)
- **ART.2813_66251545_V1-0** (or later)

Additional port forwarding, server setup and configuration information can be found in Videx application note:

- **AN0046_RemotelyProgramming4GIntercomsViaPCSoftware.**

Additional information regarding connection to mains supply voltage can be found in the following regulations (for the UK only):

- **I.E.T. Wiring Regulations, Eighteenth Edition BS7671:2018** (or later).

For overseas customers it is recommended that you consult with the relevant governing body for the appropriate regulations and standards of your country.

ENG DISPOSAL

In accordance with the Legislative Decree no. 49 of 14 March 2014 "Implementation of the Directive 2012/19/EU on waste electrical and electronic equipment (WEEE)".

The crossed-out bin symbol on the equipment or on the packaging indicates that when the product reaches the end of its lifetime, it must be collected separately from mixed municipal waste. The user must, therefore, dispose of the equipment at the end of its lifetime in the suitable waste collection centres or bring it to the retailer during the purchase of a new equipment of equivalent type at the ratio of one-to-one. Furthermore, the user is allowed to dispose of the WEEEs of very small size (domestic appliances without any external dimension exceeding 25 cm (9.84 inches) for free to the retailers, without any purchase obligation. The correct waste disposal of the WEEEs contributes to their reuse, recycling and recovery and avoids potential negative effects on the environment and human health due to the possible presence of dangerous substances within them.

**ITA SMALTIMENTO**

Ai sensi del Decreto Legislativo 14 marzo 2014, n° 49 "Attuazione della direttiva 2012/19/UE sui rifiuti di apparecchiature elettriche ed elettroniche (RAEE)".

Il simbolo del cassonetto barrato riportato sull'apparecchiatura o sulla sua confezione indica che il prodotto alla fine della propria vita utile deve essere raccolto separatamente dagli altri rifiuti urbani misti. L'utente dovrà, pertanto, conferire l'apparecchiatura giunta a fine vita presso gli idonei centri di raccolta differenziata oppure riconsegnarla al rivenditore al momento dell'acquisto di una nuova apparecchiatura di tipo equivalente, in ragione di uno a uno. L'utente ha, inoltre, la possibilità di conferire gratuitamente presso i distributori, senza alcun obbligo di acquisto, per i RAEE di piccolissime dimensioni (per le apparecchiature di tipo domestico con nessuna dimensione esterna superiore a 25 cm).

L'adeguata raccolta differenziata dei RAEE contribuisce al loro riutilizzo, riciclaggio e recupero ed evita potenziali effetti negativi sull'ambiente e sulla salute umana dovuti alla eventuale presenza di sostanze pericolose al loro interno.

FRA ÉLIMINATION

Conformément au décret législatif n° 49 du 14 mars 2014 relatif à l'« Application de la directive 2012/19 / UE relative aux déchets d'équipements électriques et électroniques (DEEE) ».

Le symbole de la poubelle barrée sur l'équipement ou sur son emballage indique que le produit en fin de vie utile doit être collecté séparément des autres déchets municipaux en mélange. L'utilisateur doit donc remettre l'équipement en fin de vie aux centres de collecte appropriés ou le restituer au revendeur lors de l'achat d'un nouveau type d'équipement équivalent, dans le rapport de un à un. De plus, l'utilisateur a la possibilité de conférer gratuitement aux distributeurs, sans aucune obligation d'achat, de très petits DEEE (pour les appareils ménagers sans dimensions extérieures supérieures à 25 cm). La collecte séparée adéquate des DEEE contribue à leur réutilisation, leur recyclage et leur valorisation et évite les éventuels effets négatifs sur l'environnement et la santé humaine en raison de la présence possible de substances dangereuses dans ceux-ci.

SPA ELIMINACIÓN

De conformidad con el Decreto legislativo n. 49 de 14 de marzo 2014 "Aplicación de la Directiva 2012/19/UE relativa a residuos de aparatos eléctricos y electrónicos (RAEE)".

El símbolo del contenedor tachado indicado sobre los aparatos o sobre los embalajes señala que el producto al final de su vida útil debe ser recogido separadamente de otros residuos municipales mezclados. Por tanto, el usuario deberá conferir los aparatos al final de su vida útil en los apropiados centros de recogida selectiva o devolverlos al revendedor al momento de la compra de nuevos aparatos equivalentes, en una relación de uno a uno. Además, el usuario tiene la posibilidad de entregar sin cargo a los distribuidores, sin ninguna obligación de compra, los RAEEs muy pequeños (para electrodomésticos sin dimensiones externas superiores a 25 cm).

La recogida selectiva apropiada de los RAEEs contribuye a su reutilización, reciclaje y valorización y evita potenciales impactos negativos sobre el medio ambiente y la salud humana debidos a la posible presencia de sustancias peligrosas dentro de ellos.

NLD VERWIJDERING

In overeenstemming met het Wetsbesluit nr. 49 van 14 maart 2015 "Implementatie van de Richtlijn 2012/19/EU inzake afgedankte elektrische en elektronische apparaten (AEEA)".

Het doorgeslechte vuilnisbaksymbool op het apparaat of de verpakking geeft aan dat het product aan het einde van zijn levensduur niet samen met het gewone huisvuil weggegooid mag worden. De gebruiker moet het apparaat aan het einde van zijn levensduur inleveren bij een gepast inzameelpunt of de winkel waar hij een nieuw apparaat van een gelijksoortig type zal kopen. De gebruiker kan tevens AEEA's van een zeer klein formaat (huishoudapparaten met een buitenafmeting kleiner dan 25 cm (9,84 inch) gratis en zonder enige aankoopverplichting bij handelaars inleveren. Een juiste verwijdering van AEEA's draagt bij tot hergebruik, recycling en terugwinning, en voorkomt potentiële negatieve effecten op het milieu en de menselijke gezondheid door de mogelijke aanwezigheid van gevaarlijke stoffen.

POR ELIMINAÇÃO

De acordo com o Decreto Legislativo n.º 49 de 14 de março de 2014 "Implementação da Diretiva 2012/19/UE relativa aos resíduos de equipamentos elétricos e eletrônicos (REEE)".

O símbolo do caixote do lixo riscado no equipamento ou na embalagem indica que quando o produto atinge o fim da sua vida útil, deve ser recolhido separadamente dos resíduos urbanos mistos. O utilizador deve, portanto, eliminar o equipamento no final da sua vida útil nos centros de recolha de resíduos adequados ou levá-lo ao vendedor durante a compra de um novo equipamento de tipo equivalente, na proporção de um para um. Além disso, o utilizador pode eliminar gratuitamente os REEE de dimensões muito reduzidas aos vendedores, sem qualquer obrigação de compra. (só aparelhos domésticos sem qualquer dimensão externa que exceda 25 cm, ou seja 9,84 polegadas). A correta eliminação dos REEE contribui para a sua reutilização, reciclagem e recuperação e evita potenciais efeitos negativos sobre o ambiente e a saúde humana devido à possível presença de substâncias perigosas no seu interior.

MANUFACTURER FABBRICANTE FABRICANT FABRICANTE FABRIKANT FABRICANTE الشركة المصنعة	VIDEX ELECTRONICS S.P.A. Via del Lavoro, 1 63846 Monte Giberto (FM) Italy Tel (+39) 0734 631669 Fax (+39) 0734 632475 www.videx.it - info@videx.it	
CUSTOMER SUPPORT SUPPORTO CLIENTI SUPPORTS CLIENTS ATENCIÓN AL CLIENTE KLANTENDIENST APOIO AO CLIENTE خدمة العملاء	VIDEX ELECTRONICS S.P.A. www.videx.it - technical@videx.it Tel: +39 0734-631669 Fax: +39 0734-632475	UK Customers only: VIDEX SECURITY LTD www.videxuk.com Tech Line: 0191 224 3174 Fax: 0191 224 1559
	Main UK office: VIDEX SECURITY LTD 1 Osprey Trinity Park Trinity Way LONDON E4 8TD Phone: (+44) 0370 300 1240 Fax: (+44) 020 8523 5825 www.videxuk.com marketing@videxuk.com	Northern UK office: VIDEX SECURITY LTD Unit 4-7 Chillingham Industrial Estate Chapman Street NEWCASTLE UPON TYNE - NE6 2XX Tech Line: (+44) 0191 224 3174 Phone: (+44) 0370 300 1240 Fax: (+44) 0191 224 1559
	Greece office: VIDEX HELLAS Electronics 48 Filolaou Str. 11633 ATHENS Phone: (+30) 210 7521028 (+30) 210 7521998 Fax: (+30) 210 7560712 www.videx.gr videx@videx.gr	Danish office: VIDEX DANMARK Hammershusgade 15 DK-2100 COPENHAGEN Phone: (+45) 39 29 80 00 Fax: (+45) 39 27 77 75 www.videx.dk videx@videx.dk
	Benelux office: NESTOR COMPANY NV E3 laan, 93 B-9800 Deinze Phone: (+32) 9 380 40 20 Fax: (+32) 9 380 40 25 www.videx.be info@videx.be	Dutch office: NESTOR COMPANY BV Business Center Twente (BCT) Grotestraat, 64 NL-7622 GM Borne www.videxintercom.nl info@videxintercom.nl



The product is CE marked demonstrating its conformity and is for distribution within all member states of the EU with no restrictions. This product follows the provisions of the European Directives 2014/30/EU (EMC); 2014/35/EU (LVD); 2011/65/EU (RoHS); CE marking 93/68/EEC.

Le produit est marqué CE à preuve de sa conformité et peut être distribué librement à l'intérieur des pays membres de l'union européenne UE.
 Ce produit est conforme aux directives européennes 2014/30/EU (EMC) ; 2014/35/EU (LVD) ; 2011/65/EU (RoHS): marquage CE 93/68/EEC.

Het product heeft de CE-markering om de conformiteit ervan aan te tonen en is bestemd voor distributie binnen de lidstaten van de EU zonder beperkingen. Dit product volgt de bepalingen van de Europese Richtlijnen 2014/30/EU (EMC); 2014/35/EU (LVD); 2011/65/EU (RoHS): CE-markering 93/68/EEG.

يحمل المنتج علامة التوافق الأوروبي CE لإظهار توافقه مع المواصفات ذات الصلة وإمكانية توزيعه في كافة دول الاتحاد الأوروبي بدون أية قيود. يلبي هذا المنتج جميع متطلبات التوجيهات الأوروبية 2014/30/ت.ع (EMC) ; 2014/35/ت.ع (LVD) ; 2011/65/ت.ع (RoHS) : علامة المطابقة للمواصفات الأوروبية CE 93/68/ت.ع.

Il prodotto è marchiato CE a dimostrazione della sua conformità e può essere distribuito liberamente all'interno dei paesi membri dell'Unione Europea UE.
 Questo prodotto è conforme alle direttive Europee: 2014/30/UE (EMC); 2014/35/UE (LVD); 2011/65/UE (RoHS): marcatura CE 93/68/EEC.

El producto lleva la marca CE que demuestra su conformidad y puede ser distribuido en todos los estados miembros de la unión europea UE.
 Este producto cumple con las Directivas Europeas 2014/30/UE (EMC); 2014/35/UE (LVD); 2011/65/UE (RoHS): marca CE 93/68/EEC.

O produto tem a marca CE que demonstra a sua conformidade e destina-se a distribuição em todos os estados membros da UE, sem restrições. Este produto segue as disposições das Diretivas Europeias 2014/30/UE (EMC); 2014/35/UE (LVD); 2011/65/UE (RoHS): marcação CE 93/68/CEE.

